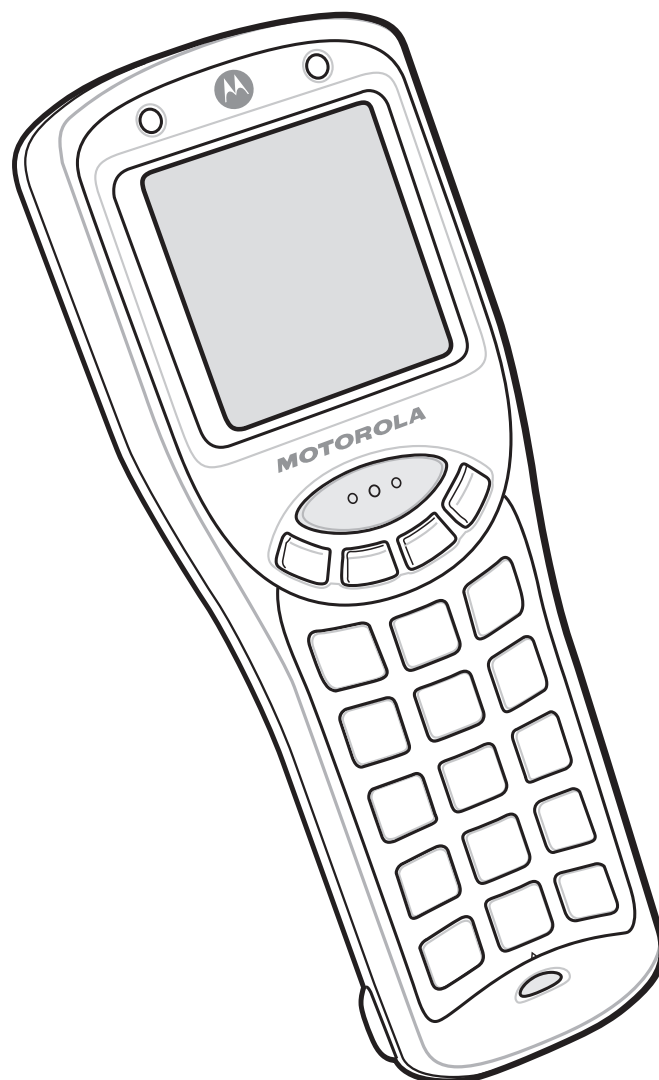




# MC1000 with Windows CE 5.0

## User Guide





**MC1000 with Windows® CE 5.0**

**User Guide**

72E-87780-02

Revision A

August 2007

© 2007 by Motorola, Inc. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Motorola. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Motorola grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Motorola. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Motorola. The user agrees to maintain Motorola's copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.

Motorola reserves the right to make changes to any software or product to improve reliability, function, or design.

Motorola does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Motorola, Inc., intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Motorola products.

MOTOROLA and the Stylized M Logo and Symbol and the Symbol logo are registered in the US Patent & Trademark Office. Bluetooth is a registered trademark of Bluetooth SIG. Microsoft, Windows and ActiveSync are either registered trademarks or trademarks of Microsoft Corporation. All other product or service names are the property of their respective owners.

Motorola, Inc.  
One Motorola Plaza  
Holtsville, New York 11742-1300  
<http://www.symbol.com>

---

## Patents

This product is covered by one or more of the patents listed on the website: [www.symbol.com/patents](http://www.symbol.com/patents)

---

## Revision History

Changes to the original manual are listed below:

Change	Date	Description
-01 Rev A	10/26/06	Initial Release.
-02 Rev A	8/8/07	Motorola re-branding.



# Table of Contents

Patents.....	ii
Revision History.....	iii

## About This Guide

Introduction.....	ix
Documentation Set .....	ix
Configurations.....	x
Software Versions.....	x
Chapter Descriptions .....	xi
Notational Conventions.....	xi
Related Documents and Software .....	xii
Service Information.....	xiii

## Chapter 1: Getting Started

Introduction .....	1-1
Unpacking the Mobile Computer .....	1-1
Accessories .....	1-2
Parts .....	1-3
Getting Started .....	1-3
Main Battery Installation .....	1-3
Li-ion Battery Installation .....	1-4
AAA Battery Installation .....	1-5
Battery Charging .....	1-5
Starting the Mobile Computer .....	1-7
Waking the Mobile Computer .....	1-7
Li-ion Battery Removal .....	1-7
AAA Batteries Removal .....	1-8
Spare Battery Charging .....	1-8
SD/SDIO Card .....	1-9
Wrist Strap .....	1-11
Handstrap .....	1-12

**Chapter 2: Operating the MC1000**

Introduction .....	2-1
Power Button .....	2-1
Keypad .....	2-1
Using the Keypad to Navigate Applications .....	2-3
Adjusting the Beeper Volume .....	2-6
Adjusting the Screen Contrast .....	2-6
Screen .....	2-7
Taskbar .....	2-7
Start Button .....	2-8
Entering Information .....	2-9
Entering Information Using the Keypad .....	2-9
Entering Data via the Bar Code Scanner .....	2-9
Scanning Considerations .....	2-11
Laser Decode Ranges .....	2-11
Resetting the Mobile Computer .....	2-13
Performing a Warm Boot .....	2-13
Performing a Cold Boot .....	2-13
Waking the Mobile Computer .....	2-14
File System Directory Structure .....	2-14

**Chapter 3: Accessories**

Introduction .....	3-1
Cradles .....	3-1
Cables .....	3-1
Single Slot Serial/USB Cradle .....	3-2
Battery Charging .....	3-3
Four Slot USB Cradle .....	3-4
Battery Charging .....	3-5
Four Slot Ethernet Cradle .....	3-6
Battery Charging .....	3-7
LED Charge Indications .....	3-7
Speed LED .....	3-7
Link LED .....	3-7
Cables .....	3-8
Cable Connection .....	3-8
Battery Charging .....	3-9

**Chapter 4: Maintenance and Troubleshooting**

Introduction .....	4-1
Maintaining the Mobile Computer .....	4-1
Troubleshooting .....	4-2
Mobile Computer .....	4-2
Single Slot Serial/USB Cradle .....	4-4
Four Slot USB Cradle .....	4-5
Cables .....	4-6
Mobile Computer Technical Specifications .....	A-1



**Glossary**

**Index**





# About This Guide

---

## Introduction

This guide provides information about using the MC1000 mobile computer and accessories.

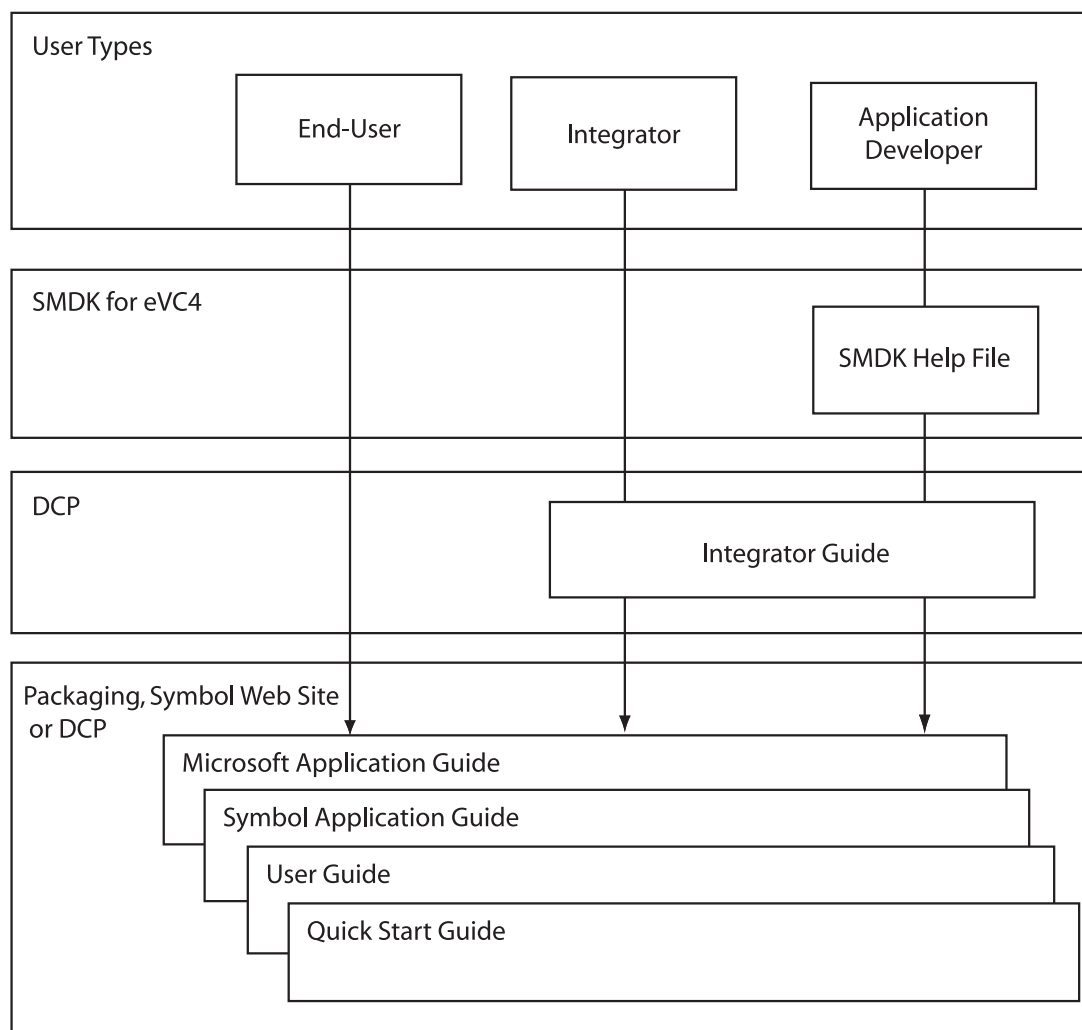


**NOTE** Screens and windows pictured in this guide are samples and can differ from actual screens.

## Documentation Set

The documentation set for the MC1000 is divided into guides that provide information for specific user needs.

- **Microsoft® Application Guide** - describes how to use Microsoft developed applications.
- **Symbol Application Guide** - describes how to use Symbol developed applications.
- **MC1000 User Guide** - describes how to use the MC1000 mobile computer.
- **MC1000 Integrator Guide** - describes how to set up the MC1000 mobile computer and it's accessories.
- **SMDK Help File** - provides API information for writing applications.



## Configurations

This guide covers the following configurations:

Configuration	Radios	Display	Memory	Data Capture	Operating System	Keypads
MC1000	None	Monochrome, 240 x 240 pixel, 2.2" diagonal, non-touch	32 MB RAM/ 32 MB Flash	1D laser scanner	Windows CE 5.0 Core	21 key

## Software Versions

This guide covers various software configurations and references are made to operating system.

To determine the OEM software version:

Tap **Start > Settings > Control Panel > System Information icon > System** tab.



---

## Chapter Descriptions

Topics covered in this guide are as follows:

- [Chapter 1, Getting Started](#), provides information on getting the mobile computer up and running for the first time.
- [Chapter 2, Operating the MC1000](#), explains how to use the mobile computer. This includes instructions for powering on and resetting the mobile computer, entering and capturing data.
- [Chapter 3, Accessories](#), describes the accessories available for the mobile computer and how to use the accessories with the mobile computer.
- [Chapter 4, Maintenance and Troubleshooting](#), includes instructions on cleaning and storing the mobile computer, and provides troubleshooting solutions for potential problems during mobile computer operation.
- [Appendix A, Specifications](#), includes a table listing the technical specifications for the mobile computer.

---

## Notational Conventions

The following conventions are used in this document:

- “Mobile computer” refers to the MC1000 mobile computer.
- *Italics* are used to highlight the following:
  - Chapters and sections in this and related documents
  - Dialog box, window and screen names
  - Drop-down list and list box names
  - Check box and radio button names
  - Icons on a screen.
- **Bold** text is used to highlight the following:
  - Key names on a keypad
  - Button names on a screen.
- Bullets (•) indicate:
  - Action items
  - Lists of alternatives
  - Lists of required steps that are not necessarily sequential.

- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

---

## Related Documents and Software

The following documents provide more information about the MC1000 mobile computers.

- *MC1000 Quick Start Guide (poster)*, p/n 72-69838-xx
- *MC1000 Licensing, Patent and Regulatory Information*, p/n 72-69839-xx
- *MC1000 with Windows CE 5.0 Integrator Guide*, p/n 72E-69841-xx
- *Symbol Applications Guide* for Symbol Devices, p/n 72-68901-xx
- *Microsoft Applications Guide* for Symbol Devices, p/n 72-68197-xx
- *Microsoft® Applications for Mobile and CE 5.0 User Guide*, p/n 72E-78456-xx
- *Symbol Mobility Developer Kit (SMDK) Help File*, p/n 72E-38880-03
- *Symbol Mobility Developer Kits*, available at: <http://www.symbol.com/support>
- Device Configuration Package for MC1000 (DCP for MC1000), available at: <http://www.symbol.com/support>
- ActiveSync software, available at: <http://www.microsoft.com>.

For the latest version of this guide and all guides, go to: <http://www.symbol.com/manuals>.

---

## Service Information

If you have a problem with your equipment, contact Motorola Enterprise Mobility support for your region. Contact information is available at: <http://www.symbol.com/contactsupport>.

When contacting Enterprise Mobility support, please have the following information available:

- Serial number of the unit
- Model number or product name
- Software type and version number

Motorola responds to calls by E-mail, telephone or fax within the time limits set forth in support agreements.

If your problem cannot be solved by Motorola Enterprise Mobility Support, you may need to return your equipment for servicing and will be given specific directions. Motorola is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty.

If you purchased your Enterprise Mobility business product from a Motorola business partner, contact that business partner for support.







# Chapter 1 Getting Started

---

## Introduction

This chapter describes the mobile computer's physical characteristics, how to install and charge the batteries, remove and replace the handstrap, and start the mobile computer for the first time.

---

## Unpacking the Mobile Computer

Carefully remove all protective material from around the mobile computer and save the shipping container for later storage and shipping. Verify that the equipment listed below is included:

- MC1000 mobile computer
- Wrist strap
- Regulatory Guide
- Quick Start Guide.

Inspect the equipment for damage. If any equipment is missing or damaged, contact the Motorola Enterprise Mobility Support Center immediately. See [page xiii](#) for contact information.


## Accessories

*Table 1-1* lists the accessories available for the MC1000:

**Table 1-1** MC1000 Accessories

Accessory	Description
Single Slot Serial/USB Cradle	Charges the mobile computer main battery and a spare battery, and synchronizes the mobile computer with a host computer through a serial or USB connection.
Four Slot USB Cradle	Charges up to four mobile computers and synchronizes the mobile computers with a host computer through a USB connection.
Power Supply	Country-specific and accessory specific power supply and line cord, plugs into the pigtail connector.
USB Client Charge Cable	Provides USB client communication capabilities and charges the mobile computer.
RS232 Charge Cable	Provides RS232 communication capabilities and charges the mobile computer.
Single Slot Cradle RS232 Cable	Provides serial host communication capabilities.
Single Slot Cradle USB Cable	Provides USB connection to a host computer.
Four Slot Cradle USB Cable	Provides internal USB hub for connection to host computer.
Handstrap	Provides additional support when holding the mobile computer.
Li-ion Rechargeable Battery	Spare 1800 mAh battery.
Modem Module	Connects to the Single Slot Serial/USB cradle to allow the cradle to be used as a modem cradle.
Modem Cable	Connects the Modem Module to the Single Slot Serial/USB cradle.
Symbol Mobility Developer Kits	A development tool used to create native C and C++ applications for all Symbol mobile computers running the Microsoft Windows CE operating system. Available at: <a href="http://www.symbol.com/support">http://www.symbol.com/support</a> .
Platform SDK	Used in conjunction with the SMDKs to create Windows CE applications for the MC1000 mobile computer. Available at: <a href="http://www.symbol.com/support">http://www.symbol.com/support</a> .
Device Configuration Package (DCP) for MC1000	A development tool used to create and download hex images that represent flash partitions to the mobile computer. Available at: <a href="http://www.symbol.com/support">http://www.symbol.com/support</a> .

## Parts

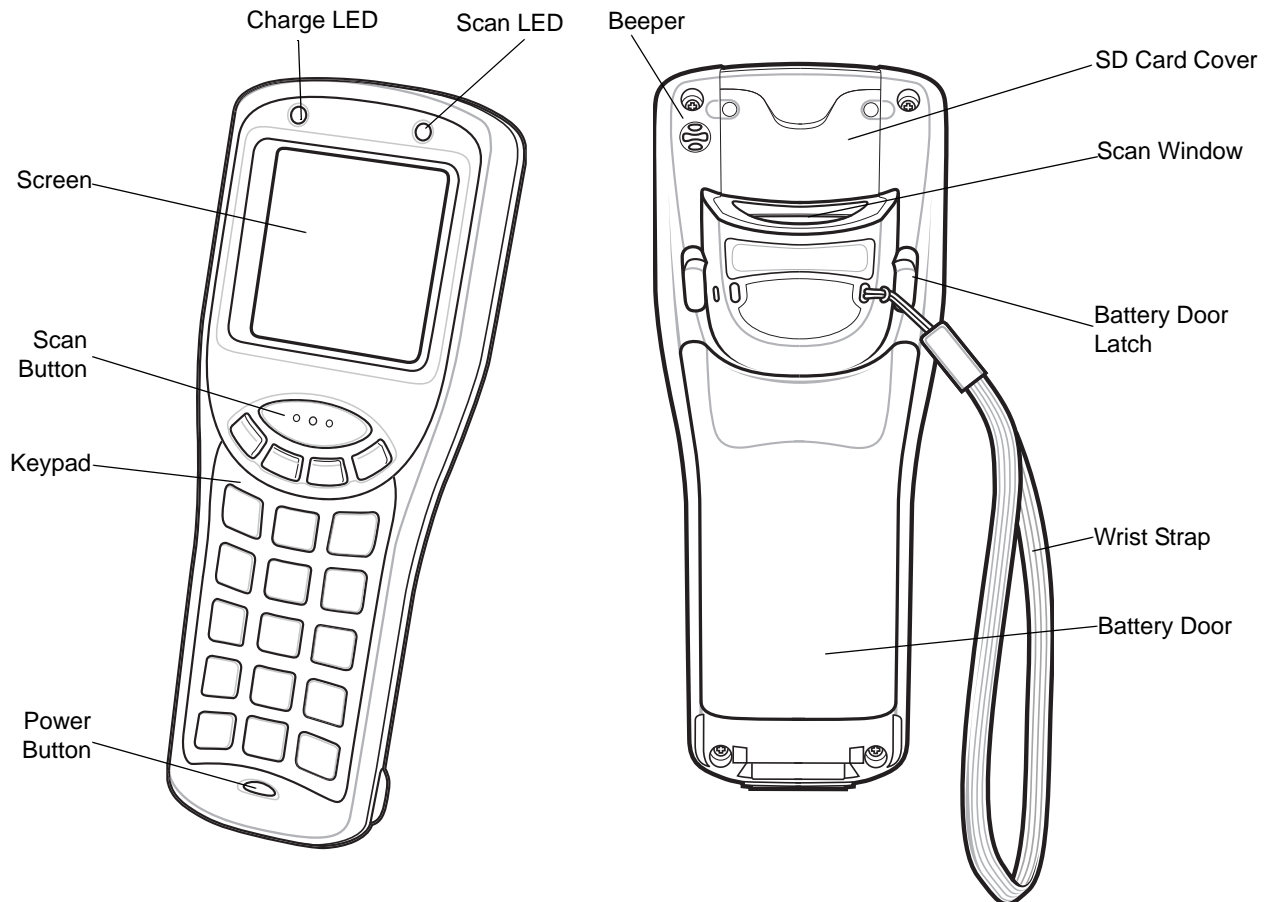

**Figure 1-1** MC1000 Mobile Computer

## Getting Started

To get the MC1000 up and running:

- install the rechargeable Li-ion battery or the AAA batteries
- charge the battery (rechargeable battery only)
- start the mobile computer.


### Main Battery Installation

The MC1000 uses either a rechargeable 1800 mAh Li-ion battery or three standard alkaline AAA batteries. Charge the Li-ion battery before using the mobile computer. If the Li-ion battery is not charged, see *Battery Charging* on page 1-5.

## Li-ion Battery Installation

To install the Li-ion battery:

1. Pull back the two battery door latches.
2. Lift the battery door.

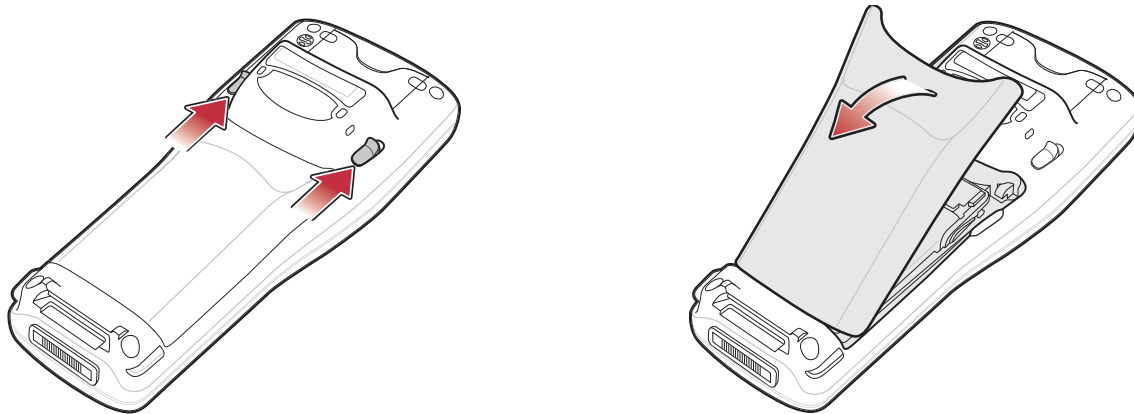


**Figure 1-2** *Battery Door Removal*



**CAUTION** Ensure the battery adapter clip is positioned correctly or damage to the battery adapter clip and battery door may occur.

Avoid touching the contacts when positioning the battery adapter clip.

3. With your index and middle fingers holding the sides of the battery adapter clip, push toward the top of the mobile computer until it is latched in the up position.
4. Insert the battery into the battery well top first.

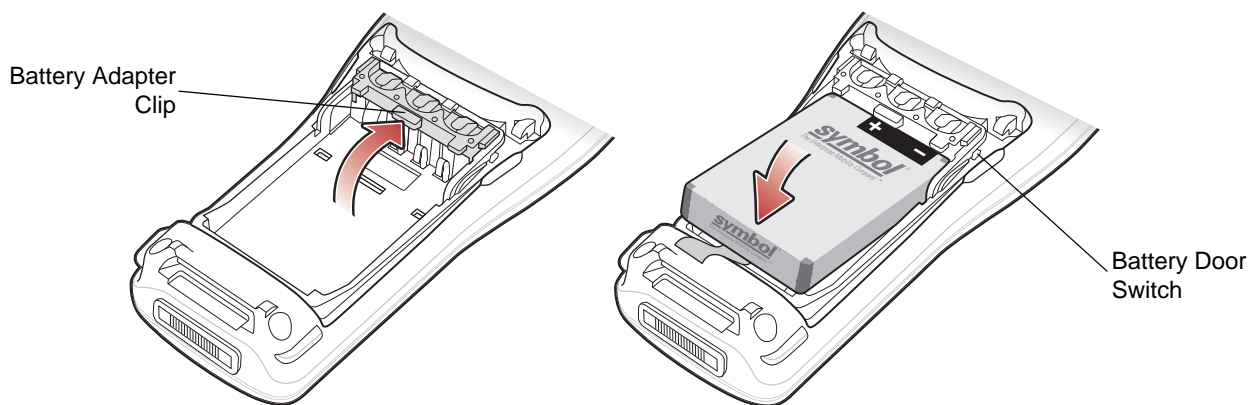

**Figure 1-3** *Li-ion Battery Insertion*




**NOTE** The battery door switch detects if the battery door is installed properly. The mobile computer does not turn on if the battery door is not in place.

5. Replace the battery door bottom first and press down until it snaps into place.

## AAA Battery Installation

To install the AAA batteries:

1. Pull back the two battery door latches.
2. Lift the battery cover.
3. With your index and middle fingers holding the sides of the battery adapter clip, push toward the bottom of the mobile computer until it is latched in the down position.
4. Insert the three AAA batteries into the battery well, noting the positions of the batteries.

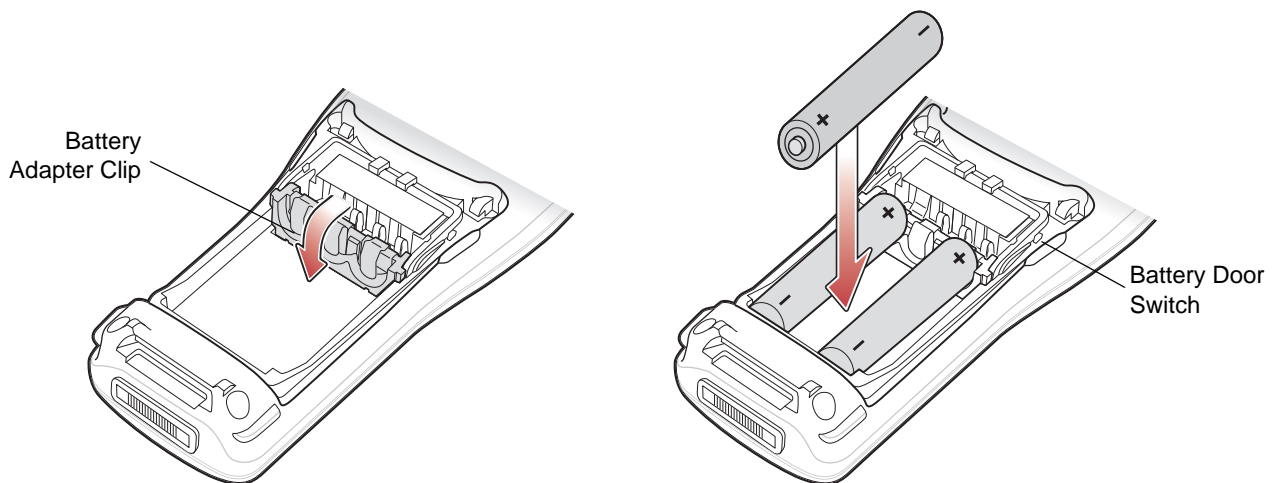

**Figure 1-4** AAA Battery Installation



**NOTE** The battery door switch detects if the battery door is installed properly. The mobile computer does not turn on if the battery door is not in place.

5. Replace the battery door bottom first and press down until it snaps into place.

---

## Battery Charging



**NOTE** Rechargeable AAA batteries cannot be recharged in the mobile computer. Refer to the rechargeable AAA battery product information for charging instructions.

Use the mobile computer's cradles, charge cables, and spare battery chargers to charge the mobile computer's main Li-ion battery.

Before using the mobile computer for the first time, fully charge the main Li-ion battery until the Charge LED remains lit (see [Table 1-2 on page 1-6](#)). The main battery fully charges in less than four hours. Charge the mobile computer using a cradle or charge cable, or remove and charge the main Li-ion battery using a spare battery charger.

The mobile computer is equipped with a memory backup battery which automatically charges from the main battery whether or not the mobile computer is operating or in suspend mode. The memory backup battery retains data in memory for at least 30 minutes when the mobile computer's main battery is removed or fully discharged. When the mobile computer is used for the first time or after the memory backup battery has fully discharged, the

memory backup battery requires approximately 20 hours to fully charge. Do not remove the main battery from the mobile computer for 15 hours to ensure that the memory backup battery fully charges. If the main battery is removed from the mobile computer or the main battery is fully discharged, the memory backup battery completely discharges in several hours.

When the main battery reaches a very low state, the combination of main battery and backup battery retains data in memory for at least 72 hours.

✓ **NOTE** Do not remove the main battery within the first 15 hours of use. If the main battery is removed before the backup battery is fully charged, data may be lost.

Use the following accessories to charge the Li-ion battery:

- Cradles:
  - Single Slot Serial/USB cradle
  - Four Slot USB cradle.
- Cables (and a power supply):
  - USB Client Charge cable
  - RS232 Charge cable.
- Spare Battery Charger:
  - Single Slot Serial/USB cradle.

To charge the mobile computer Li-ion and backup batteries, use a cradle or a charge cable. The charge cable requires a Symbol approved power supply.

- Cradles
 

Insert the mobile computer into a cradle. See [Chapter 3, Accessories](#) for accessory setup. The mobile computer starts to charge automatically. The Charge LED lights to indicate the charge status. See [Table 1-2](#) for charging indications.
- Cables
 

Connect a charge cable to the appropriate power source and connect the other end of the charge cable to the mobile computer. See [Chapter 3, Accessories](#) for accessory setup. The mobile computer starts to charge automatically. The Charge LED lights to indicate the charge status. See [Table 1-2](#) for charging indications.

**Table 1-2** Mobile Computer Charging LED Indicator

Status	Indication
Off	Mobile computer is not placed correctly in the cradle; charge cable is not connected correctly; charger is not powered.
Slow Blinking Amber	Mobile computer is charging.
Solid Amber	Charging is complete. Note: When the Li-ion battery is initially inserted in the mobile computer, the Charge LED flashes once if the battery power is low or the battery is not fully inserted.

---

## Starting the Mobile Computer

When the mobile computer is powered on for the first time, it initializes. The splash screen appears for a short period of time. If the mobile computer does not power on, see [Resetting the Mobile Computer on page 2-13](#).

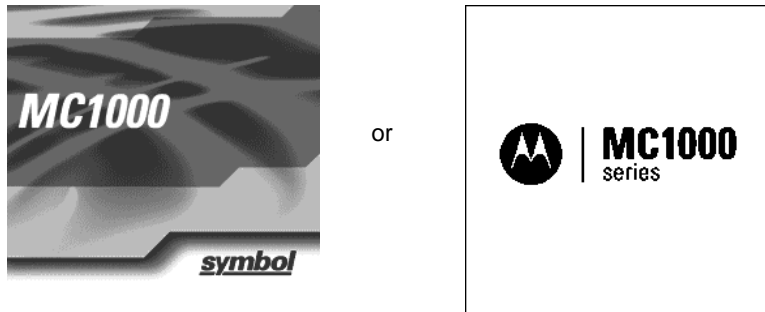


Figure 1-5 Splash Screen

---

## Waking the Mobile Computer

Use the wakeup condition settings to define what actions wake up the mobile computer. The settings are subject to change/update. See [Waking the Mobile Computer on page 2-14](#).


---

## Li-ion Battery Removal

To remove the Li-ion battery:

✓ **NOTE** Pulling back the left battery door latch places the mobile computer in suspend mode.

1. Press the red **Power** button to turn off the screen and place the mobile computer in suspend mode.
2. Pull back the two battery door latches.
3. Lift the battery door.
4. Pull the battery tab up to remove the battery.

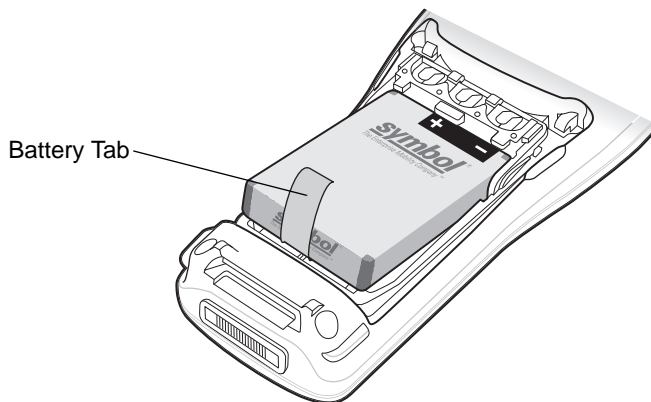

**Figure 1-6** *Li-ion Battery Removal*


---

## AAA Batteries Removal

To remove the AAA batteries:

✓ **NOTE** Pulling back the left battery door latch places the mobile computer in suspend mode.

1. Press the red **Power** button to turn off the screen and place the mobile computer in suspend mode.
2. Pull back the two battery door latches.
3. Lift the battery door.
4. Remove the three AAA batteries from the mobile computer.

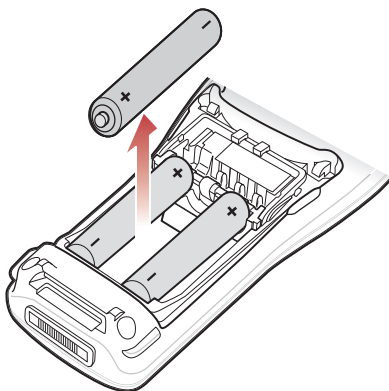

**Figure 1-7** *AAA Battery Removal*

---

## Spare Battery Charging

Use one of two accessories to charge spare Li-ion batteries. See to [Chapter 3, Accessories](#) for more information on spare battery charging.




---

## SD/SDIO Card

To install an SD memory card or an SDIO card:


- ✓ **NOTE** Motorola neither sells nor supports 3<sup>rd</sup> party SDIO products integrated into the MC1000. Motorola is not responsible for the 3<sup>rd</sup> party SDIO card in-country regulatory certification. Customers must contact directly with the selected 3<sup>rd</sup> party SDIO card vendors to ensure the vendor has obtained all the required regulatory certifications for the targeted countries.

1. Press the red **Power** button to turn off the screen and place the mobile computer in suspend mode.
2. Loosen the two captive screws securing the SD card cover.

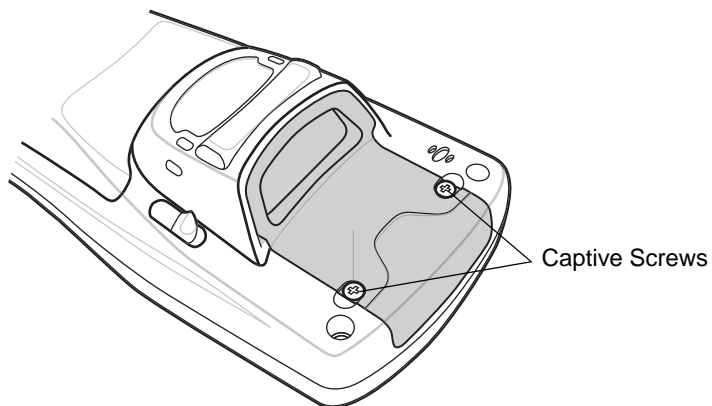


**Figure 1-8** SD Card Cover Screw Removal

3. Remove the SD card cover.

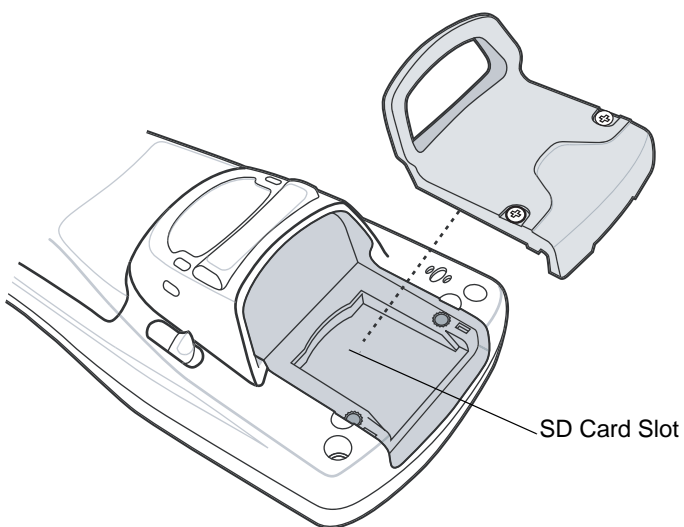

**Figure 1-9** SD Card Cover Removal

4. Insert the SD card into the SD card slot. Note the position of the notch on SD card.

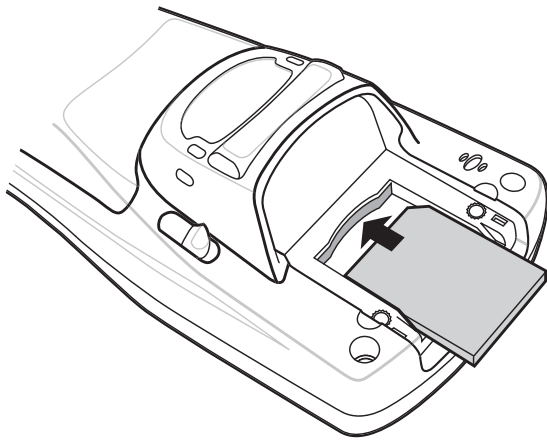


**Figure 1-10** *SD Card Installation*

5. Replace the SD card cover.
6. Secure the two captive screws.

When installing an extended Secure Digital (SD) Card, you must remove a pad on the back of the SD Card cover.

1. Remove two screws securing the SD Card cover.

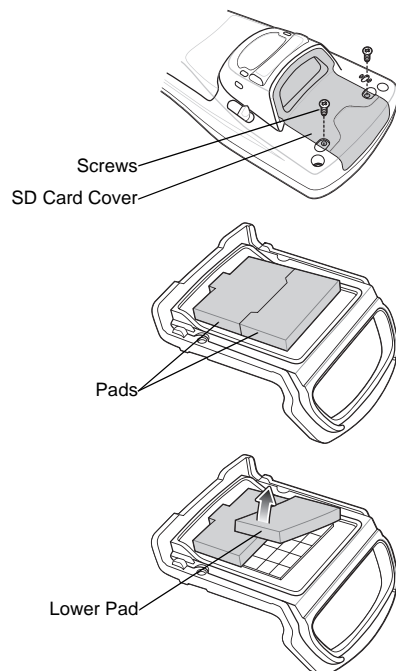

**Figure 1-11** *Extended SD Card Installation*

2. Lift the SD Card cover off the mobile computer.
3. Peel the lower pad off the back of the cover.
4. Install the SD Card into the mobile computer.
5. Replace the SD Card cover onto the mobile computer and secure using the two screws.


If the SD Card cover does not have a split pad on the back of the cover, contact Motorola Enterprise Mobility Support. See *Service Information on page xiii* for contact information.

---

## Wrist Strap


The wrist strap can be installed on either the right or left tether point. To install the wrist strap:

1. Thread the wrist strap loop through the tether point.

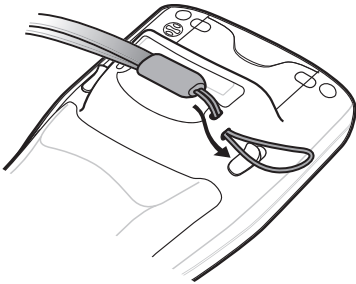

**Figure 1-12** *Insert Loop into Tether Point*

2. Slip the end of the wrist strap through the loop and pull taught.

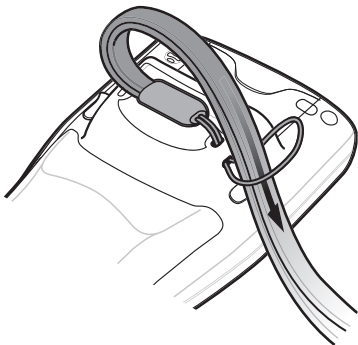


**Figure 1-13** *Slip Wrist Strap Through Loop*

---

## Handstrap


Install the optional handstrap on either the right or left tether point. To install the handstrap:

1. Insert the handstrap clip into the slot at the bottom of the mobile computer.

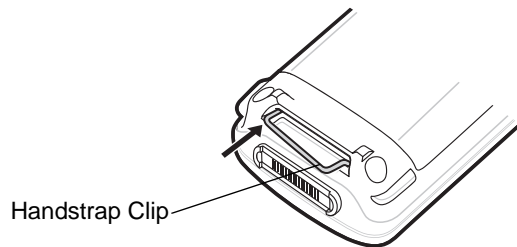


**Figure 1-14** *Insert Handstrap Clip*

2. Press the mobile computer down to force the handstrap clip into place.

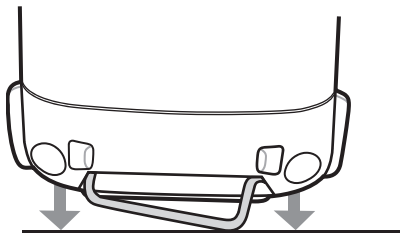


**Figure 1-15** *Press Mobile Computer Down*

3. Thread the handstrap loop through the tether point.

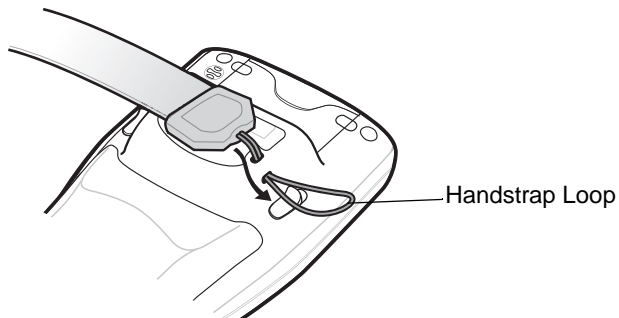


**Figure 1-16** *Insert Loop into Tether Point*

4. Slip the Velcro end of the handstrap through the loop and pull taught.

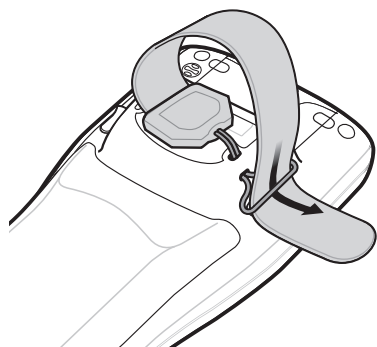

**Figure 1-17** *Slip End Through Loop*

5. Slide the Velcro end through the clip.

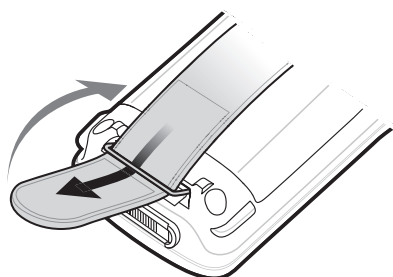

**Figure 1-18** *Slide Handstrap through Clip*





# Chapter 2 Operating the MC1000

---

## Introduction

This chapter provides basic instructions for using and navigating the mobile computer.

---

## Power Button

Press the red **Power** button to toggle the mobile computer between suspend and resume states. The display is off in suspend state and it is on in resume state.

---

## Keypad

The keypad contains a **Power** button, application keys, scroll keys, and function keys. The keypad is color-coded to indicate the alternate function keys (blue and orange). Note that an application can change the keypad functions so the mobile computer's keypad may not function exactly as described. See [Table 2-1 on page 2-2](#) for key and button descriptions.












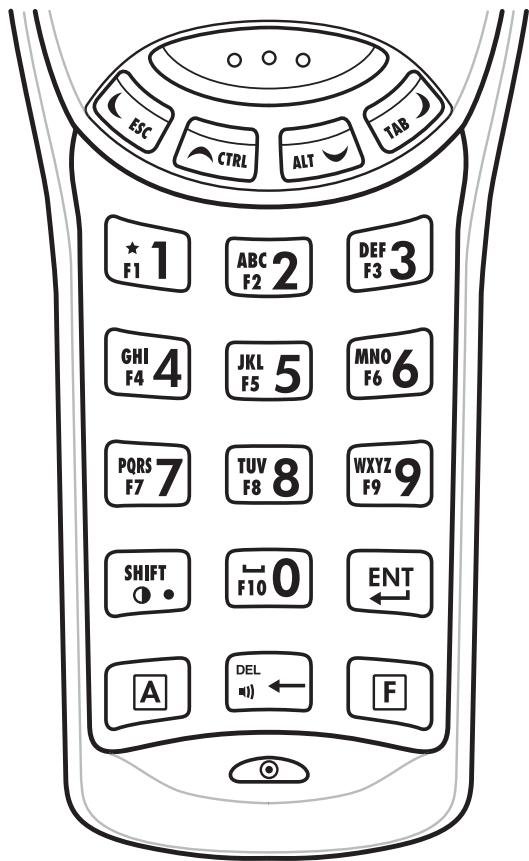

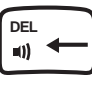


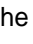
Figure 2-1 MC1000 Keypad

Table 2-1 Keypad Descriptions

Key	Description
Power Button (red) 	Toggles the mobile computer in and out of suspend mode. Toggles the screen on and off.
Scan (yellow) 	Activates the laser scanner. Used in scanning applications.
CTRL 	Moves up from one item to another. Scrolls a window up. Functions as a <b>CTRL</b> key when used with the blue <b>F</b> key. The ^ icon appears on the taskbar. See <a href="#">Table 2-3 on page 2-8</a> for more information.
ALT 	Moves down from one item to another. Scrolls a window down. Functions as an <b>ALT</b> key when used with the blue <b>F</b> key. The AL icon appears on the taskbar. See <a href="#">Table 2-3 on page 2-8</a> for more information.



**Table 2-1** Keypad Descriptions (Continued)

Key	Description
<b>ESC</b> 	Moves left from one item to another. Scrolls a window left. Functions as an <b>ESC</b> key when used with the blue <b>F</b> key.
<b>TAB</b> 	Moves right from one item to another. Scrolls a window right. Functions as a <b>TAB</b> key when used with the blue <b>F</b> key.
<b>A (orange)</b> 	Locks the keypad in the alpha mode. Press the orange <b>A</b> key to access the alternate alphabetic characters (shown on the keys in orange). The  icon appears on the taskbar. See <a href="#">Table 2-3 on page 2-8</a> for more information. Press and release the <b>A</b> key again to return to the numeric keypad functions.
<b>F (blue)</b> 	Press and release the blue <b>F</b> key to activate the keypad alternate functions (shown on the key in blue).
Numeric/Alpha/Function 	Numeric mode by default, alpha when the orange <b>A</b> key is selected, or a function when the blue <b>F</b> key is selected. In alpha mode, produces the lower case alphabetic characters listed on the key. Each key press produces the next alphabetic character in sequence. For example, press the orange <b>A</b> key and then press the <b>4</b> key once to produce the letter 'g'; quickly press the <b>4</b> key three times to produce the letter 'i'. Press the <b>SHIFT</b> key in alpha mode to produce the upper case alphabetic characters on the key. For example, press the orange <b>A</b> key, press the <b>SHIFT</b> key and then press the <b>4</b> key once to produce the letter 'G'; press the <b>SHIFT</b> key and then quickly press the <b>4</b> key three times to produce the letter 'I'.
<b>DEL</b> 	Backspace key by default and <b>DEL</b> key with the orange <b>A</b> key activated. Increases or decreases the speaker volume when used with the blue <b>F</b> key. See <i>Adjusting the Beeper Volume on page 2-6</i> for more information.
<b>ENT</b> 	Executes a selected item or function.
<b>SHIFT</b> 	Press the orange <b>A</b> key and then press and release the <b>SHIFT</b> key to activate the keypad alternate <b>SHIFT</b> function. The  icon appears on the taskbar. See <a href="#">Table 2-3 on page 2-8</a> for more information. Adjusts the screen contrast when used with the blue <b>F</b> key. See <i>Adjusting the Screen Contrast on page 2-6</i> for more information.

## Using the Keypad to Navigate Applications

The mobile computer screen is a non-touch screen and therefore navigation and control of an application is performed using the keypad.

## Key Combinations

The mobile computer uses special key combinations to easily navigate applications. [Table 2-2](#) lists the key combinations required to perform various application navigation and control.

**Table 2-2** *Key Combinations*

Action	Key Combination
Access the <i>Start</i> menu on the Task Bar	Press <b>F - CTRL - F - ESC</b>
Switch fields within an application	Press <b>F - TAB</b>
Close windows or cancel operations	Press <b>F - ESC</b>
Access the <i>Task Manager</i>	Press <b>F - ALT - F - TAB</b>
Minimize current window	Press <b>F - ALT - F - ESC</b>
Access a menu bar	Press <b>F - ALT - F - ALT</b>
Press a button in an application window.	Press <b>F - TAB</b> until the button is highlighted. Press <b>A - SPACE</b>
Toggle IME mode on/off (Simplified Chinese only)	Press <b>F - CTRL - SPACE</b>

## Selecting Items

Use a combination of key sequences to select items in a folder or list.

To select continuous items in a folder or list:

1. Open the folder or list.
2. Use the scroll keys to move to the first item to select.
3. Press **A** to activate the alpha mode.
4. Press **SHIFT** - scroll key (either up or down) to select the next item.
5. Repeat the **SHIFT** - scroll key combination to select remaining items.
6. Perform the desired function.

To select multiple items in a folder or list:


1. Open the folder or list.
2. Press **A** to activate the alpha mode.
3. Use the scroll keys to move to the first item.
4. Press **F - CTRL** - scroll key to move within the list. The item name is outlined.
5. Repeat step 3 to move to the desired item.
6. Press **SPACE** to highlight the item.
7. Repeat steps 3 through 5 until all items are selected.
8. Perform the desired function.

## Using the Mouse Cursor

Enable the mouse feature by pressing **F - F9**. The mouse pointer (arrow) appears on the screen. Use the up and down scroll keys to move the cursor in the vertical direction and use the left and right scroll keys to move the cursor in the horizontal direction. The scan button (above the scroll keys) functions as the left mouse button when mouse feature is enabled.

Press and release the scan button to produce a mouse single-click. This can be used to click on menu bars, menu items and a buttons. Quickly press and release the scan button twice to produce a mouse double-click. This can be used to open folders in the file explorer.

Disable the mouse feature by pressing **F - F9** again.

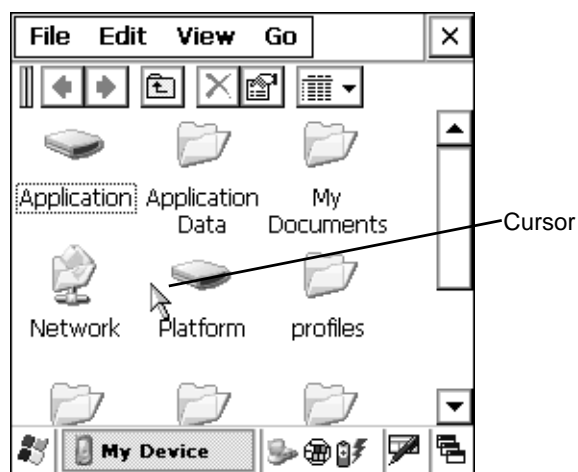


**Figure 2-2** *Cursor on Screen*

---

## Adjusting the Beeper Volume

To adjust the beeper volume:

1. Press **F - DEL**. The volume control box appears.

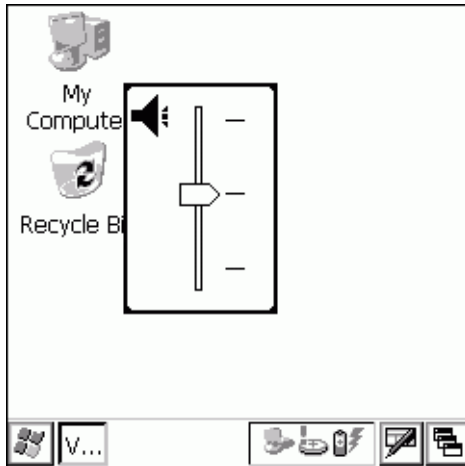

**Figure 2-3** Volume Control Box


2. Use the scroll up or scroll down keys to adjust the volume.
3. After three seconds of inactivity, the settings are saved and the box disappears.

---

## Adjusting the Screen Contrast

To adjust the screen contrast:

1. Press **F - SHIFT**. The contrast control box appears.

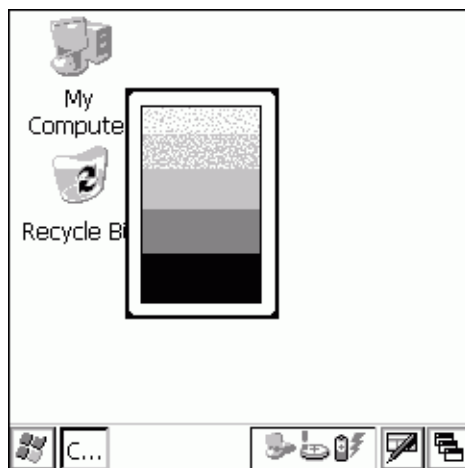

**Figure 2-4** Contrast Control Box

2. Use the scroll up or scroll down keys to adjust the contrast.
3. After three seconds of inactivity, the settings are saved and the box disappears.

---

## Screen

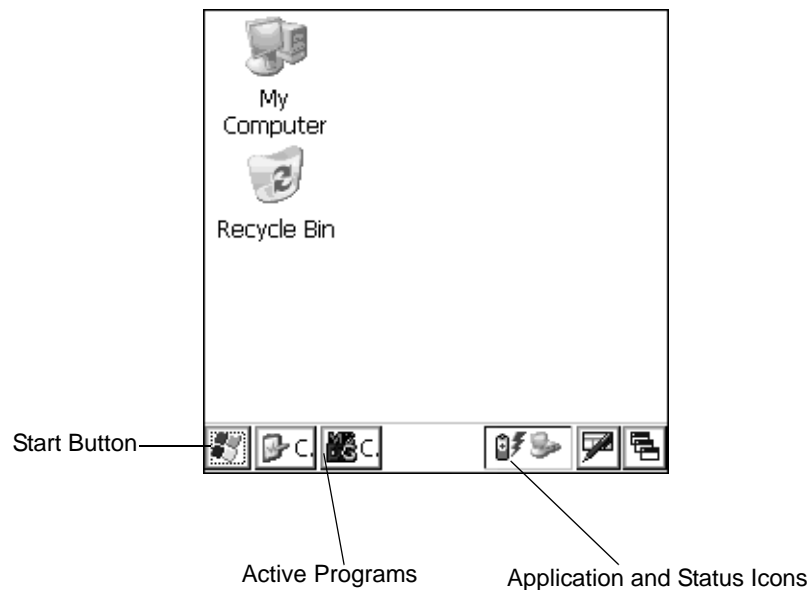
The mobile computer's screen is a non-touch screen. All navigation of applications is performed using the keypad. See *Using the Keypad to Navigate Applications on page 2-3* for more information.

---

## Taskbar










The taskbar (at the bottom of the screen) displays the *Start* button, active programs, and status icons. [Table 2-3](#) describes the status icons.

- **Start button**  
Opens the *Start* menu for accessing the Control Panel and programs.
- **Active Programs**  
The active applications' icons appear in the taskbar. If more than one program is active, use the *Task Manager* to toggle between the active programs.
- **Status Icons**  
The keypad mode icons indicate the function key status. If the **F**, **A**, **SHIFT**, or **CTRL** functions are active the appropriate icon appears in the taskbar. The power status icons indicate if the mobile computer is connected to an AC power source, if it is charging, or the remaining power of the battery.



**Figure 2-5** Taskbar


**Table 2-3** *Status Icons*

Icon	Description
	Indicates that the mobile computer is charging.
	Indicates the battery charge status in 10% increments from 10% to 100%.
	Indicates that the battery is fully charged and the mobile computer is running on external AC power.
	Indicates IP status. Only displays when the mobile computer is in emulation mode.
	Indicates that the ActiveSync application is running.
	Indicates that the <b>SHIFT</b> character function is selected.
<b>F</b>	Indicates that the <b>F</b> key (function) is selected.
	Indicates that the <b>CTRL</b> character function is selected.
ALT	Indicates that the <b>ALT</b> character function is selected.
	Indicates that the mobile computer is in alpha mode.
	Use the scroll arrows to scroll left or right to reveal hidden program and status icons.

## Start Button

Press **F - CTRL - F - ESC** to launch the *Start* menu.

- *Programs*: Use to access available programs
- *Favorites*: Displays files in the *Favorites* directory
- *Documents*: Displays files in the *Documents* directory
- *Settings*: Accesses the Control Panel, the Network and Dial-up Connections, and the Taskbar and Start menu properties
- *Run . . .*: Runs a program or application
- *Suspend*: Suspends the mobile computer.

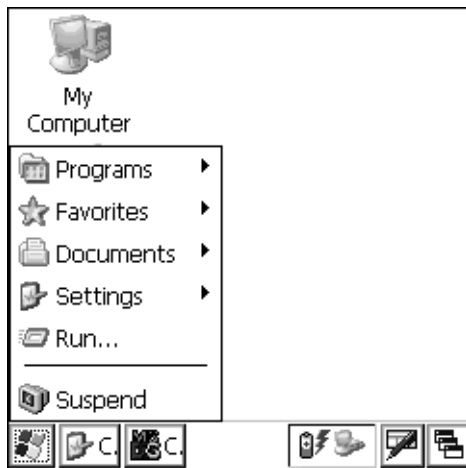

**Figure 2-6** Start Menu

Use the scroll keys to navigate to a specific entry and then press the **ENT** key to select it.

## Entering Information

To enter information:

- Use the keypad.
- Scan bar code data into data fields.
- Use Microsoft® ActiveSync® to synchronize or copy information from the host computer to the mobile computer. For more information on ActiveSync, refer to the *MC1000 Integrator Guide*.

### Entering Information Using the Keypad


The alphanumeric keypads produce the 26-character alphabet (A-Z), numbers (0-9), function keys, and assorted characters. The keypads' default characters/functions are printed white, the alpha character/functions are printed orange, and the function character/functions are printed blue. See *Keypad on page 2-1* for keypad configurations.

### Entering Data via the Bar Code Scanner

The integrated laser bar code scanner uses the Scan Wedge program to scan data into data fields in the same way data is entered via the keypad.


To scan bar codes with the mobile computer:

1. Ensure that the mobile computer is loaded with a scanning application.
2. Aim the mobile computer at the bar code.

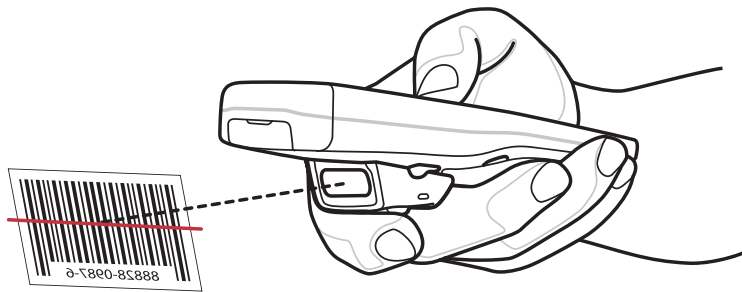


**Figure 2-7** Scanning

✓ **NOTE** Do not cover the scan window with your finger.

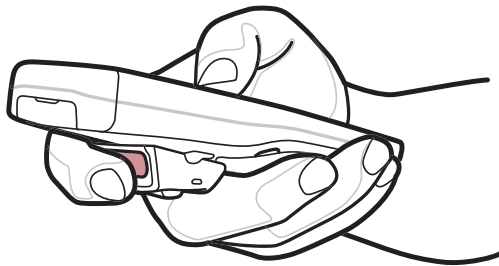

**Figure 2-8** Obstructing Scan Window

1. Press the scan button. Ensure the red scan beam covers the entire bar code. The Scan LED illuminates red to indicate that the laser is on. The Scan LED illuminates green and a beep sounds to indicate a successful decode.

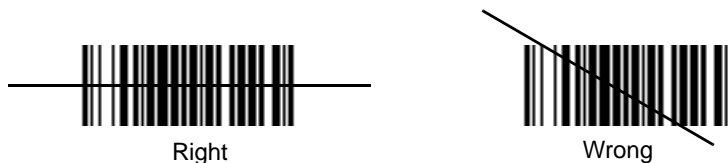

**Figure 2-9** Laser Aiming

Optimal scanning distance varies with bar code density and scanner optics.

- Hold the scanner farther away for larger symbols.
- Move the scanner closer for symbols with bars that are close together.

✓ **NOTE** Scanning procedures depend on the application and mobile computer configuration. An application may use different scanning procedures from the one above.



## Scan Indicator LED

Table 2-4 lists the Scan LED indicator status.

**Table 2-4** Scan LED Indicator

LED Status	Indication
Off	Not scanning.
Solid Red	Laser enabled, scanning in process.
Solid Green	Successful decode.

## Scanning Considerations

Scanning is a simple matter of aim, scan and decode. However, to optimize scanning performance consider the range and the scanning angle:

- Range

Any scanning device decodes well over a particular working range — minimum and maximum distances from the bar code. This range varies according to bar code density and scanning device optics.

Scanning within range brings quick and constant decodes; scanning too close or too far away prevents decodes. Move the scanner closer and further away to find the right working range for the bar codes being scanned. However, the situation is complicated by the availability of various integrated scanning modules. The best way to specify the appropriate working range per bar code density is through a chart called a decode zone for each scan module. A decode zone simply plots working range as a function of minimum element widths of bar code symbols.

- Angle


Scanning angle is important for promoting quick decodes. When laser beams reflect directly back into the scanner from the bar code, this specular reflection can “blind” the scanner.

To avoid this, scan the bar code so that the beam does not bounce directly back. But don’t scan at too sharp an angle; the scanner needs to collect scattered reflections from the scan to make a successful decode. Practice quickly shows what tolerances to work within.

✓ **NOTE** Contact the Motorola Enterprise mobility Support if persistent scanning difficulties develop. Decoding properly printed bar codes should be quick and effortless.

## Laser Decode Ranges

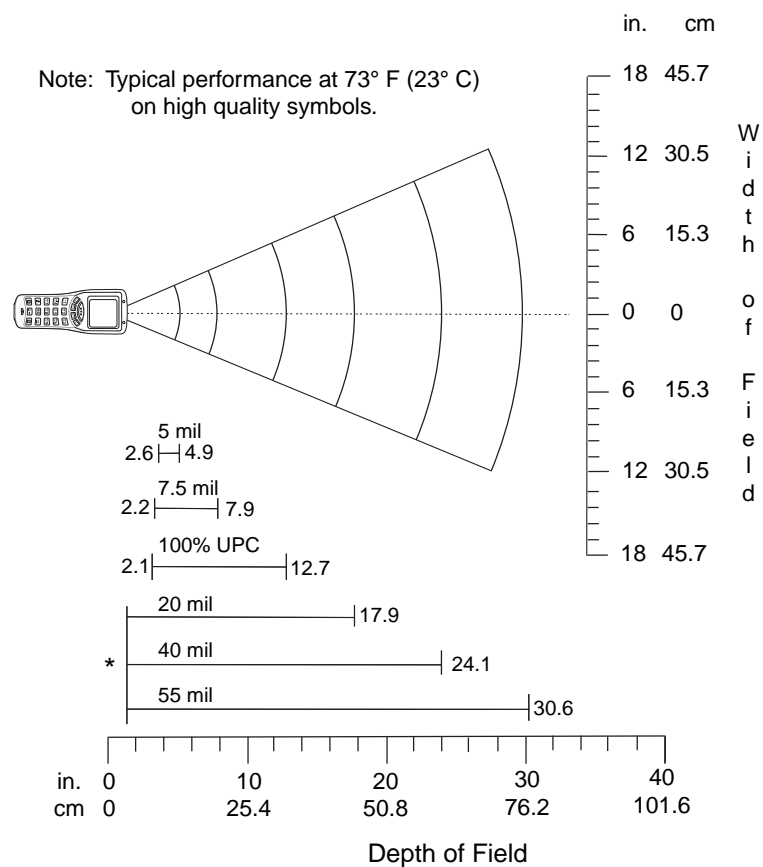Figure 2-10 shows the laser decode ranges and Table 2-5 on page 2-12 lists the decode ranges for the selected bar code densities. The minimum element width (or “symbol density”) is the width in mils of the narrowest element (bar or space) in the symbol. The maximum usable length of a symbol at any given range is shown below.



\*Minimum distance determined by symbol length and scan angle

**Figure 2-10** MC1000 Laser Decode Ranges

**Table 2-5** MC1000 Laser Decode Ranges

Bar Code Density	Ranges	
	Near	Far
5.0 mil	2.6 in 6.60 cm	4.9 in 12.45 cm
7.5 mil	2.2 in 5.59 cm	7.9 in 20.07 cm
10 mil	1.9 in 4.83 cm	10.8 in 67.95cm
100% UPC	2.1 in 5.33 cm	12.7 in 32.26 cm

Note: Minimum distance determined by symbol length and scan angle.

**Table 2-5** MC1000 Laser Decode Ranges (Continued)

Bar Code Density	Ranges	
	Near	Far
20 mil	(See Note)	17.9 in 45.47 cm
40 mil	(See Note)	24.1 in 67.06 cm
55 mil	(See Note)	30.6 in 77.72 cm

Note: Minimum distance determined by symbol length and scan angle.

## Resetting the Mobile Computer

If the mobile computer stops responding to input, reset it. There are two types of resets, warm boot and cold boot. A warm boot restarts the mobile computer by closing all running programs. All data that is not saved is lost.

A cold boot also restarts the mobile computer, but erases all stored records and entries from RAM. In addition it returns formats, preferences, and other settings to the factory default settings.

Perform a warm boot first. This restarts the mobile computer and saves all stored records and entries. If the mobile computer still does not respond, perform a cold boot.

### Performing a Warm Boot

To perform a warm boot, press and hold the **Power** button until a message appears to warm boot the mobile computer. As the mobile computer initializes MC1000 desktop appears.



**CAUTION** Files that remain open during a warm boot may not be retained.

### Performing a Cold Boot

A cold boot restarts the mobile computer and erases all user stored records and entries from RAM. *Never perform a cold boot unless a warm boot does not solve the problem.*



**CAUTION** A cold boot resets the mobile computer to the default settings and removes all added applications and all stored data. Do not cold boot without support desk approval.

To perform a cold boot press and hold the **Power** for at least 15 seconds. As the mobile computer initializes its Flash File system, the splash window appears for about 15 seconds.

## Waking the Mobile Computer


The wakeup conditions define what actions wake up the mobile computer. These settings are configurable and the factory default settings shown in [Table 2-6](#) are subject to change/update.

**Table 2-6** *Wakeup Conditions (Default Settings)*

Status	Description	Conditions for Wakeup
Power Off	When the mobile computer is set to the suspend mode by pressing the <b>Power</b> button, these actions wake the mobile computer.	<b>Power</b> button is pressed.
		AC power is added or removed.
		Cradle/cable connect or disconnect.
Auto Off	When the automatic power-off function places the mobile computer in suspend mode these actions wake the mobile computer.	Key or scan button is pressed.
		Real Time Clock set to wake up.
		<b>Power</b> button is pressed.
		AC power added or removed.
		Cradle/cable connect or disconnect.
		Key or scan button is pressed.
		Real Time Clock set to wake up.

## File System Directory Structure

The mobile computer directory structure displays all of the file folders, see [Figure 2-11](#). The pre-installed folders are in flash file system memory and optional removable storage devices (SD cards).

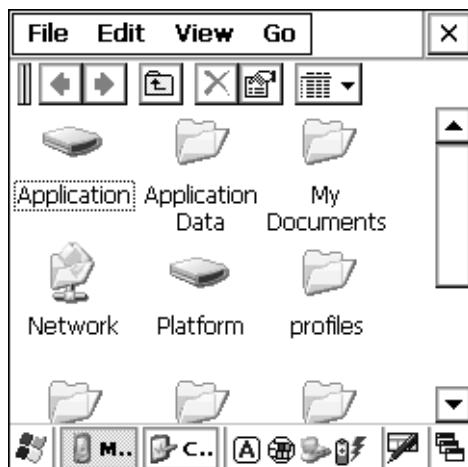

**Figure 2-11** *Mobile Computer Directory Structure*

- *Application* and *Platform* folders are located in flash file system memory.
- The *Windows*, *Program Files*, *profiles*, and *My Documents* folders are composite, RAM-based folders generated from ROM (many of these files are marked read only).
- The *Network* folder is a link to file systems mapped using the network redirector. The files do not physically reside on the mobile computer.

- The *Temp* and *Recycled* folders typically contain RAM based files.

✓ **NOTE** All files copied to the RAM-based folders are lost after a cold boot.





# Chapter 3 Accessories

---

## Introduction

The MC1000 accessories provide a variety of product support capabilities. Accessories include cradles and cables.

### Cradles

- Single Slot Serial/USB cradle charges the mobile computer main battery and/or a spare Li-ion battery. It also synchronizes the mobile computer with a host computer through either a serial or USB connection.
- Four Slot Ethernet cradle charges up to four mobile computers. It also synchronizes up to four mobile computers with a host computer through a Ethernet connection.
- Four Slot USB cradle charges up to four mobile computers. It also synchronizes up to four mobile computers with a host computer through a USB connection.


### Cables

The cables snap on to the mobile computer and are used to connect external devices to the mobile computer.

- USB Client Charge Cable
- RS232 Charge Cable.

## Single Slot Serial/USB Cradle

This section describes how use the Single Slot Serial/USB Cradle with the mobile computer.

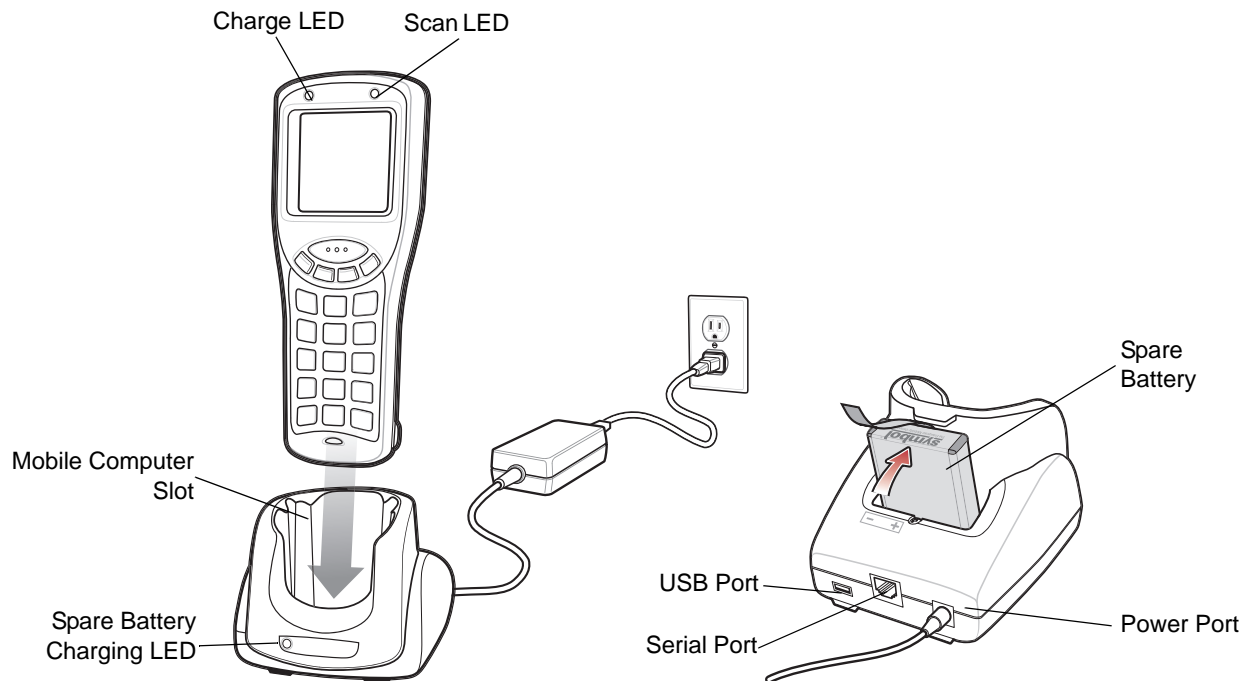

**Figure 3-1** Single Slot USB Cradle

✓ **NOTE** Use only a Symbol-approved power supply output rated 5.4 VDC and minimum 3 A. The power supply is certified to EN60950 with SELV outputs. Use of alternative power supply will invalidate any approval given to this device and may be dangerous.

**HINWEIS** Benutzen Sie nur eine Symbol Technologies genehmigt in den Ausgabe: 5.4 VDC und minimum 3A. Die Stromversorgung ist bescheinigt nach EN60950 mit SELV Ausgaben. Bei Verwendung eines anderen Netzteils werden alle für das Gerät gewährten Genehmigungen außer Kraft gesetzt, und der Betrieb kann gefährlich sein.

The Single Slot Serial/USB cradle:

- Provides 5.4 VDC power for operating the mobile computer.
- Provides a serial port and USB port (mini B receptacle) for data communication between the mobile computer and a host computer.
- Synchronizes information between the mobile computer and a host computer (with customized or third party software, it can also synchronize the mobile computer with corporate databases).
- Provides serial connection through the serial pass-through port for communication with a serial device, such as a host computer (cradle serial communication cable is available). For communication setup procedures, refer to the *MC1000 Integrator Guide*.
- Provides USB connection through the USB pass-through port for communication with a USB device, such as a host computer (cradle USB communication cable is available). For communication setup procedures, refer to the *MC1000 Integrator Guide*.
- Charges the mobile computer's Li-ion battery.



- Charges a spare Li-ion battery.

## Battery Charging

The Single Slot Serial/USB cradle can charge the mobile computer's main Li-ion battery and a spare Li-ion battery simultaneously.



**NOTE** Re-chargeable AAA batteries do not charge in the mobile computer when the mobile computer is placed in the Single Slot Serial/USB cradle.

To charge the battery for your mobile device, battery and charger temperatures must be between +32° F and +104° F (0° C to +40° C).

To charge the mobile computer:

1. Connect the Single Slot Serial/USB cradle to a power source.
2. Firmly press the mobile computer into the mobile computer slot. The mobile computer's Charge LED indicates the mobile computer battery charging status.
3. When charging is completed, hold the cradle with one hand and lift the mobile computer out of the cradle with the other hand.

To charge the spare Li-ion battery:

1. Connect the Single Slot Serial/USB cradle to a power source.
2. Align the battery contacts as shown on the cradle. Note the polarity icon on the battery.
3. Insert the battery into the battery slot noting the battery polarity.
4. Gently press down on the battery to ensure proper contact.

The cradle spare battery charging LED (see [Figure 3-1 on page 3-2](#)) indicates the spare battery charging status. See [Table 3-1](#) for charging status indications.

To remove the spare battery, pull the battery away from the mobile computer slot and lift the battery out of the slot.


The Li-ion battery charges in less than four hours.

**Table 3-1** LED Charging Status Indicators

LED	Indication
<b>Mobile Computer Charging (LED on mobile computer)</b>	
Off	Mobile computer not in cradle; mobile computer not placed correctly; cradle is not powered, or environment is outside the battery charging temperature range.
Slow Blinking Amber	Mobile computer is charging.
Solid Amber	Charging complete.
<b>Spare Battery Charging (LED on cradle)</b>	
Off	No spare battery in slot; spare battery not placed correctly; cradle is not powered, or environment is outside the battery charging temperature range.
Slow Blinking Amber	Spare battery is charging.
Solid Amber	Charging complete.

## Four Slot USB Cradle

This section describes how to use the Four Slot USB cradle with the mobile computer.

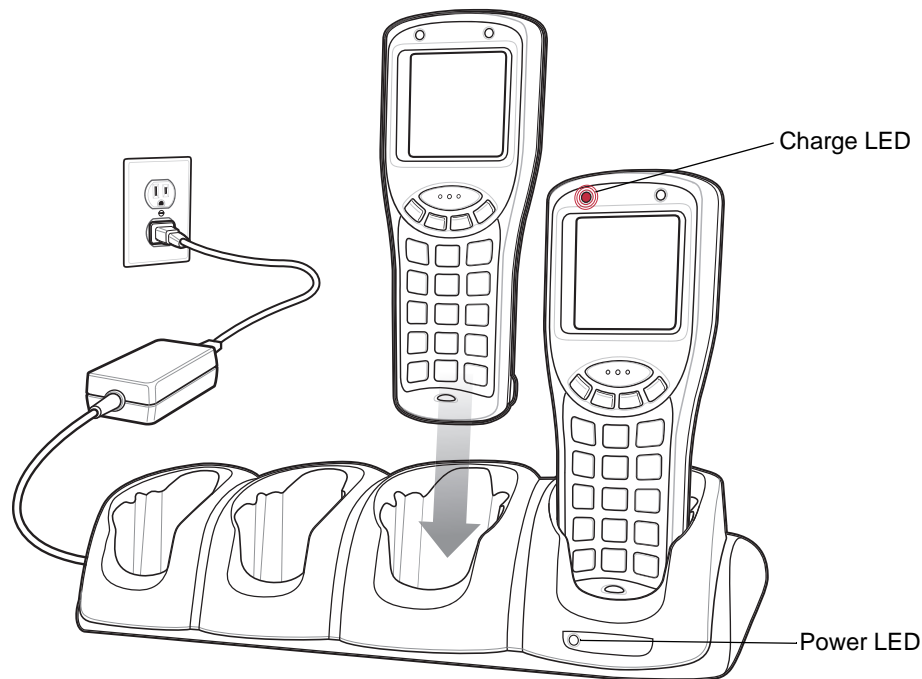

**Figure 3-2** Four Slot USB Cradle

✓ **NOTE** Use only a Symbol-approved power supply output rated 12.0 VDC and minimum 3.3 A. The power supply is certified to EN60950 with SELV outputs. Use of alternative power supply will invalidate any approval given to this device and may be dangerous.

**HINWEIS** Benutzen Sie nur eine Symbol Technologies genehmigt in den Ausgabe: 12 VDC und minimum 3A. Die Stromversorgung ist bescheinigt nach EN60950 mit SELV Ausgaben. Bei Verwendung eines anderen Netzteils werden alle für das Gerät gewährten Genehmigungen außer Kraft gesetzt, und der Betrieb kann gefährlich sein.

The Four Slot USB cradle:

- Provides 5.4 VDC power for operating the mobile computer.
- Provides communication with a host computer via an internal USB hub.
- Simultaneously charges up to four mobile computers.

## Battery Charging



**NOTE** Re-chargeable AAA batteries do not charge in the mobile computer when the mobile computer is placed in the Four Slot USB cradle.

To charge the battery for your mobile device, battery and charger temperatures must be between +32° F and +104° F (0° C to +40° C).


*UConnect* software must be loaded onto the mobile computer for proper ActiveSync operation. Refer to the *MC1000 Integrator Guide* for installing *UConnect* onto the mobile computer.

The Four Slot USB cradle can charge up to four mobile computers simultaneously. The Li-ion battery charges in approximately four hours. To charge the mobile computer:

1. Connect the Four Slot USB cradle to a power source.
2. Firmly press the mobile computer into the mobile computer slot.
3. The mobile computer's Charge LED indicates the mobile computer battery charging status.
4. When charging is completed, hold the cradle with one hand and lift the mobile computer out of the cradle with the other hand.

## Four Slot Ethernet Cradle

This section describes how to set up and use a Four Slot Ethernet cradle with the mobile computer. For Ethernet communication setup procedures refer to the *MC1000 with Windows CE 5.0 Integrator Guide*.

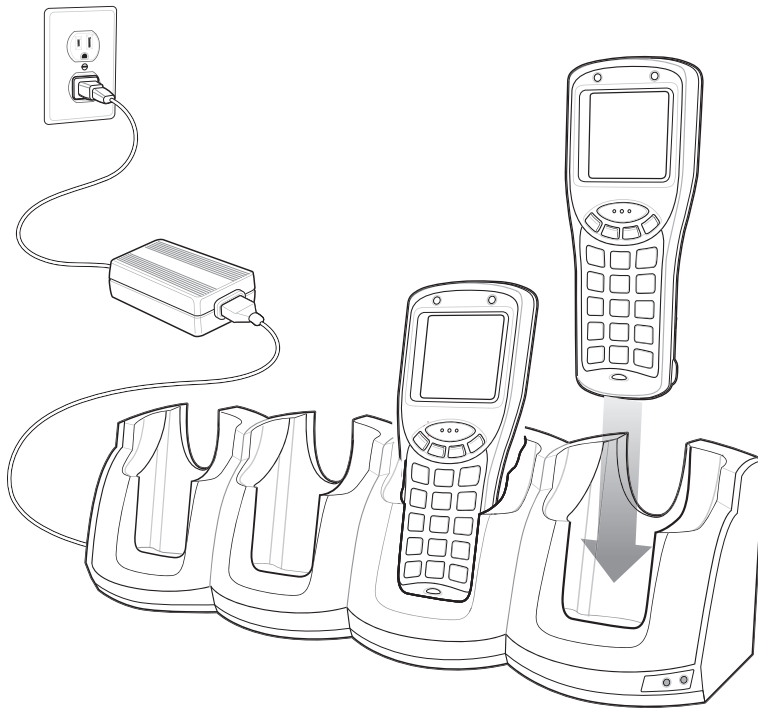

**Figure 3-3** Four Slot Ethernet Cradle

The Four Slot Ethernet cradle:

- Provides 5.4 VDC power for operating the mobile computer.
- Connects the mobile computer (up to four) to an Ethernet network.
- Simultaneously charges up to four mobile computers (with batteries installed).

You cannot ActiveSync using the Four Slot Ethernet cradle. To ActiveSync with a host computer, use the Single Slot Serial/USB cradle.



**CAUTION** Use only a Symbol approved power supply output rated 12 VDC and minimum 9 A. Use of an alternative power supply will void the product warranty and may cause product damage. See the *MC1000 User Guide* for the power supply regulatory compliance statement.

Prior to placing the MC1000 into the Ethernet cradle, set the MC1000 to USB Host mode.

1. Press **F - CTRL - F - ESC** to launch the Start menu.
2. Use the scroll keys to select *Settings - Control Panel*.
3. Press **ENT**.
4. Use the scroll keys to select the *USBConfig* icon.
5. Press **ENT**. The *USBConfig Settings* window appears.

6. Press **F - TAB** to select the *Port Mode*.
7. Use the scroll key to highlight *USB Host Mode*.
8. Press **ENT**.

After using the Ethernet cradle the MC1000 must be placed in USB Client mode if ActiveSync is required.

1. Press **F - CTRL - F - ESC** to launch the Start menu.
2. Use the scroll keys to select *Settings - Control Panel*.
3. Press **ENT**.
4. Use the scroll keys to select the *USBConfig* icon.
5. Press **ENT**.
6. Press **F - TAB** to select the *Port Mode*.
7. Use the scroll key to highlight *USB Client Mode*.
8. Press **ENT**.

## Battery Charging



**NOTE** Re-chargeable AAA batteries do not charge in the mobile computer when the mobile computer is placed in the Four Slot Ethernet cradle.

To charge the battery for your mobile device, battery and charger temperatures must be between +32° F and +104° F (0° C to +40° C).

The Four Slot Ethernet cradle can charge up to four mobile computers simultaneously. The Li-ion battery charges in approximately four hours. To charge the mobile computer:

1. Connect the Four Slot Ethernet cradle to a power source.
2. Firmly press the mobile computer into the mobile computer slot.
3. The mobile computer's Charge LED indicates the mobile computer battery charging status.
4. When charging is completed, hold the cradle with one hand and lift the mobile computer out of the cradle with the other hand.

## LED Charge Indications

The charge LED shows the status of the battery charging in the mobile computer. The main battery usually charges in less than four hours. See [Table 3-1 on page 3-3](#) for charging status indications.

## Speed LED

The green Speed LED lights to indicate that the transfer rate is 100 Mbps. When it is not lit it indicates that the transfer rate is 10Mbps.

## Link LED

The yellow Link LED blinks to indicate activity, or stays lit to indicate that a link is established. When it is not lit it indicates that there is no link.

## Cables

This section describes how to set up and use the cables. The cables:


- provide the mobile computer's operating power and battery charging power when used with the Symbol approved power supply.
- provide serial connection through the serial pass-through port for communication with a serial device, such as a host computer. For communication setup procedures, refer to the *MC1000 with Windows CE 5.0 Integrator Guide*.
- provide USB connection through the USB pass-through port for communication with a USB device, such as a host computer. For communication setup procedures, refer to the *MC1000 with Windows CE 5.0 Integrator Guide*.
- provide printing capabilities to an approved printer.

✓ **NOTE** Use only a Symbol-approved power supply output rated 5.4 VDC and minimum 3 A. The power supply is certified to EN60950 with SELV outputs. Use of alternative power supply will invalidate any approval given to this device and may be dangerous.

**HINWEIS** Benutzen Sie nur eine Symbol Technologies genehmigt in den Ausgabe: 5.4 VDC und minimum 3A. Die Stromversorgung ist bescheinigt nach EN60950 mit SELV Ausgaben. Bei Verwendung eines anderen Netzteils werden alle für das Gerät gewährten Genehmigungen außer Kraft gesetzt, und der Betrieb kann gefährlich sein.

### Cable Connection

1. Slide the bottom of the mobile computer into the cable cup and gently press it down until it is firmly seated in the cable cup.

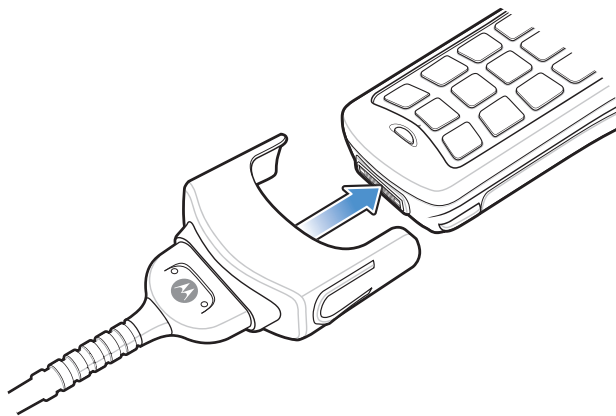

**Figure 3-4** Cable Connection

2. Connect the other end of the cable to the appropriate host device.
3. For the RS-232 Serial Charge cable, connect the power supply.

## Battery Charging



**NOTE** To charge the battery for your mobile device, battery and charger temperatures must be between +32° F and +104° F (0° C to +40° C).

The Serial Charge cable and the USB Charge cable can charge the mobile computer's Li-ion battery. Connect the cables as described above. The mobile computer's Charge LED blinks amber to indicate that the battery is charging and turns solid amber when the battery is completely charged. The Li-ion battery usually charges in less than four hours. See [Table 3-1 on page 3-3](#) for charging indication information.





# Chapter 4 Maintenance and Troubleshooting

---

## Introduction

This chapter includes instructions on cleaning and storing the mobile computer, and provides troubleshooting solutions for potential problems during mobile computer operation.

---

## Maintaining the Mobile Computer

For trouble-free service, observe the following tips when using the mobile computer:

- Do not scratch the screen of the mobile computer.
- Although the mobile computer is water and dust resistant, do not expose it to rain or moisture for an extended period of time. In general, treat the mobile computer as a pocket calculator or other small electronic instrument.
- The screen of the mobile computer is glass. Do not drop the mobile computer or subject it to strong impact.
- Protect the mobile computer from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store or use the mobile computer in any location that is extremely dusty, damp, or wet.
- Use a soft lens cloth to clean the mobile computer. If the surface of the mobile computer screen becomes soiled, clean it with a soft cloth moistened with a diluted window-cleaning solution.
- Periodically replace the rechargeable Li-ion battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

## Troubleshooting

### Mobile Computer

Table 4-1 Troubleshooting the Mobile Computer

Problem	Cause	Solution
Mobile computer does not turn on.	Main battery not charged.	Charge the Li-ion battery. Replace the Li-ion battery or three AAA batteries.
	Main battery not installed properly.	Ensure battery is installed properly. See <i>Main Battery Installation on page 1-3</i> .
	System crash.	Perform a warm boot. If the mobile computer still does not turn on, perform a cold boot. See <i>Resetting the Mobile Computer on page 2-13</i> .
Rechargeable Li-ion battery did not charge.	Li-ion battery failed.	Replace the Li-ion battery. If the mobile computer still does not operate, try a warm boot, then a cold boot. See <i>Resetting the Mobile Computer on page 2-13</i> .
	Mobile computer removed from cradle while battery was charging.	Insert mobile computer in cradle and begin charging. The main battery requires up to four hours to recharge fully.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
Cannot see characters on screen.	Mobile computer not powered on.	Press the <b>Power</b> button.
During data communication, no data was transmitted, or transmitted data was incomplete.	Mobile computer removed from cradle or unplugged from host computer during communication.	Replace the mobile computer in the cradle, or reattach the cable and re-transmit.
	Incorrect cable configuration.	See the system administrator.
	Communication software was incorrectly installed or configured.	Perform setup as described in the <i>MC1000 with Windows CE 5.0 Integrator Guide</i> .
Mobile computer does not emit sound.	Volume setting is low or turned off.	Adjust volume setting.

Table 4-1 Troubleshooting the Mobile Computer (Continued)

Problem	Cause	Solution
Mobile computer turns itself off.	Mobile computer is inactive.	The mobile computer turns off after a period of inactivity. This period can be set from one to five minutes, in one-minute intervals.
	Battery is depleted.	Replace the battery.
	Battery is not inserted properly.	Insert the battery properly. See <i>Main Battery Installation</i> on page 1-3.
A message appears stating that the mobile computer memory is full.	Too many files stored on the mobile computer.	Delete unused memos and records. If necessary, save these records on the host computer.
	Too many applications installed on the mobile computer.	Remove unused installed applications from the mobile computer to recover memory.
The mobile computer does not accept scan input.	Scanning application is not loaded.	Verify that the mobile computer is loaded with a scanning application. See the system administrator.
	Unreadable bar code.	Ensure the symbol is not defaced.
	Distance between exit window and bar code is incorrect.	Ensure mobile computer is within proper scanning range.
	Mobile computer is not programmed for the bar code type.	Ensure the mobile computer is programmed to accept the type of bar code scanned.
	Mobile computer is not programmed to generate a beep.	Check that the application is set to generate a beep on good decode.
	Battery is low.	Check the battery level. When the battery is low, the mobile computer automatically goes into suspend mode.

## Single Slot Serial/USB Cradle

Table 4-2 Troubleshooting the Single Slot Serial/USB Cradle

Symptom	Possible Cause	Action
Charge LEDs do not light when mobile computer or spare Li-ion battery is inserted. See <a href="#">Figure 3-1 on page 3-2</a> .	Cradle is not receiving power.	Ensure the power cable is connected securely to both the cradle and to AC power.
	Mobile computer is not seated correctly in the cradle.	Remove and re-insert the mobile computer into the cradle, ensuring it is firmly seated.
	Spare Li-ion battery is not seated correctly in the cradle.	Remove and re-insert the spare Li-ion battery into the charging slot, ensuring it is correctly seated. Note the polarity icon on the battery.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
Mobile computer battery is not charging.	Mobile computer was removed from cradle or cradle was unplugged from AC power too soon.	Ensure cradle is receiving power. Ensure mobile computer is seated correctly. If a mobile computer battery is fully depleted, it can take up to four hours to fully recharge the battery.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	Mobile computer is not fully seated in the cradle.	Remove and re-insert the mobile computer into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
Spare Li-ion battery is not charging.	Li-ion battery not fully seated in charging slot.	Remove and re-insert the spare Li-ion battery into the cradle, ensuring it is correctly seated. Note the polarity icon on the battery.
	Battery inserted incorrectly.	Ensure the contacts are facing down and toward the back of the cradle. Note the polarity icon on the battery. Note the polarity icon on the battery.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
During data communications, no data was transmitted, or transmitted data was incomplete.	Mobile computer removed from cradle during communications.	Replace mobile computer in cradle and retransmit.
	Incorrect cable configuration.	See the system administrator.
	Communications software is not installed or configured properly.	Perform setup as described in the <i>MC1000 with Windows CE 5.0 Integrator Guide</i> .

## Four Slot USB Cradle

Table 4-3 Troubleshooting the Four Slot USB Cradle

Symptom	Possible Cause	Action
Charge LEDs do not light when mobile computer is inserted.	Cradle is not receiving power.	Ensure the power cable is connected securely to both the cradle and to AC power.
	Mobile computer is not seated correctly in the cradle.	Remove and re-insert the mobile computer into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
Mobile computer battery is not charging.	Mobile computer was removed from cradle or cradle was unplugged from AC power too soon.	Ensure cradle is receiving power. Ensure mobile computer is seated correctly. If a mobile computer battery is fully depleted, it can take up to four hours to fully recharge the Li-ion battery.
	Li-ion battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	Mobile computer is not fully seated in the cradle.	Remove and re-insert the mobile computer into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
During data communications, no data was transmitted, or transmitted data was incomplete.	Mobile computer removed from cradle during communications.	Replace mobile computer in cradle and retransmit.
	Incorrect cable configuration.	See the system administrator.
	Communications software is not installed or configured properly.	Perform setup as described in the <i>MC1000 with Windows CE 5.0 Integrator Guide</i> .

## Cables

Table 4-4 Troubleshooting the Cables

Symptom	Possible Cause	Action
Mobile computer Charge LED does not light when mobile computer inserted.	Cable is not receiving power.	Ensure the power cable is connected securely to both the cable and to AC power.
	Mobile computer is not seated correctly in the cable.	Remove and re-insert the mobile computer into the cable, ensuring it is correctly seated.
	Extreme battery temperature.	Li-ion battery does not charge if battery temperature is below 32°F (0°C) or above 104°F (40°C).
Mobile computer battery is not charging.	Mobile computer was removed from cable or cable was unplugged from AC power too soon.	Ensure cable is receiving power. Ensure mobile computer is seated correctly. If a mobile computer battery is fully depleted, it can take up to four hours to fully recharge a battery.
	Li-ion battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	Mobile computer is not fully seated in the cable.	Remove and re-insert the mobile computer into the cable, ensuring it is correctly seated.
During data communication, no data was transmitted, or transmitted data was incomplete.	Cable removed from mobile computer during communication.	Reattach cable to mobile computer and retransmit.
	Incorrect cable configuration.	See the system administrator.
	Communication software is not installed or configured properly.	Perform setup as described in the <i>MC1000 with Windows CE 5.0 Integrator Guide</i> .

# Appendix A Specifications

## Mobile Computer Technical Specifications

The following table summarizes the mobile computer's intended operating environment.

**Table A-1** *Mobile Computer Technical Specifications*

Item	Description
Operating Temperature	14° to 122°F (-10° to +50°C)
Storage Temperature	-40° to 158°F (-40° to 70°C)
Battery Charging Temperature	-32° to 104°F (0° to 40°C)
Humidity	0% to 85% non-condensing at 122° F (50°C)
Electrostatic Discharge (ESD)	+/-15 kV (air) (RH 50%); +/- 8 kV (contact)
Sealing	IP54 category 2
Shock and Vibration	<p>Drop/Shock: 2 times per side (12 drops total of the same unit) from a height of 4 feet to concrete at -10°C, 23°C and 50°C</p> <p>Tumble: 500, ½ meter tumbles (1 tumble = 2 drops)</p> <p>Vibration: 4G's, random, 5 Hz to 2,000 Hz vibration</p> <p>Cargo/Packaged: Six (6) foot drop at 23°C, 5 Hz, Vibration &lt; 20 lbs Vehicle stacking 96", 23°C, and 85% relative humidity</p>
Dimensions	6.42 in L x 2.54 in W x 1.50 in H (163 mm L x 64.5 mm W x 38 mm H)

**Table A-1** *Mobile Computer Technical Specifications (Continued)*

Item	Description
Weight (with Li-ion Battery)	7.23 oz (205 g)
Display	Non-touch monochrome
Main Battery	Rechargeable Lithium-ion 1800 mAh minimum (3.7 VDC), or three AAA Alkaline batteries
Backup Battery	Ni-MH battery (rechargeable), 20 mAh (3.6 VDC) 3 cells
Operating Platform	Microsoft® Embedded Windows® CE 5.0 Core
Processor/Memory	Intel® XScale™ PXA 312MHz with 32MB RAM/32MB Flash
Interface	RS-232, 115.2 kbps max USB Client
Data Capture	Code 39, Code 128, Code 93, Codabar, EAN-8, EAN-13, Interleaved 2 of 5, UPCA, UPCE and UPC/EAN Supplements, RSS-14/Limited/Expanded, MSI Plessey, IATA 2 of 5, Coupon Code.
Secure Digital (SD) Cards	<p>The following Sandisk SD cards have been tested and qualified*:</p> <p>SDSDB-64-201-80 (64 MB)</p> <p>SDSDB-128-201-80 (128 MB)</p> <p>SDSDB-512-201-80 (512 MB)</p> <p>*Symbol disclaims all liability of any kind whatsoever, including without limitations, liability under tort, contract, intellectual property rights or any other legal theory, for the performance of the above Sandisk SD cards and/or their interoperability (or the lack thereof) with any Symbol product, and does not warrant or in any way guarantee that such Sandisk SD cards will operate in conjunction, in combination or in integration with the Symbol MC1000 or any other Symbol product. The above information is offered on an “as is” basis, and does not constitute business, legal, professional, technical or any other advice.</p>



# Glossary

---

## A

**API.** An interface by means of which one software component communicates with or controls another. Usually used to refer to services provided by one software component to another, usually via software interrupts or function calls

**Aperture.** The opening in an optical system defined by a lens or baffle that establishes the field of view.

**Application Programming Interface.** See **API**.

**ANSI Terminal.** A display terminal that follows commands in the ANSI standard terminal language. For example, it uses escape sequences to control the cursor, clear the screen and set colors. Communications programs support the ANSI terminal mode and often default to this terminal emulation for dial-up connections to online services.

**ASCII.** American Standard Code for Information Interchange. A 7 bit-plus-parity code representing 128 letters, numerals, punctuation marks and control characters. It is a standard data transmission code in the U.S.

**Autodiscrimination.** The ability of an interface controller to determine the code type of a scanned bar code. After this determination is made, the information content is decoded.

---

## B

**Bar.** The dark element in a printed bar code symbol.

**Bar Code.** A pattern of variable-width bars and spaces which represents numeric or alphanumeric data in machine-readable form. The general format of a bar code symbol consists of a leading margin, start character, data or message character, check character (if any), stop character, and trailing margin. Within this framework, each recognizable symbology uses its own unique format. See **Symbology**.

**Bar Code Density.** The number of characters represented per unit of measurement (e.g., characters per inch).

**Bar Height.** The dimension of a bar measured perpendicular to the bar width.

**Bar Width.** Thickness of a bar measured from the edge closest to the symbol start character to the trailing edge of the same bar.

**BIOS.** Basic Input Output System. A collection of ROM-based code with a standard API used to interface with standard PC hardware.

**Bit.** Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

**Bits per Second (bps).** Bits transmitted or received.

**Bit.** Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

**bps.** See **Bits Per Second**.

**Byte.** On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory is used to store one ASCII character.

**BOOTP.** A protocol for remote booting of diskless devices. Assigns an IP address to a machine and may specify a boot file. The client sends a bootp request as a broadcast to the bootp server port (67) and the bootp server responds using the bootp client port (68). The bootp server must have a table of all devices, associated MAC addresses and IP addresses.

**boot or boot-up.** The process a computer goes through when it starts. During boot-up, the computer can run self-diagnostic tests and configure hardware and software.

---

## C

**CDRH.** Center for Devices and Radiological Health. A federal agency responsible for regulating laser product safety. This agency specifies various laser operation classes based on power output during operation.

**CDRH Class 1.** This is the lowest power CDRH laser classification. This class is considered intrinsically safe, even if all laser output were directed into the eye's pupil. There are no special operating procedures for this class.

**CDRH Class 2.** No additional software mechanisms are needed to conform to this limit. Laser operation in this class poses no danger for unintentional direct human exposure.

**Character.** A pattern of bars and spaces which either directly represents data or indicates a control function, such as a number, letter, punctuation mark, or communications control contained in a message.

**Character Set.** Those characters available for encoding in a particular bar code symbology.

**Check Digit.** A digit used to verify a correct symbol decode. The scanner inserts the decoded data into an arithmetic formula and checks that the resulting number matches the encoded check digit. Check digits are required for UPC but are optional for other symbologies. Using check digits decreases the chance of substitution errors when a symbol is decoded.

**Codabar.** A discrete self-checking code with a character set consisting of digits 0 to 9 and six additional characters: “(”, “-”, “\$”, “.”, “/”, “,”, “+”).

**Code 128.** A high density symbology which allows the controller to encode all 128 ASCII characters without adding extra symbol elements.

**Code 3 of 9 (Code 39).** A versatile and widely used alphanumeric bar code symbology with a set of 43 character types, including all uppercase letters, numerals from 0 to 9 and 7 special characters ("-", ".", "/", "+", "%", "\$", and space). The code name is derived from the fact that 3 of 9 elements representing a character are wide, while the remaining 6 are narrow.

**Code 93.** An industrial symbology compatible with Code 39 but offering a full character ASCII set and a higher coding density than Code 39.

**Code Length.** Number of data characters in a bar code between the start and stop characters, not including those characters.

**Cold Boot.** A cold boot restarts the mobile computer and erases all user stored records and entries.

**COM port.** Communication port; ports are identified by number, e.g., COM1, COM2.

**Continuous Code.** A bar code or symbol in which all spaces within the symbol are parts of characters. There are no intercharacter gaps in a continuous code. The absence of gaps allows for greater information density.

**Cradle.** A cradle is used for charging the mobile computer battery and for communicating with a host computer, and provides a storage place for the mobile computer when not in use.

---

## D

**Data Communications Equipment (DCE).** A device (such as a modem) which is designed to attach directly to a DTE (Data Terminal Equipment) device.

**DCP.** See **Device Configuration Package**.

**Dead Zone.** An area within a scanner's field of view, in which specular reflection may prevent a successful decode.

**Decode.** To recognize a bar code symbology (e.g., UPC/EAN) and then analyze the content of the specific bar code scanned.

**Decode Algorithm.** A decoding scheme that converts pulse widths into data representation of the letters or numbers encoded within a bar code symbol.

**Decryption.** Decryption is the decoding and unscrambling of received encrypted data. Also see, **Encryption** and **Key**.

**Depth of Field.** The range between minimum and maximum distances at which a scanner can read a symbol with a certain minimum element width.

**Device Configuration Package.** The Symbol Device Configuration Package provides the Product Reference Guide (PRG), flash partitions, Terminal Configuration Manager (TCM) and the associated TCM scripts. With this package hex images that represent flash partitions can be created and downloaded to the mobile computer.

**Discrete Code.** A bar code or symbol in which the spaces between characters (intercharacter gaps) are not part of the code.

**Discrete 2 of 5.** A binary bar code symbology representing each character by a group of five bars, two of which are wide. The location of wide bars in the group determines which character is encoded; spaces are insignificant. Only numeric characters (0 to 9) and START/STOP characters may be encoded.

**DRAM.** Dynamic random access memory.

---

## E

**EAN.** European Article Number. This European/International version of the UPC provides its own coding format and symbology standards. Element dimensions are specified metrically. EAN is used primarily in retail.

**Element.** Generic term for a bar or space.

**Encoded Area.** Total linear dimension occupied by all characters of a code pattern, including start/stop characters and data.

**ENQ (RS-232).** ENQ software handshaking is also supported for the data sent to the host.

**ESD.** Electro-Static Discharge

---

## F

**Flash Disk.** An additional megabyte of non-volatile memory for storing application and configuration files.

**Flash Memory.** Flash memory is nonvolatile, semi-permanent storage that can be electronically erased in the circuit and reprogrammed. MC1000 mobile computers use Flash memory to store the operating system (ROM-DOS), the terminal emulators, and the Citrix ICA Client for DOS.

**File Transfer Protocol (FTP).** A TCP/IP application protocol governing file transfer via network or telephone lines. See **TCP/IP**.

**Flash Memory.** Flash memory is responsible for storing the system firmware and is non-volatile. If the system power is interrupted the data is not be lost.

---

## H

**Hard Reset.** See **Cold Boot**.

**Hz.** Hertz; A unit of frequency equal to one cycle per second.

**Host Computer.** A computer that serves other mobile computers in a network, providing such services as computation, database access, supervisory programs and network control.

---

**I**

**IDE.** Intelligent drive electronics. Refers to the solid-state hard drive type.

**IEC.** International Electrotechnical Commission. This international agency regulates laser safety by specifying various laser operation classes based on power output during operation.

**IEC (825) Class 1.** This is the lowest power IEC laser classification. Conformity is ensured through a software restriction of 120 seconds of laser operation within any 1000 second window and an automatic laser shutdown if the scanner's oscillating mirror fails.

**IEEE Address.** See **MAC Address**.

**Interleaved 2 of 5.** A binary bar code symbology representing character pairs in groups of five bars and five interleaved spaces. Interleaving provides for greater information density. The location of wide elements (bar/spaces) within each group determines which characters are encoded. This continuous code type uses no intercharacter spaces. Only numeric (0 to 9) and START/STOP characters may be encoded.

**Intercharacter Gap.** The space between two adjacent bar code characters in a discrete code.

**Interleaved Bar Code.** A bar code in which characters are paired together, using bars to represent the first character and the intervening spaces to represent the second.

**Interleaved 2 of 5.** A binary bar code symbology representing character pairs in groups of five bars and five interleaved spaces. Interleaving provides for greater information density. The location of wide elements (bar/spaces) within each group determines which characters are encoded. This continuous code type uses no intercharacter spaces. Only numeric (0 to 9) and START/STOP characters may be encoded.

**Internet Protocol Address.** See **IP**.

**I/O Ports.** interface The connection between two devices, defined by common physical characteristics, signal characteristics, and signal meanings. Types of interfaces include RS-232 and PCMCIA.

**Input/Output Ports.** I/O ports are primarily dedicated to passing information into or out of the mobile computer's memory. MC1000 mobile computers include Serial and USB ports.

**IP.** Internet Protocol. The IP part of the TCP/IP communications protocol. IP implements the network layer (layer 3) of the protocol, which contains a network address and is used to route a message to a different network or subnetwork. IP accepts "packets" from the layer 4 transport protocol (TCP or UDP), adds its own header to it and delivers a "datagram" to the layer 2 data link protocol. It may also break the packet into fragments to support the maximum transmission unit (MTU) of the network.

**IP Address.** (Internet Protocol address) The address of a computer attached to an IP network. Every client and server station must have a unique IP address. A 32-bit address used by a computer on a IP network. Client workstations have either a permanent address or one that is dynamically assigned to them each session. IP addresses are written as four sets of numbers separated by periods; for example, 204.171.64.2.

**IPX/SPX.** Internet Package Exchange/Sequential Packet Exchange. A communications protocol for Novell. IPX is Novell's Layer 3 protocol, similar to XNS and IP, and used in NetWare networks. SPX is Novell's version of the Xerox SPP protocol.

**IS-95.** Interim Standard 95. The EIA/TIA standard that governs the operation of CDMA cellular service. Versions include IS-95A and IS-95B. See CDMA.

---

## K

**Key.** A key is the specific code used by the algorithm to encrypt or decrypt the data. Also see, **Encryption** and **Decrypting**.

---

## L

**laser scanner.** A type of bar code reader that uses a beam of laser light.

**LASER.** Light Amplification by Stimulated Emission of Radiation. The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.

**Laser Diode.** A gallium-arsenide semiconductor type of laser connected to a power source to generate a laser beam. This laser type is a compact source of coherent light.

**LCD.** See **Liquid Crystal Display**.

**LED Indicator.** A semiconductor diode (LED - Light Emitting Diode) used as an indicator, often in digital displays. The semiconductor uses applied voltage to produce light of a certain frequency determined by the semiconductor's particular chemical composition.

**Liquid Crystal Display (LCD).** A display that uses liquid crystal sealed between two glass plates. The crystals are excited by precise electrical charges, causing them to reflect light outside according to their bias. They use little electricity and react relatively quickly. They require external light to reflect their information to the user.

**Light Emitting Diode.** See **LED**.

---

## M

**MC.** Mobile Computer.

**MDN.** Mobile Directory Number. The directory listing telephone number that is dialed (generally using POTS) to reach a mobile unit. The MDN is usually associated with a MIN in a cellular telephone -- in the US and Canada, the MDN and MIN are the same value for voice cellular users. International roaming considerations often result in the MDN being different from the MIN.

**MIL.** 1 mil = 1 thousandth of an inch.

**MIN.** Mobile Identification Number. The unique account number associated with a cellular device. It is broadcast by the cellular device when accessing the cellular system.

**Misread (Misdecode).** A condition which occurs when the data output of a reader or interface controller does not agree with the data encoded within a bar code symbol.

**Mobile Computer.** In this text, mobile computer refers to the MC1000 mobile computer. It can be set up to run as a stand-alone device.

---

## N

**Nominal.** The exact (or ideal) intended value for a specified parameter. Tolerances are specified as positive and negative deviations from this value.

**Nominal Size.** Standard size for a bar code symbol. Most UPC/EAN codes are used over a range of magnifications (e.g., from 0.80 to 2.00 of nominal).

**NVM.** Non-Volatile Memory.

---

## O

**ODI.** See **Open Data-Link Interface**.

**Open Data-Link Interface (ODI).** Novell's driver specification for an interface between network hardware and higher-level protocols. It supports multiple protocols on a single NIC (Network Interface Controller). It is capable of understanding and translating any network information or request sent by any other ODI-compatible protocol into something a NetWare client can understand and process.

---

## P

**Parameter.** A variable that can have different values assigned to it.

**Percent Decode.** The average probability that a single scan of a bar code would result in a successful decode. In a well-designed bar code scanning system, that probability should approach near 100%.

**Print Contrast Signal (PCS).** Measurement of the contrast (brightness difference) between the bars and spaces of a symbol. A minimum PCS value is needed for a bar code symbol to be scannable.  $PCS = (RL - RD) / RL$ , where RL is the reflectance factor of the background and RD the reflectance factor of the dark bars.

**Programming Mode.** The state in which a scanner is configured for parameter values. See **Scanning Mode**.

---

## Q

**Quiet Zone.** A clear space, containing no dark marks, which precedes the start character of a bar code symbol and follows the stop character.

**QWERTY.** A standard keyboard commonly used on North American and some European PC keyboards. "QWERTY" refers to the arrangement of keys on the left side of the third row of keys.

---

## R

**RAM.** Random Access Memory. Data in RAM can be accessed in random order, and quickly written and read.

**Reflectance.** Amount of light returned from an illuminated surface.

**Resolution.** The narrowest element dimension which is distinguished by a particular reading device or printed with a particular device or method.

**ROM.** Read-Only Memory. Data stored in ROM cannot be changed or removed.

**RS-232.** An Electronic Industries Association (EIA) standard that defines the connector, connector pins, and signals used to transfer data serially from one device to another.

---

## S

**Scan Area.** Area intended to contain a symbol.

**Scanner.** An electronic device used to scan bar code symbols and produce a digitized pattern that corresponds to the bars and spaces of the symbol. Its three main components are:

1. Light source (laser or photoelectric cell) - illuminates a bar code.
2. Photodetector - registers the difference in reflected light (more light reflected from spaces).
3. Signal conditioning circuit - transforms optical detector output into a digitized bar pattern.

**Scanning Mode.** The scanner is energized, programmed and ready to read a bar code.

**Scanning Sequence.** A method of programming or configuring parameters for a bar code reading system by scanning bar code menus.

**SDK.** Software Development Kit

**Self-Checking Code.** A symbology that uses a checking algorithm to detect encoding errors within the characters of a bar code symbol.

**SID.** System Identification code. An identifier issued by the FCC for each market. It is also broadcast by the cellular carriers to allow cellular devices to distinguish between the home and roaming service.

**SMDK.** Symbol Mobility Developer's Kit.

**Soft Reset.** See **Warm Boot**.

**Space.** The lighter element of a bar code formed by the background between bars.

**Specular Reflection.** The mirror-like direct reflection of light from a surface, which can cause difficulty decoding a bar code.

**Start/Stop Character.** A pattern of bars and spaces that provides the scanner with start and stop reading instructions and scanning direction. The start and stop characters are normally to the left and right margins of a horizontal code.



**Subnet Mask.** A 32-bit number used to separate the network and host sections of an IP address. A custom subnet mask subdivides an IP network into smaller subsections. The mask is a binary pattern that is matched up with the IP address to turn part of the host ID address field into a field for subnets. Default is often 255.255.255.0.

**Substrate.** A foundation material on which a substance or image is placed.

**SVTP.** Symbol Virtual Terminal Program.

**Symbol.** A scannable unit that encodes data within the conventions of a certain symbology, usually including start/stop characters, quiet zones, data characters and check characters.

**Symbol Aspect Ratio.** The ratio of symbol height to symbol width.

**Symbol Height.** The distance between the outside edges of the quiet zones of the first row and the last row.

**Symbol Length.** Length of symbol measured from the beginning of the quiet zone (margin) adjacent to the start character to the end of the quiet zone (margin) adjacent to a stop character.

**Symbology.** The structural rules and conventions for representing data within a particular bar code type (e.g. UPC/EAN, Code 39, PDF417, etc.).

---

## T

**TFTP.** (Trivial File Transfer Protocol) A version of the TCP/IP FTP (File Transfer Protocol) protocol that has no directory or password capability. It is the protocol used for upgrading firmware, downloading software and remote booting of diskless devices.

**Tolerance.** Allowable deviation from the nominal bar or space width.

**Transmission Control Protocol/Internet Protocol.** See **TCP/IP**.

**Trivial File Transfer Protocol.** See **TFTP**.

**TSR.** See **Terminate and Stay Resident**.

---

## U

**UPC.** Universal Product Code. A relatively complex numeric symbology. Each character consists of two bars and two spaces, each of which is any of four widths. The standard symbology for retail food packages in the United States.

---

## V

**Visible Laser Diode (VLD).** A solid state device which produces visible laser light.

---

## W

**Warm Boot.** A warm boot restarts the mobile computer by closing all running programs. All data that is not saved to flash memory is lost.

# Index

## A

AAA batteries	
AAA battery installation	1-5
alkaline	1-3
AAA battery installation	1-5
accessories	1-2
four slot charge only cradle	3-1
four slot Ethernet cradle	3-1, 3-6
four slot USB cradle	3-4
serial/USB cradle	3-1
single-slot serial cradle	
LED indicators	3-3
single-slot serial/USB cradle	3-2

## B

backup battery	
charging	1-5
batteries	
charging	1-5
battery charging	3-3, 3-5, 3-7
battery status	2-7
beeper volume	2-6
bullets	.xi
buttons	
keypads	2-1

## C

charging	
spare batteries	1-8
charging batteries	1-5
charging spare batteries	1-8
cleaning	4-1
cold boot	1-7
configuration	x

contents	1-1
conventions	
notational	.xi
cradles	
four slot charge only	3-1
four slot Ethernet	3-1, 3-6
charging indicators	3-7
four slot USB	3-4
serial/USB cradle	3-1
single-slot	3-2
LED indicators	3-3

## D

data capture	x
DCP for MC1000	xii
decode ranges	2-11
Device Configuration Package	1-2
Device Configuration Package for MC1000	xii
directory structure	2-14
display	x

## E

entering data with keypad	2-9
entering data with scanner	2-9
entering information	2-9
scanning	2-9

## F

file system directory structure	2-14
four slot charge only	3-1
four slot cradle USB cable	1-2
four slot Ethernet	3-1
four slot Ethernet cradle	3-6
charging indicators	3-7

four slot USB cradle . . . . . 1-2, 3-4, 3-5, 3-7

## H

handstrap . . . . . 1-2  
     handstrap installation . . . . . 1-12  
 hard reset . . . . . 2-13

## I

information, service . . . . . xiii

## K

key combinations  
     using the keypad . . . . . 2-4  
 keypad . . . . . 2-4, 2-9  
 keypads . . . . . x

## L

laser decode ranges . . . . . 2-12  
 li-ion battery installation . . . . . 1-4

## M

main battery  
     inserting . . . . . 1-3  
 maintenance . . . . . 4-1  
 MC1000 Integrator Guide . . . . . ix  
 MC1000 mobile computer . . . . . 1-1  
 memory . . . . . x  
 Microsoft Application Guide . . . . . ix  
 mobile computer  
     cold boot . . . . . 1-7  
     hard reset . . . . . 2-13  
     power on . . . . . 2-1  
     reset . . . . . 2-13  
     soft reset . . . . . 2-13  
     starting . . . . . 1-7

## O

operating environment . . . . . A-1  
 operating system . . . . . x

## P

parts . . . . . 1-3  
 parts of the mobile computer . . . . . 1-3  
 Platform SDK . . . . . 1-2  
 power button . . . . . 2-1  
 power supply . . . . . 1-2

## R

radios . . . . . x  
 remove AAA battery . . . . . 1-8  
 remove Li-ion battery . . . . . 1-7  
 resetting . . . . . 2-13  
 RS232 charge cable . . . . . 1-2

## S

scan indicators . . . . . 2-11  
 scan status . . . . . 2-11  
 scan wedge . . . . . 2-9  
 scanning . . . . . 2-9  
     adjusting the distance . . . . . 2-10  
     angle . . . . . 2-11  
     LED indicators . . . . . 2-11  
     range . . . . . 2-11  
 screen contrast . . . . . 2-6  
 selecting items using the keypad . . . . . 2-4  
 serial/USB cradle . . . . . 3-1  
 service information . . . . . xiii  
 single slot cradle RS232 cable . . . . . 1-2  
 single slot cradle USB cable . . . . . 1-2  
 single slot serial/USB cradle . . . . . 1-2, 3-3  
 single-slot serial cradle  
     LED indicators . . . . . 3-3  
 single-slot serial/USB cradle . . . . . 3-2  
 SMDK for eVC4 . . . . . xii  
 SMDK Help File . . . . . ix  
 soft reset . . . . . 2-13  
 spare batteries  
     charging . . . . . 1-8  
 spare battery  
     charging . . . . . 1-8  
 spare Li-ion battery charging . . . . . 3-3  
 specifications . . . . . A-1  
 starting the mobile computer . . . . . 1-7  
 status icon . . . . . 2-7  
 suspend . . . . . 1-7, 1-8  
 Symbol Application Guide . . . . . ix  
 Symbol Mobility Developer Kit . . . . . 1-2  
 Symbol Mobility Developer Kit for eVC4 . . . . . xii

## T

taskbar . . . . . 2-7  
 troubleshooting . . . . . 4-2  
     mobile computer . . . . . 4-2

## U

UConnect . . . . . 3-5  
 unpacking . . . . . 1-1

USB client charge cable ..... 1-2

**W**

waking the mobile computer ..... 1-7

wrist strap ..... 1-1

    wrist strap installation ..... 1-11







**MOTOROLA**

Motorola, Inc.  
One Motorola Plaza  
Holtsville, New York 11742, USA  
1-800-927-9626  
<http://www.symbol.com>

MOTOROLA and the Stylized M Logo and Symbol and the Symbol logo are registered in the U.S. Patent and Trademark Office.  
All other product or service names are the property of their registered owners.  
© Motorola, Inc. 2007