

SR60 Scanner Instructions–Important USB Information!

If you have purchased the SR60 Scanner with the USB interface, you must scan these bar codes in order to:

- enable the USB interface.
- properly maintain uppercase and lowercase characters.

Start



Enable USB & Kyb



5



2



4



Lower Case=Enable



End



Worldwide Headquarters
6001 36th Avenue West
Everett, Washington 98203
U.S.A.

tel 425.348.2600

fax 425.355.9551

www.intermec.com

© 2006 Intermec Technologies
Corporation. All rights reserved.

SR60 Scanner Instructions – Important USB Information!



P/N 943-091-001 Rev A