

Zebra **Z4M™ / Z6M™** Printers User's Guide



Customer order # 11255L
Manufacturer part # 11255LB Rev. 1

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation. It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the expressed written permission of Zebra Technologies Corporation.

Product Improvements

Continuous improvement of products is a policy of Zebra Technologies Corporation. All specifications and signs are subject to change without notice.

FCC Compliance Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to ensure compliance.

“The user is cautioned that any changes or modifications not expressly approved by Zebra Technologies Corporation could void the user’s authority to operate the equipment.”

Canadian DOC Compliance Statement

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications.

Liability Disclaimer

Zebra Technologies Corporation takes steps to assure that its published Engineering Specifications and Manuals are correct; however, errors do occur. Zebra Technologies Corporation reserves the right to correct any such errors and disclaims liability resulting therefrom.

No Liability for Consequential Damage

In no event shall Zebra Technologies Corporation or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or the results of use of or inability to use such product, even if Zebra Technologies Corporation has been advised of the possibility of such damages. Because some states do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

Copyrights

This copyrighted manual and the label printers described herein are owned by Zebra Technologies Corporation. All rights are reserved. Unauthorized reproduction of this manual or the software in the label printer may result in imprisonment of up to one year and fines of up to \$10,000 (17 U.S.C.506). Copyright violators may be subject to civil liability.

All products and brand names are trademarks of their respective companies. All rights reserved.

© 2001 Zebra Technologies Corporation. All rights reserved.

DECLARATION OF CONFORMITY

I have determined that the Zebra printers identified as the

Z4MTM and Z6MTM

manufactured by:

Zebra Technologies Corporation

333 Corporate Woods Parkway
Vernon Hills, Illinois 60061-3109 U.S.A.

have been shown to comply with the applicable technical standards of the FCC

for Home, Office, Commercial, and Industrial use

if no unauthorized change is made in the equipment,
and if the equipment is properly maintained and operated.


Chris Kueker



WARRANTY INFORMATION

Effective January 1, 1997

Printer Warranty

Zebra Technologies Corporation's (Zebra®) printers, excluding thermal printheads which are warranted separately below, are warranted against defects in material or workmanship for twelve (12) months from the date of original shipment by Zebra Technologies Corporation. This warranty does not cover normal wear and tear and shall be null and void if the equipment is modified, improperly installed or used, damaged by accident or neglect, or in the event any parts are improperly installed or replaced by the user.

Since printhead wear is part of normal operations, the original printhead and replacement printheads are covered by a limited warranty of six (6) months from the date of original shipment by Zebra Technologies Corporation. To qualify for this warranty, the printer must be returned to the factory or other authorized service center. Although the user is not required to purchase Zebra brand supplies (media and/or ribbons), to the extent it is determined that the use of other supplies (media and/or ribbons) shall have caused any defect in the thermal printhead for which a warranty claim is made, the user shall be responsible for Zebra Technologies Corporation's customary charges for labor and materials to repair such defect. To the extent that it is determined that failure to follow the preventive maintenance schedule and procedures listed in the User's Guide shall have caused any defect in the thermal printhead for which a warranty claim is made, this limited warranty shall be void.

**ZEBRA TECHNOLOGIES CORPORATION'S SOLE OBLIGATION
UNDER THIS WARRANTY SHALL BE TO FURNISH PARTS AND
LABOR FOR THE REPAIR OR REPLACEMENT OF PRODUCTS
FOUND TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP
DURING THE WARRANTY PERIOD.**

As a condition of this warranty, the user must: (a) obtain a Zebra Return Authorization for the printer, or subassembly(s); (b) ship the printer or subassembly(s), transportation prepaid to the authorized service location; and (c) include with the Product or subassembly(s) a written description of the claimed defect. Unless Zebra Technologies Corporation authorizes return of the entire Product, the user shall return only the subassembly(s). Products returned shall be packaged in the original packing and shipping container or comparable container. In the event equipment is not so packaged or if shipping damage is evident, it will not be accepted for service under warranty. Surface transportation charges for the return of the printer to the customer shall be paid by Zebra Technologies Corporation within the 48 contiguous states and the District of Columbia. Customer shall pay shipping costs, customs clearance, and other related charges outside the designated area. If Zebra Technologies Corporation determines that the Product returned to it for warranty service or replacement is not defective as herein defined, BUYER shall pay all costs of handling and transportation.

Supplies Warranty

Zebra supplies are warranted to be free from defects in materials or workmanship for a period of either the stated material shelf life or six (6) months from date of shipment, whichever occurs first, provided that the BUYER has complied with Zebra Technologies Corporation guidelines on storage, handling, and usage of the labeling supplies in Zebra printers. Zebra Technologies Corporation does not warrant the performance of Zebra labeling supplies on non-Zebra printers.

Any supplies product shown to the satisfaction of Zebra Technologies Corporation, within the time provided, to be so defective shall be replaced without charge, or Zebra Technologies Corporation may issue a credit in such an amount as it deems reasonable.

Warranty Exclusions and Conditions

The above warranties are in lieu of all other warranties, expressed or implied, oral or written, statutory or otherwise, including any ***implied warranty of merchantability or fitness for a particular purpose***.

Zebra Technologies Corporation shall not be responsible for the specific application to which any Products are applied, including but not limited to compatibility with other equipment.

All statements, technical information and recommendations relating to Zebra Products are based upon tests believed to be reliable but do not constitute a guarantee or warranty.

ZEBRA TECHNOLOGIES CORPORATION SHALL NOT, UNDER ANY CIRCUMSTANCES WHATSOEVER, BE LIABLE TO BUYER OR ANY OTHER PARTY FOR LOST PROFITS, DIMINUTION OF GOOD WILL OR ANY OTHER SPECIAL OR CONSEQUENTIAL DAMAGES WHATSOEVER WITH RESPECT TO ANY CLAIM HEREUNDER. IN ADDITION, ZEBRA TECHNOLOGIES CORPORATION'S LIABILITY FOR WARRANTY CLAIMS SHALL NOT, IN ANY EVENT, EXCEED THE INVOICE PRICE OF THE PRODUCT CLAIMED DEFECTIVE, NOR SHALL ZEBRA TECHNOLOGIES CORPORATION BE LIABLE FOR DELAYS IN REPLACEMENT OR REPAIR OF PRODUCTS.

No salesperson, representative or agent of Zebra Technologies Corporation is authorized to make any guarantee, warranty, or representation in addition to the foregoing warranty.

NO WAIVER, ALTERATION, ADDITION, OR MODIFICATION OF THE FOREGOING WARRANTIES SHALL BE VALID UNLESS MADE IN WRITING AND SIGNED BY AN EXECUTIVE OFFICER OF ZEBRA TECHNOLOGIES CORPORATION.

Software License Agreement

Software and documentation provided by Zebra Technologies Corporation are protected by the United States copyright law and international treaty, and therefore you must treat them like a book, with the exception that you may make copies of the software to protect yourself against loss of the original.

Your right to use the software and documentation as described below is non-exclusive and non-transferable. Zebra retains ownership in the software and documentation and all other right, title and interest. The software and documentation may be used by any number of people and the software may be freely moved from one computer to another as long as there is no possibility of it being used by more than one person on more than one computer at the same time.

Machine readable files representing graphics or fonts which you have created independently may be converted to ZPL format files using the software and such files may be used, copied onto diskettes or font cards, given away, or sold without paying license fees to Zebra.

Pictorial or graphic images and machine readable files representing them may be protected by United States copyright law and international treaty provisions which prohibits you from transcribing or scanning such images or using copying, or converting such files without permission of the copyright owner. You may not use this software in violation of the U.S. copyright law or international treaty. By using this software, you agree to be bound by these terms.

Zebra Technologies Corporation warrants the software diskette to be free of defects in material and workmanship for a period of 60 days from the date of purchase. In the event of notification within the warranty period of defects in material and workmanship, Zebra will replace the defective diskette or documentation. Zebra specifically disclaims all other warranties, expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose. **IN NO EVENT WILL ZEBRA TECHNOLOGIES CORPORATION BE LIABLE FOR LOST PROFITS, LOST DATA, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ABUSE OR MISAPPLICATION OF THE SOFTWARE OR BY ITS USE IN VIOLATION OF THE U.S. COPYRIGHT LAW OR INTERNATIONAL TREATY.**



Table of Contents

<i>Welcome</i>	1
Hello!	1
Unpacking and Inspection	1
Reporting Damage	2
Storage	2
Media and Ribbon Requirements	2
Printer Power	3
Printer Overview	4
<i>Calibrating the Printer</i>	5
Purpose	5
Types of Media	6
Non-Continuous Web Media	6
Non-Continuous Black Mark Media	7
Continuous Media	7
Choosing the Print Mode	8
Loading the Media	8
Positioning the Media Sensor	9
Reflective Sensor	9
Adjusting the Reflective Sensor	10
Transmissive Sensor	11
Loading the Ribbon	11
Auto Calibration	12
Operator Controls	13
POWER Switch	13
Front Panel	13
Configuring the Printer	14
Configuring the Software of Printer Driver	15
Printing a Test Label	15

<i>Establishing Communication</i>	17
System Considerations	17
Interfaces	17
Data Specifications	17
Cabling Requirements	18
<i>Printer Basics</i>	19
Front Panel	19
Front Panel Display	19
Front Panel Keys	20
Front Panel Lights	21
Roll Media Loading	22
Tear-off Mode	22
Cutter Mode	23
Value Peel-off Mode	24
Liner Take-up Mode	26
Power Peel-off Mode	28
Power Rewind Mode	30
Fanfold Media Loading	32
Ribbon Loading	34
Loading the Ribbon	34
Ribbon Removal	36
<i>Configuration</i>	37
Entering the Setup Mode	37
Changing Password-Protected Parameters	38
Leaving the Setup Mode	39
Configuration and Calibration Sequence	40
<i>Routine Care and Adjustments</i>	55
Cleaning	55
Cleaning the Exterior	56
Cleaning the Interior	56
Cleaning the Printhead and Platen Roller	56
Cleaning the Sensors	57
Cleaning the Power Peel-Off Module	58
Cleaning the Value Peel-Off Module	59
Cleaning the Cutter Module	60

Lubrication	61
Printhead Pressure Adjustment	62
Power Rewind Media Alignment	64
Fuse Replacement	65
<i>Troubleshooting</i>	<i>67</i>
LCD Error Conditions and Warnings	67
Print Quality Problems	69
Communication Problems	71
Printer Diagnostics	73
Power-On Self Test	73
Additional Printer Self Tests	73
CANCEL Key Self Test	74
PAUSE Key Self Test	75
FEED Key Self Test	76
Loading Factory Defaults	77
<i>Specifications</i>	<i>79</i>
General Specifications	79
Printing Specifications	80
Ribbon Specifications	80
Media Specifications	81
Options	81
Zebra Programming Language (ZPL II)	82
Bar codes	82
AC Power Cord	83
<i>Appendix</i>	<i>85</i>
Printer Interface Technical Information	85
Serial Data Communications	85
Parallel Data Communications	89
<i>Index</i>	<i>91</i>



Welcome

Hello!

- This user's guide provides all the information you will need to operate either the Z4M™ or Z6M™ printer.
- The *ZPL II® Programming Guide Volume I and Volume II* (part # 45540L) show you how to create the perfect label format for your application. These books also explain how, through optional ZBI™, you can extend the power of ZPL II by allowing custom programs to be written that operate within the printer, directly interfacing with, for example, bar code scanners and keyboard display devices. In addition, the books contain information about the enhanced operating system features of your printer. There are three ways to obtain these books: on the accessory CD-ROM (supplied with the printer); on our web site (www.zebra.com); or by ordering printed manuals from your distributor.
- The *ZebraNet® Networking: PrintServer II™ Installation and User's Guide* (part # 45537L) explains how you can quickly set up your printer on an IP network (optional ZebraNet PrintServer II required).
- There is also a maintenance manual for your printer. This manual (part # 77259L) contains the information you will need to maintain your printer.

Unpacking and Inspection

Inspect the printer for possible shipping damage:

- Check all exterior surfaces.
- Raise the media access door and inspect the media compartment.

In case shipping is required, save the carton and all packing material. Contact your authorized Zebra reseller for instructions.

Reporting Damage

If you discover shipping damage:

- Immediately notify the shipping company and file a damage report. *Zebra Technologies Corporation is not responsible for any damage incurred during the shipment of the equipment and will not repair this damage under warranty.*
- Keep the carton and all packing material for inspection.
- Notify your local Zebra reseller.

Storage

If you are not placing the printer into operation immediately, repackage it using the original packing materials. The printer may be stored under the following conditions:

- Temperature: -40° F to 140° F (-40° C to 60° C)
- Relative humidity: 5% to 85%, non-condensing

Media and Ribbon Requirements

Since print quality is affected by media and ribbon, printing speeds, and printer operating modes, it is very important to run tests for your applications.

We *strongly recommend* the use of Zebra Technologies Corporation-brand supplies for continuous high-quality printing. A wide range of paper, polypropylene, polyester, and vinyl stock has been specifically engineered to enhance the printing capabilities of the printer and to ensure against premature printhead wear.

- Continuous roll media, fanfold media, or card stock with optional perforations and registration holes may be used.
- Printhead life may be reduced by the abrasion of exposed paper fibers when using perforated media.
- The ribbon **MUST** be as wide as or wider than the media being used. If the ribbon is narrower than the media, areas of the printhead will be unprotected and subject to premature wear. (When printing in direct thermal mode, ribbon is not used and should not be loaded in the printer.)

Printer Power

The power supply in the printer automatically detects the applied line voltage and works in the 90 to 265 VAC range.



WARNING!!! For personnel and equipment safety, always use a three-prong plug with an earth ground connection.

NOTE: Depending on how your printer was ordered, a power cord may or may not be included. If one is not included, or if the one included is not suitable for your requirements, refer to “Power Line Cord Specifications” on [page 83](#).

Refer to Figure 1.

The AC power cord connector must be plugged into the mating connector at the rear of the printer.

Make sure that the POWER switch is in the “off” position before connecting the power cord to an electrical outlet.

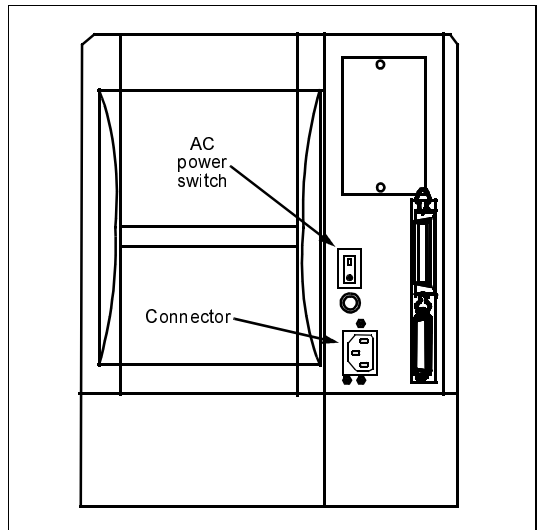


Figure 1

Printer Overview

The following diagram outlines the basic components of your printer. However, depending on the options you have selected, your printer may look slightly different.

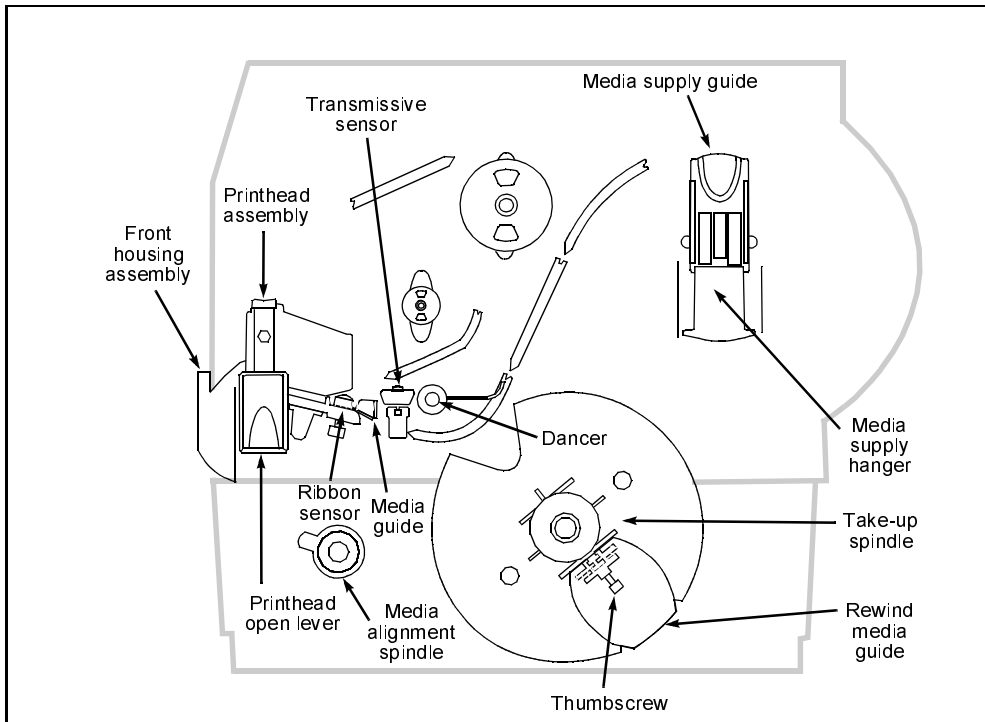


Figure 2

Calibrating the Printer

This chapter of the user's guide is *so* important that we've printed it on a different color paper! That way, it will be easy for you to find when you must calibrate (set up) the printer for your particular application.

Purpose

- To calibrate the printer.
- To verify that the printer is properly set up by printing a test label.

NOTE: This procedure must be performed when the printer is first installed or when it cannot properly detect the top of the label.

To calibrate the printer, you must do the following (all of the instructions are contained in this chapter):

- Determine the **type of media** (labels) being used.
- Choose the **print method**.
- Position the **media sensor** (if necessary).
- **Configure the printer and software or driver** based on the label being used.
- Print a **test label**.

Types of Media

Non-Continuous Web Media

Non-continuous web media (refer to Figure 3) refers to individual labels that are separated by a gap, notch, or hole. When you look at the media, you can tell where one label ends and the next one begins.

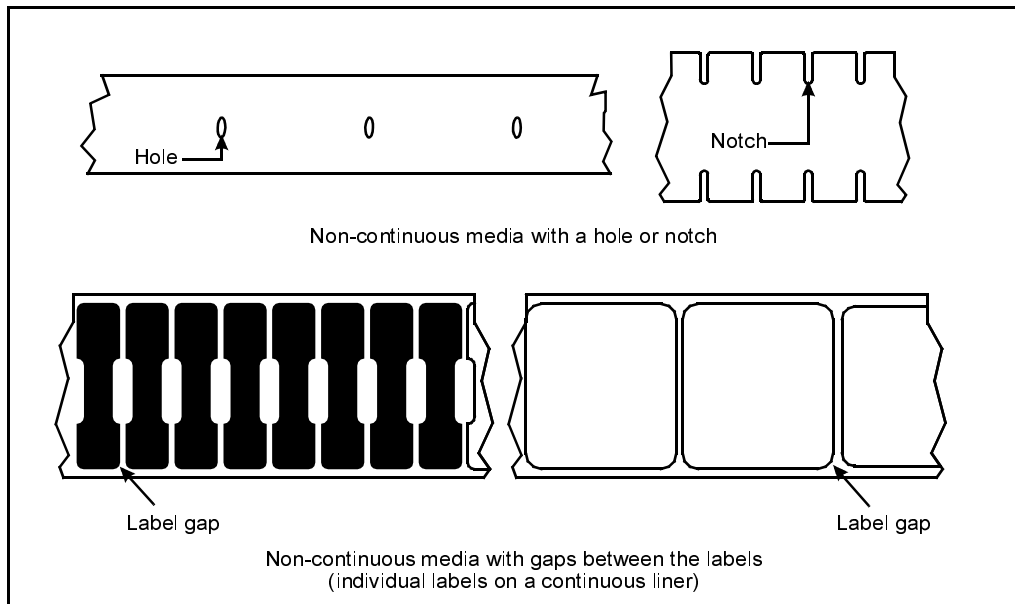


Figure 3

Non-Continuous Black Mark Media

Non-continuous black mark media has black marks printed on the back that indicate the start and end of each label (refer to Figure 4).

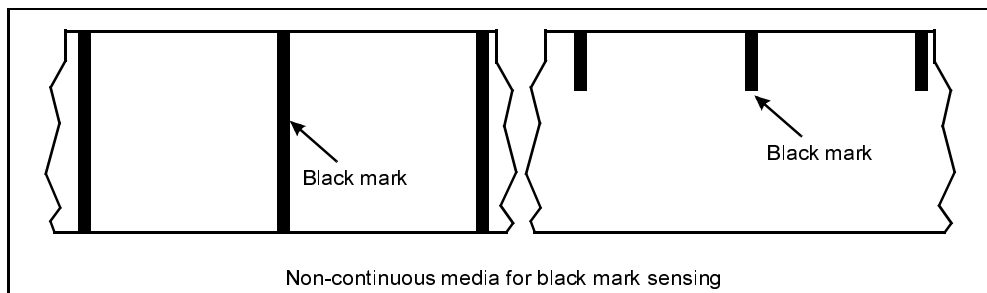


Figure 4

Continuous Media

Continuous media (refer to Figure 5) is one uninterrupted roll of material that allows the image to be printed anywhere on the label.

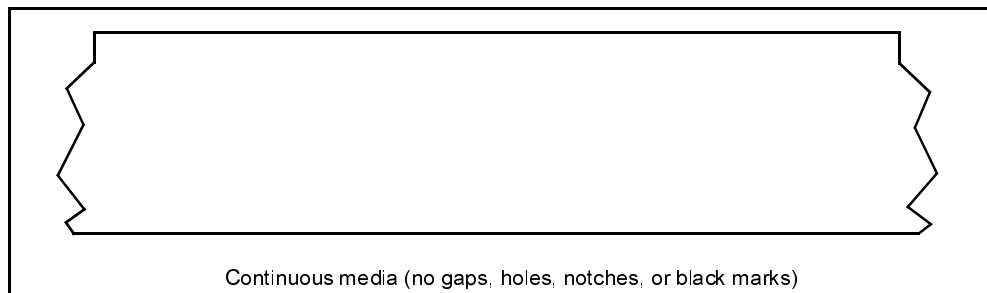


Figure 5

Choosing the Print Mode

- **Tear-off** mode allows you to tear off each label (or a strip of labels) after it is printed.
- In **peel-off** mode, backing material is peeled away from the label as it is printed. After this label is removed from the printer, the next one is printed.
- In **cutter** mode, the printer automatically cuts the label after it is printed.
- In **rewind** mode, the media and/or backing are rewound onto a core as the labels are printed.

Loading the Media

Figure 6 illustrates one method of media loading. For more detailed instructions, as well as information about how to load the different types of media and the various printing modes, refer to the instructions that begin on [page 22](#).

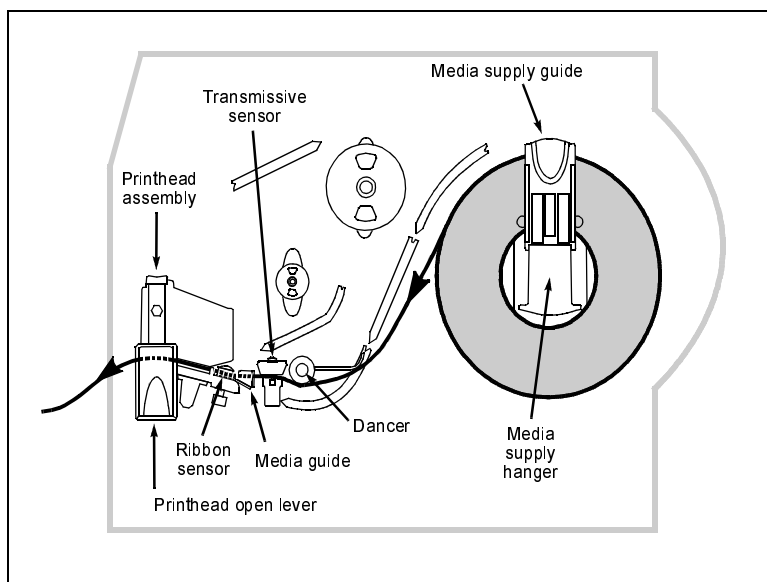


Figure 6

Positioning the Media Sensor

The correct positioning of the media sensor is important. It can make the difference between a perfect label and a call to Technical Support!

There are two media sensors in this printer: “reflective” and “transmissive.”

Reflective Sensor

The reflective sensor detects the “start-of-label indicator” (the notch, hole, black mark, or gap between die-cut labels).

The reflective sensor must be positioned:

- directly under the notch, hole, or black mark, or
- anywhere along the width of the media if there is a gap between labels

The glow of the red light through the media will help you to accurately position the reflective sensor.

NOTE: If you are using continuous media, position the reflective sensor anywhere under the media so that the printer can detect an out-of-paper condition.

The reflective sensor is compatible with most types of media. However, if you encounter difficulties with calibration, use the transmissive sensor. For details, see “Transmissive Sensor” on [page 11](#).

Adjusting the Reflective Sensor

Refer to Figure 7.

1. Open the printhead assembly by pressing the printhead open lever.
2. Locate the reflective sensor positioning lever.
3. Move the reflective sensor positioning lever across the width of the media until the reflective sensor aligns with the start-of-label indicator. The glow of the red light will assist in the proper placement of the reflective sensor.
4. Close the printhead assembly.

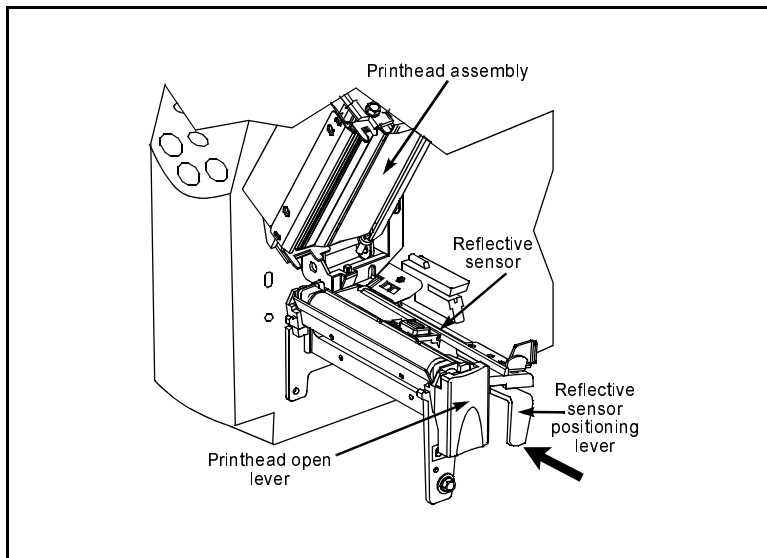


Figure 7

Transmissive Sensor

The transmissive sensor is in a fixed position and enabled via the front panel (details in “SENSOR SELECT” on [page 41](#)).

Loading the Ribbon

Refer to Figure 8.

For more detailed information, refer to the instructions that begin on [page 34](#).

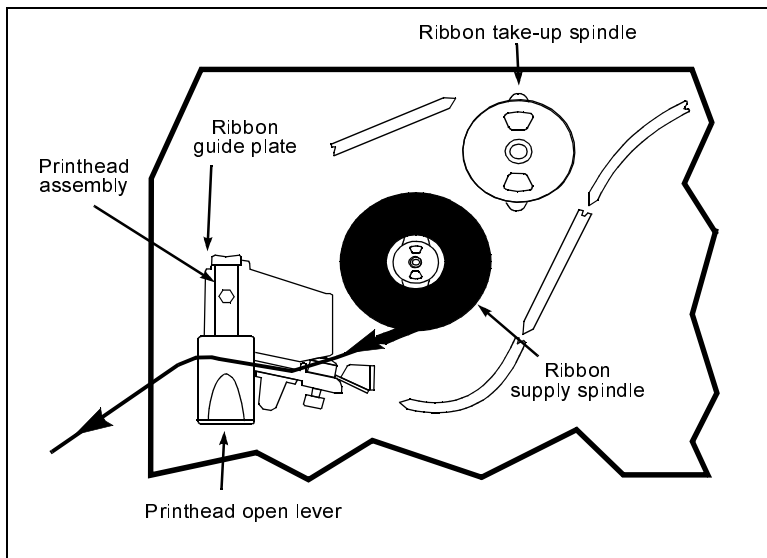


Figure 8

Auto Calibration

When auto calibrating, the printer is determining the label length and media/ribbon sensor settings.

Auto calibration occurs when the printer is turned on and each time the printer recovers from an error condition. (To clear an error, open and close the printhead assembly and then press the PAUSE key.) The printer will begin to auto calibrate when all errors have been cleared.

The results of the auto calibration are stored in the printer's memory and are retained even if printer power is removed. These parameters remain in effect until the next calibration is performed.

NOTE: The auto calibration process will not take place if the ZPL command or front panel setting for “MEDIA POWER UP” or “HEAD CLOSE” is set to either “feed” or “no motion.” In these cases, the printer assumes the media is correctly positioned and starts printing without auto calibrating.

Operator Controls

POWER Switch

The POWER switch is located at the back of the printer above the power cord. Turn on the printer.

Front Panel

For a more detailed explanation of the front panel keys and lights (as shown in Figure 9), refer to the instructions that begin on [page 19](#).

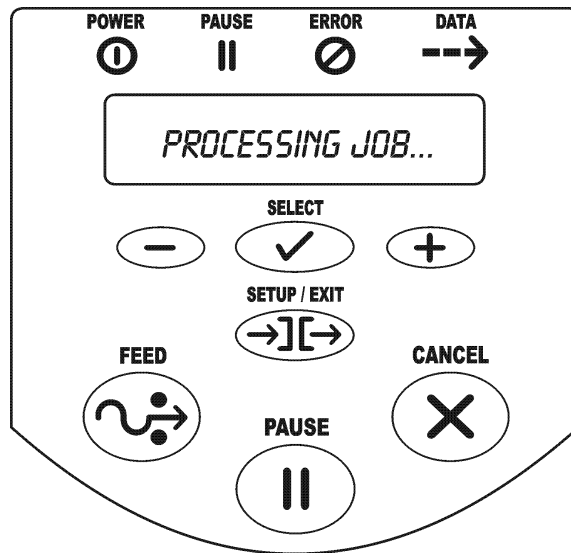


Figure 9

Configuring the Printer

The configuration procedure in the next table contains the information you need to get your printer up and running, *but it is not comprehensive*. Refer to [page 40](#) for more information.

- Press the SETUP/EXIT key at the “PRINTER READY” display to enter the configuration mode.

NOTE: *You will need to press the INCREMENT (+) key more than once to advance to some of the displays.*

- Press the INCREMENT (+) or DECREMENT (-) key to scroll to the setting you wish to change.
- Press the SELECT key to toggle the functionality of the INCREMENT (+) and DECREMENT (-) keys.
- Press the INCREMENT (+) or DECREMENT (-) keys to increase or decrease the value; answer “yes” or “no”; print a label; or select the digit you wish to change.
- Press the SELECT key again to use the INCREMENT (+) and DECREMENT (-) keys to scroll to the desired menu item.

Parameter	Selections/Explanation
PRINTER READY	You are ready to configure the printer
DARKNESS	0 to 30 (default setting is “10”)
PRINT MODE	Tear-off, peel-off, liner take-up, cutter, rewind (default setting is “non-continuous”)
MEDIA TYPE	Non-continuous, continuous (default setting is “non-continuous”)
SENSOR TYPE	Web, mark (default setting is “web”)
PRINT METHOD	Thermal transfer, direct thermal (default setting is “thermal transfer”)

- After you have configured the print method, press the SETUP/EXIT key to save the changes and exit the configuration mode.

Configuring the Software of Printer Driver

Many printer settings may also be controlled by your printer's driver or label preparation software. Refer to the driver or software documentation for more information.

Printing a Test Label

To print a test label:

1. Turn off the printer.
2. Press and hold the CANCEL key while turning on the printer.
3. Release the key after the DATA light turns off (approximately five seconds).

A configuration label, which shows the printer's currently stored parameters, will print (similar to the labels shown in Figure 10).

Z4M Test Label		Z6M Test Label	
PRINTER CONFIGURATION		PRINTER CONFIGURATION	
Zebra Technologies ZTC Z4M-200dpi		Zebra Technologies ZTC Z6M-300dpi	
+10.....	DARKNESS	+11.....	DARKNESS
+000.....	TEAR OFF	+000.....	TEAR OFF
TEAR OFF.....	PRINT MODE	TEAR OFF.....	PRINT MODE
NON-CONTINUOUS.....	MEDIA TYPE	CONTINUOUS.....	MEDIA TYPE
WEB.....	SENSOR SELECT	WEB.....	SENSOR SELECT
AUTO SELECT.....	SENSOR SELECT	AUTO SELECT.....	SENSOR SELECT
THERMAL-TRANS.....	PRINT METHOD	THERMAL-TRANS.....	PRINT METHOD
104 0/8 MM.....	PRINT WIDTH	188 00/12 IN.....	PRINT WIDTH
1233.....	LABEL LENGTH	1219.....	LABEL LENGTH
PARALLEL.....	PARALLEL COMM.	RS232.....	SERIAL COMM.
RS232.....	SERIAL COMM.	38400.....	BAUD
19200.....	BAUD	8 BITS.....	DATA BITS
8 BITS.....	DATA BITS	NONE.....	PARITY
NONE.....	PARITY	XON/XOFF.....	HOST HANDSHAKE
DSR/OTR.....	HOST HANDSHAKE	NONE.....	PROTOCOL
NONE.....	PROTOCOL	000.....	NETWORK ID
000.....	NETWORK ID	NORMAL MODE.....	COMMUNICATIONS
<> ZEH.....	CONTROL PREFIX	<> ZEH.....	CONTROL PREFIX
<> SEH.....	FORMAT PREFIX	<> SEH.....	FORMAT PREFIX
<> ZCH.....	DELIMITER CHAR	<> ZCH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE	ZPL II.....	ZPL MODE
CALIBRATION.....	MEDIA POWER UP	CALIBRATION.....	MEDIA POWER UP
CALIBRATION.....	HEAD CLOSE	CALIBRATION.....	HEAD CLOSE
DEFAULT.....	BACKFEED	DEFAULT.....	BACKFEED
+000.....	LABEL TOP	+000.....	LABEL TOP
-000.....	LEFT POSITION	-000.....	LEFT POSITION
023.....	WEB S.	058.....	MEDIA S.
066.....	MEDIA S.	072.....	RIBBON S.
073.....	RIBBON S.	001.....	TAKE LABEL
167.....	MEDIA LED	213.....	MEDIA LED
000.....	RIBBON LED	111.....	RIBBON LED
+10.....	LCD ADJUST	001.....	TAKE LABEL
DPSWFXH.....	MODES ENABLED	213.....	MEDIA LED
532 8/11 FULL.....	MODES DISABLED	111.....	RIBBON LED
VX.X.X.X.....	RESOLUTION	DPSWFXH.....	MODES ENABLED
CUSTOMIZED.....	MODES DISABLED	1984 12/11 FULL.....	MODES DISABLED
3072.....	RESOLUTION	199 10/302.....	RESOLUTION
2048.....	ONBOARD FLASH	V1.9.0.0.....	FIRMWARE
NONE.....	FORMAT CONVERT	3072.....	CONFIGURATION
NONE.....	OPTION	NONE.....	RAH
NONE.....	ZEBRA NET II	NONE.....	MEMORY CARD
		2048.....	ONBOARD FLASH
		NONE.....	FORMAT CONVERT
		NONE.....	OPTION
		PERMANENT.....	TP RESOLUTION
		ALL.....	TP PROTOCOL
		010.003.004.150.....	TP ADDRESS
		255.000.000.000.....	SUBNET MASK
		000.000.000.000.....	DEFAULT GATEWAY
		2000-12-18 12:18:18.....	TIME STAMP

Figure 10

If you encounter any problems while you are configuring the printer or printing a test label, refer to *Troubleshooting*, which starts on [page 67](#). Otherwise, refer to *Establishing Communication* on [page 17](#) to set up the communication parameters.



Establishing Communication

System Considerations

Interfaces

The method of interfacing this printer to a data source depends on the communication options installed in the printer. The standard interfaces are an RS-232C/RS-422/RS-485 serial data port and a bi-directional parallel port. The optional ZebraNet PrintServer II enables printers to be connected to 10Base-T Ethernet networks.

Data Specifications

When communicating via an asynchronous serial data port (refer to Figure 11), the baud rate, number of data and stop bits, parity, and handshaking are user selectable (default settings are 9600 baud, 8 data bits, 1 stop bit, no parity, and XON/XOFF). Parity only applies to data transmitted by the printer since the parity of received data is ignored. Refer to [page 46](#) to configure the communication parameters for the printer. The values selected must be the same as those used by the host equipment connected to the printer.

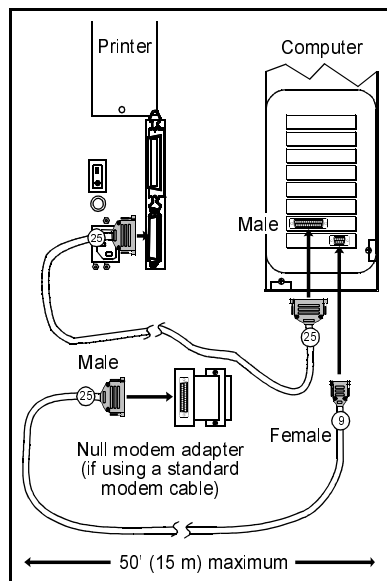


Figure 11

When communicating via the parallel port (refer to Figure 12), the previously mentioned parameters are not considered.

For serial and parallel pinout and technical information, refer to the *Appendix* on [page 85](#).

Cabling Requirements

Data cables must be fully shielded and fitted with metal or metalized connector shells. Shielded cables and connectors are required to prevent radiation and reception of electrical noise.

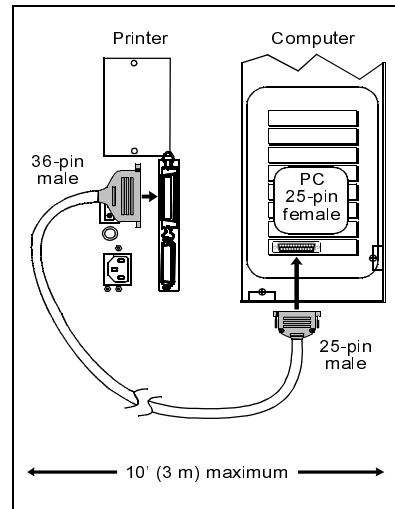


Figure 12

To minimize electrical noise pickup in the cable:

- Keep data cables as short as possible.
- Do not bundle the data cables tightly with the power cords.
- Do not tie the data cables to power wire conduits.

NOTE: Zebra printers comply with FCC “Rules and Regulations,” Part 15, for Class B Equipment, using fully shielded data cables. Use of unshielded cables may increase radiated emission above the Class B limits.

RS-422 and RS-485 applications should use twisted shielded pairs as recommended in the Appendix of the TA/EA.-485 Specification.

Printer Basics

Front Panel

This section discusses the functions of the various controls and indicators on the printer. The operator should become familiar with each of these functions.

Front Panel Display

The front panel display (as shown in Figure 13) communicates operational status and programming modes and parameters.

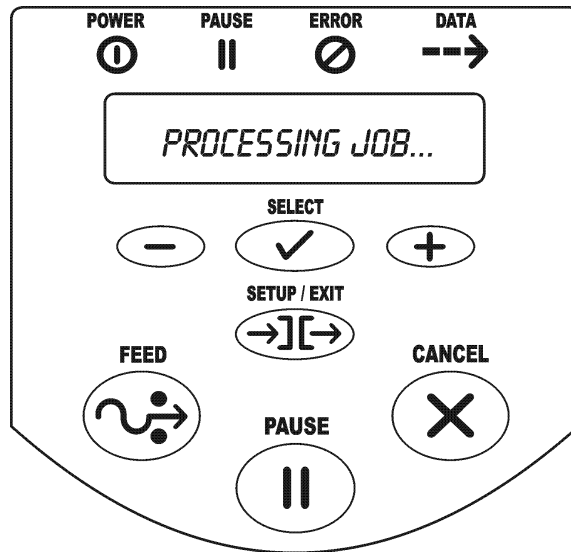


Figure 13

Front Panel Keys

Key	Function
FEED	Forces the printer to feed one blank label each time the key is pressed. <ul style="list-style-type: none"> Printer not printing: one blank label immediately feeds. Printing: one blank label feeds after the current batch of labels is complete.
PAUSE	Starts and stops the printing process: <ul style="list-style-type: none"> Printer not printing: no printing occurs. (Press PAUSE again to resume printing.) Printing: printing stops once the current batch is complete.
CANCEL	When in the pause mode, this key will cancel print jobs. <ul style="list-style-type: none"> Printer not printing: the next stored label format will not print. Printing: the label format currently printing is cancelled. Press and hold for several seconds to cancel all print jobs in the printer's memory.
SETUP/EXIT	Enters and exits the configuration mode.
SELECT	Toggles the function of the INCREMENT (+) and DECREMENT (-) keys between the "scroll" and "change" modes. <ul style="list-style-type: none"> Press once to use the INCREMENT (+) and DECREMENT (-) keys to change the values of the selection. Press again to use the INCREMENT (+) and DECREMENT (-) keys to scroll through the menu items.
INCREMENT (+) ("scroll mode")	Scrolls to the next selection.
INCREMENT (+) ("change mode")	<ul style="list-style-type: none"> Increases the value Answers "yes" Prints a label (when applicable)
DECREMENT (-) ("scroll mode")	Scrolls to the previous selection.
DECREMENT (-) ("change mode")	<ul style="list-style-type: none"> Decreases the value Selects the digit you wish to change Answers "no"

Front Panel Lights

Light	Status	Indication
POWER	Off	The printer is off or no power is applied.
	On	The printer is on.
PAUSE	Off	Normal printer operation.
	On	The printer has stopped all printing operations.
	Flashing	In peel-off mode, the PAUSE light flashes when the label is available for removal, and when initializing FLASH or PCMCIA memory.
ERROR	Off	Normal printer operation (no errors).
	Slow flashing	"RIBBON IN" warning, "HEAD UNDER TEMP" warning, or "HEAD OVER TEMP" error.
	Fast flashing	"HEAD OPEN" error.
	On	"PAPER OUT", "RIBBON OUT", or "CUTTER JAM" errors.
DATA	Off	Normal printer operation (no data being received or processed).
	One flash	The CANCEL key is pressed and a format is successfully cancelled.
	Slow flashing	The printer is unable to accept more data from the host.
	Fast flashing	The printer is receiving data.
	On	A partial format has been received and there has been no subsequent data activity.

Roll Media Loading

Tear-off Mode

Refer to Figure 14.

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, under the ribbon sensor, and out the front of the printer.
7. Ensure that the media is against the back of the transmissive sensor. Slide in the media guide so that it just touches, but does not restrict, the edge of the media.
8. Close the printhead assembly.

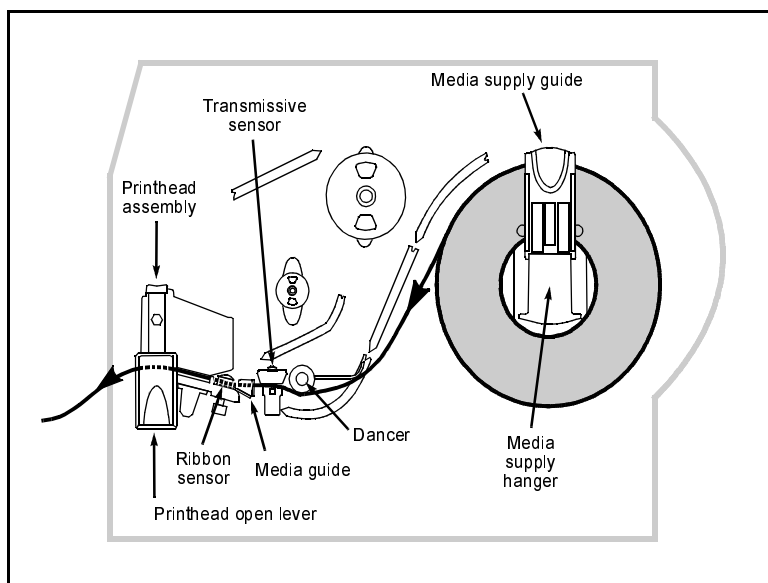


Figure 14

Cutter Mode

(Cutter option required)

Refer to Figure 15.

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, under the ribbon sensor, and through the cutter module.
7. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
8. Close the printhead assembly.

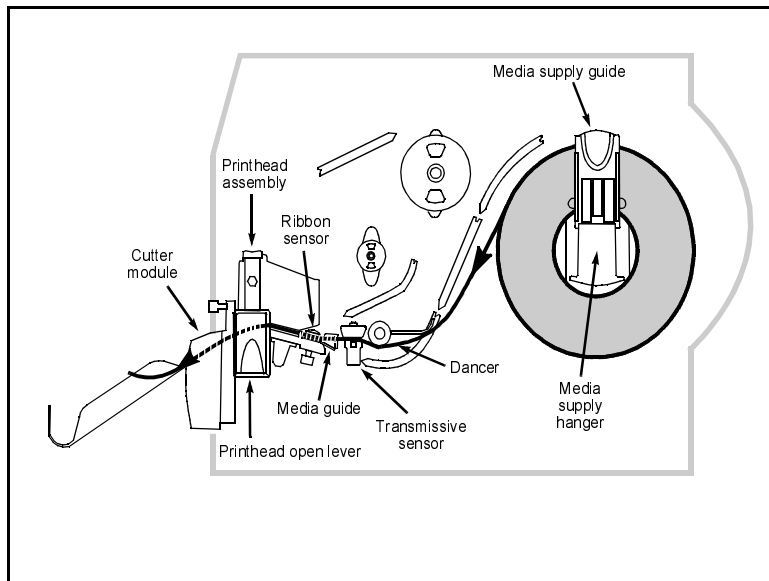


Figure 15

Value Peel-off Mode

(Value peel-off option required)

Refer to [Figure 16](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, under the ribbon sensor, and through the cutter module.
7. Pull approximately 12” (305 mm) of media through the front of the printer.
8. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
9. Pull down the lever to open the pivot bracket assembly.
10. Feed the liner over the tear-off/peel-off bar and behind the pivot bracket assembly.
11. Close the printhead assembly.
12. Close the pivot bracket assembly.
13. Peeling will automatically start. Press the FEED key to test.

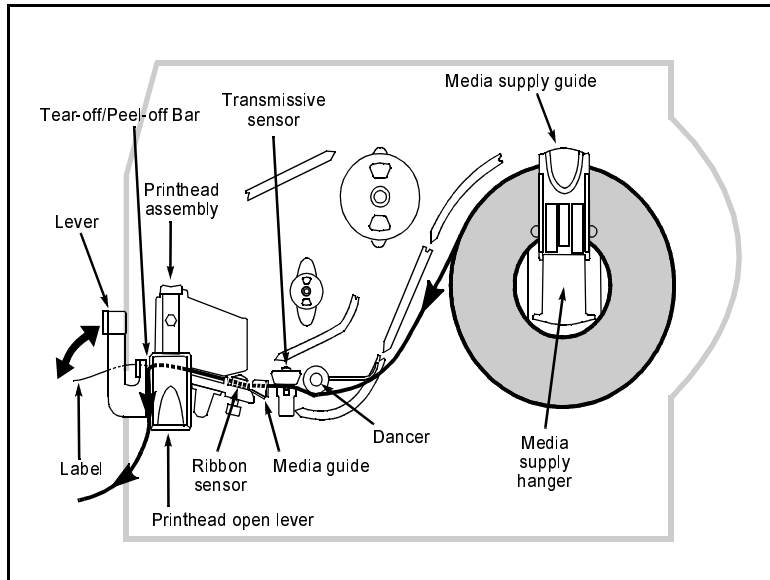


Figure 16


Liner Take-up Mode

(Liner take-up option required)

NOTE: This option is available on the Z4M printer only.

Refer to [Figure 17](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, and under the ribbon sensor.
7. Pull approximately 18" (500 mm) of media through the front of the printer.
8. Remove the labels from the 18" of media so that only the liner remains.
9. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
10. Pull down the lever to open the pivot bracket assembly, on the peel assembly.
11. Feed the media over the tear-off/peel-off bar and behind the pivot bracket assembly.
12. Close the printhead assembly.
13. Close the pivot bracket assembly.
14. Slide the liner into the slot in the spindle (as shown). Make sure the liner is resting against the back plate of the spindle assembly.
15. Turn the spindle assembly counter-clockwise a few times so that the liner is snug.
16. Peeling will automatically start. Press the FEED key to test.

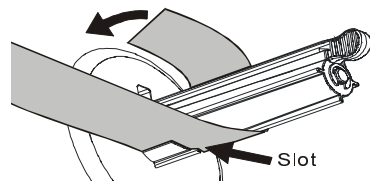


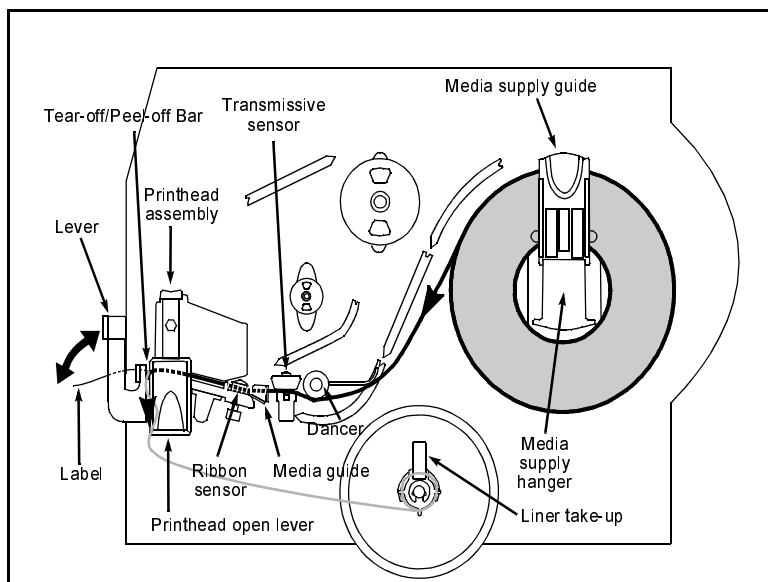


Figure 17

Liner Removal

1. Pull the purple fin towards you (as shown) until it stops (about a third of the way down the liner take-up spindle).
2. Slide the liner from the take-up spindle.

NOTE: The purple fin should slide smoothly back into place on the liner take-up spindle once the liner has been removed.

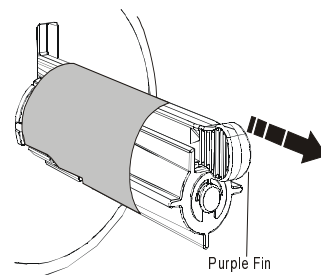

Power Peel-off Mode

(Power peel-off option required)

Refer to [Figure 18](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, and under the ribbon sensor.
7. Pull approximately 36" (1 m) of media through the front of the printer.
8. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
9. Open the front housing assembly by lifting the handles; then, pivot down the front housing assembly.
10. Remove at least 12" (305 mm) of labels from the backing material.
11. Feed the backing material over the tear-off/peel-off bar, through the rectangular cutout in the mounting bracket, and under the media alignment spindle.
12. Close the front housing assembly by slightly lifting and then hooking it onto the pins on the tear-off/peel-off bar.
13. Loosen the thumbscrew and slide out the rewind media guide to the end of the take-up spindle.
14. Wrap the backing around a core placed on the take-up spindle; then, turn the take-up spindle counterclockwise to wind up the excess backing material.
15. Slide the rewind media guide against the backing material and tighten the thumbscrew to lock it into position.
16. Close the front housing assembly.
17. Close the printhead assembly.

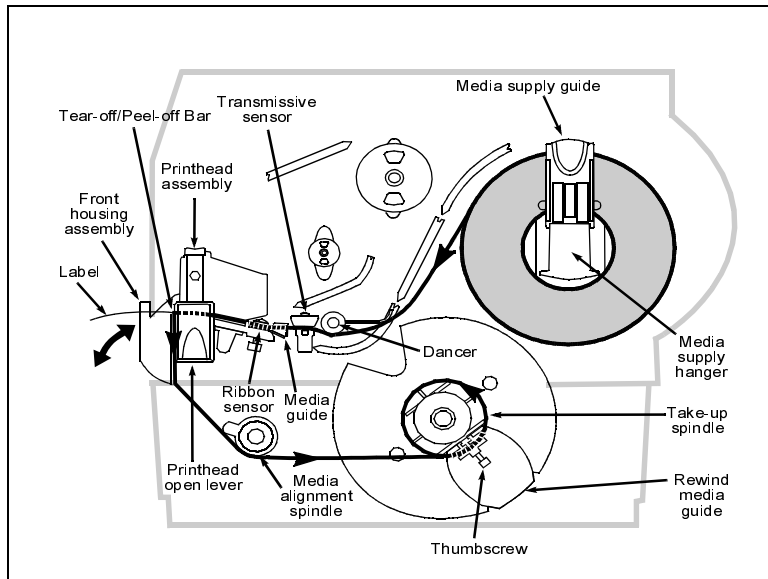


Figure 18

Backing Removal

1. Cut the backing material prior to where it winds onto the take-up spindle.
2. Rotate the take-up spindle until the rewind media guide is in the “12 o’clock” position.
3. Loosen the thumbscrew and slide out the rewind media guide to the end of the take-up spindle.
4. Slide the core and backing material from the take-up spindle.

Power Rewind Mode

(Power rewind option required)

Refer to [Figure 19](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Place the roll of media on the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the roll.
6. Feed the media under the dancer, through the slot in the transmissive sensor, and under the ribbon sensor.
7. Pull approximately 36" (1 m) of media through the front of the printer.
8. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
9. Remove at least 12" (305 mm) of labels from the backing material.
10. Feed the backing material over the front housing assembly, through the rewind base, and under the media alignment spindle.
11. Loosen the thumbscrew and slide out the rewind media guide to the end of the take-up spindle.
12. Wrap the media around a core placed on the take-up spindle; then, turn the take-up spindle counterclockwise to wind up the excess material.
13. Slide the rewind media guide against the media, and tighten the thumbscrew to lock it into position.
14. Close the printhead assembly.

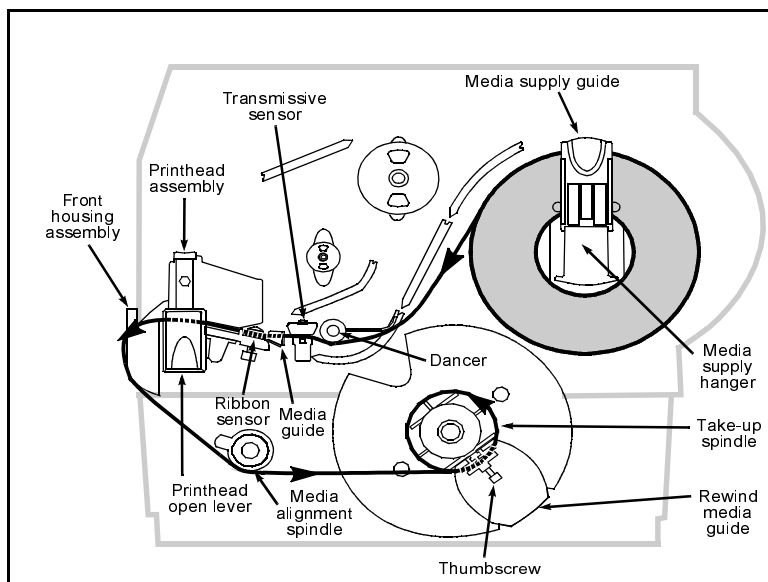


Figure 19

Media Removal

1. Cut the media prior to where it ends on the take-up spindle.
2. Rotate the take-up spindle until the rewind media guide is in the “12 o’clock” position.
3. Loosen the thumbscrew and slide out the rewind media guide to the end of the take-up spindle.
4. Slide the core and roll of media from the take-up spindle.

Fanfold Media Loading

Fanfold media feeds through either the bottom or rear access slot.

Refer to [Figure 20](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Flip down the media supply guide.
3. Slide out the media supply guide as far from the printer frame as possible.
4. Pass the fanfold media over the media supply hanger.
5. Flip up the media supply guide. Slide in the media supply guide so that it just touches, but does not restrict, the edge of the media.
6. Thread the media under the dancer, through the slot in the transmissive sensor, under the ribbon sensor, and out the front of the printer.
7. Ensure that the media is against the back of the transmissive sensor. Then, slide in the media guide so that it just touches, but does not restrict, the edge of the media.
8. Close the printhead assembly.

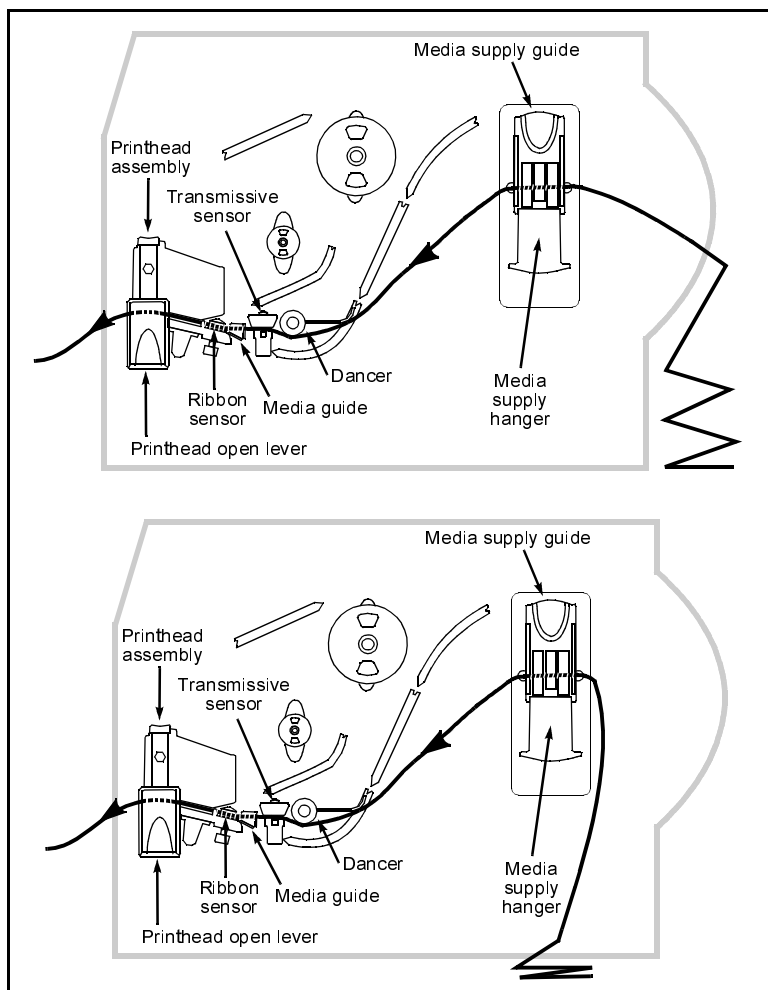


Figure 20

Ribbon Loading

NOTE: The ribbon supply spindle in your printer is a “dual tension” variety. Most applications require the spindle to be in the “normal” position. The “low tension” position is recommended only when wide ribbon is used and normal tension hampers the ribbon movement.

To place this spindle in the “normal” position, firmly pull out the spindle end cap until it clicks into place as shown in Figure 21. To place the spindle in the “low tension” position, firmly push in the end cap until it clicks into place.

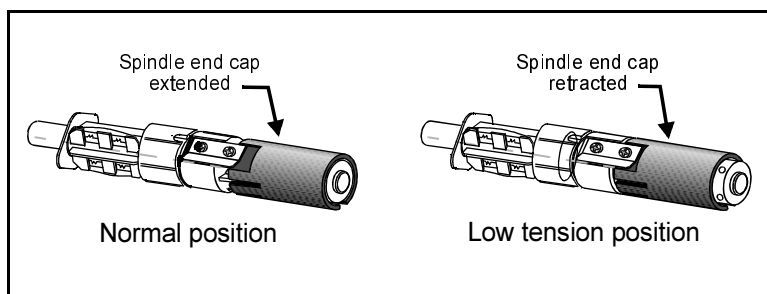


Figure 21

Loading the Ribbon



CAUTION: Always use ribbon that is wider than the media. The smooth backing of the ribbon protects the printhead from wear. (For direct thermal printing, do not load ribbon in the printer.)

Refer to [Figure 22](#).

1. Press the printhead open lever. The printhead assembly springs up.
2. Push the ribbon roll completely onto the ribbon supply spindle.
3. Pull the end of the ribbon over the ribbon sensor, under the printhead assembly, and out the front of the printer.
4. Close the printhead assembly, keeping the ribbon snug and free of wrinkles and in line with the guide mark near the left edge of the ribbon guide plate.
5. Wind the ribbon clockwise onto the ribbon take-up spindle.

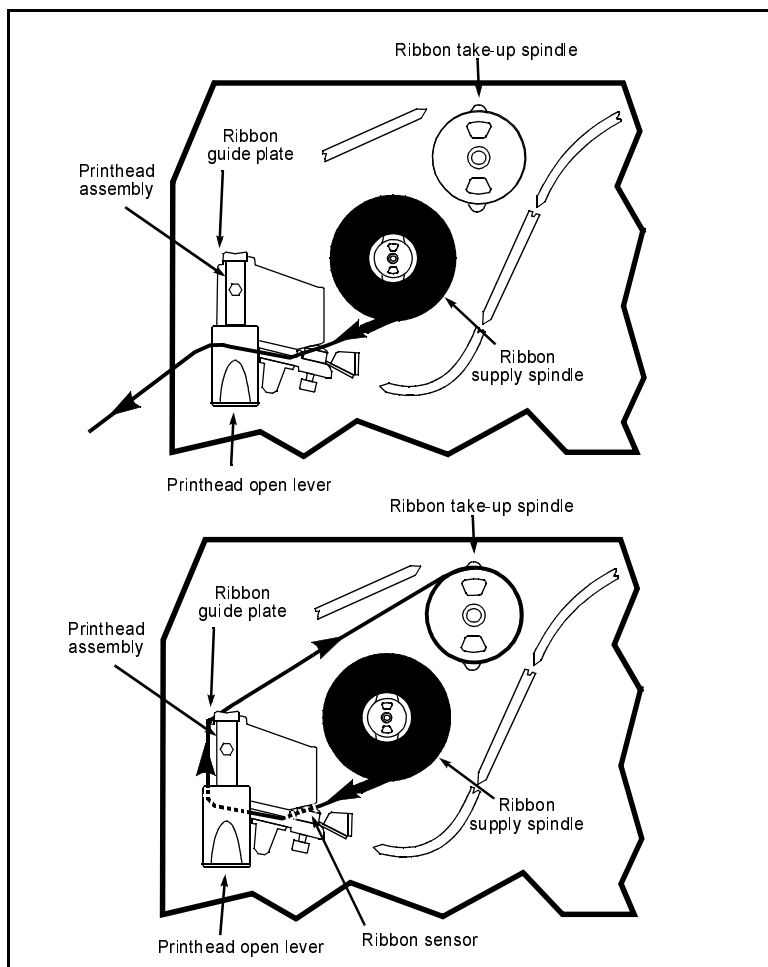


Figure 22

Ribbon Removal

To remove the ribbon:

1. Break the ribbon between the ribbon media guide plate and the ribbon take-up spindle.
2. While turning the ribbon take-up spindle release knob counterclockwise, squeeze the ribbon against the ribbon take-up spindle tension blades.
3. When the tension blades collapse into the ribbon take-up spindle, hold the release knob and rotate the spent ribbon toward the rear of the printer. Then, slide off the ribbon.

Configuration

After you have installed the media and ribbon and the power-on self test (POST) is complete, the front panel display will show “PRINTER READY.” (If the printer fails its POST, refer to [page 73](#).) You may now set printer parameters for your application using the front panel display and the four keys directly below it.

NOTE: Printers that are operating on an IP network can be quickly configured via ZebraNet WebView™ (optional ZebraNet PrintServer II required). For information, refer to ZebraNet Networking: PrintServer II Installation and User’s Guide.

Unless otherwise noted, all parameters are listed in the order they are displayed, starting with “DARKNESS.”

Entering the Setup Mode

To enter the programming mode, press the SETUP/EXIT key.

- Press the INCREMENT (+) or DECREMENT (-) key to scroll to the setting you wish to change.
- Press the SELECT key to toggle the functionality of the INCREMENT (+) and DECREMENT (-) keys.
- Press the INCREMENT (+) or DECREMENT (-) keys to increase or decrease the value; answer “yes” or “no”; print a label; or select the digit you wish to change.
- Press the SELECT key again to use the INCREMENT (+) and DECREMENT (-) keys to scroll to the desired menu item.

NOTE: An asterisk (*) in the upper left-hand corner of the display indicates that the value displayed is different than the currently stored value.

Changing Password-Protected Parameters

Certain parameters are password protected by factory default.

NOTE: *You have the option of making ALL parameters password protected. See “PASSWORD LEVEL” on [page 52](#).*



CAUTION: Do not change password-protected parameters unless you are sure you know what you are doing! If they are set incorrectly, these parameters could cause the printer to function in an unpredictable way.

The first attempt to change one of these parameters will require you to enter a four-digit password. This is done via the “ENTER PASSWORD” display. The DECREMENT (-) key changes the selected digit position. The INCREMENT (+) key increases the selected digit value. After entering the password, press the SELECT key. The parameter you wish to change will be displayed. If the password was entered correctly, you can now change the value.

The default password value is 1234. The password can be changed using the ^KP (Define Password) ZPL II instruction.

NOTE: *Once the password has been entered correctly, it will not have to be entered again unless you leave and re-enter the programming mode using the SETUP/EXIT key.*

You can disable the password protection feature so that it no longer prompts you for a password by setting the password to 0000 via the ^KP0 ZPL/ZPL II command. To re-enable the password-protection feature, send the ZPL/ZPL II command ^KPx, where “x” can be any number that is one to four digits in length, except 0.

Leaving the Setup Mode

You can leave the program mode at any time by pressing the SETUP/EXIT key. The “SAVE CHANGES” display will appear. There are five choices, which are described below. Pressing the INCREMENT (+) or DECREMENT (-) key displays other choices and pressing the SELECT key selects the displayed choice.

- PERMANENT -- Permanently saves the changes. Values are stored in the printer even when power is turned off.
- TEMPORARY -- Saves the changes until you change them again or until power is turned off.
- CANCEL -- Cancels all changes from the time you pressed the SETUP/EXIT key except for darkness and tear-off settings (if they were changed).
- LOAD DEFAULTS -- Loads factory defaults.
- LOAD LAST SAVE -- Loads values from the last permanent save.

Configuration and Calibration Sequence

Display Shows	Action/Explanation
PRINTER READY	Normal printer operation.
Setting Print Parameters	
DARKNESS	<p>Adjusting Print Darkness: Press the INCREMENT (+) key to increase darkness. Press the DECREMENT (-) key to decrease darkness.</p> <p>Default: +10</p> <p>Range: 0 to +30</p> <p>Darkness settings are dependent upon a variety of factors, including ribbon type, media, and the condition of the printhead. You may adjust the darkness for consistent high-quality printing.</p> <p>If printing is too light, or if there are voids in printed areas, you should increase the darkness. If printing is too dark, or if there is spreading or bleeding of printed areas, you should decrease the darkness.</p> <p>The FEED key self test on page 76 can also be used to determine the best darkness setting. Since the darkness setting takes effect immediately, you can see the results on labels that are currently printing.</p> <p>CAUTION: Set the darkness to the lowest setting that provides good print quality. Darkness set too high may cause ink smearing and/or it may burn through the ribbon.</p> <p>Darkness settings may also be changed by the driver or software settings.</p>
TEAR OFF	<p>Adjusting the Tear-Off Position: Press the INCREMENT (+) key to increase the value, press the DECREMENT (-) key to decrease the value. Each press of the key adjusts the tear-off position by four dot rows.</p> <p>Default: +0</p> <p>Range: -120 to +120</p> <p>This parameter establishes the position of the media over the tear-off/peel-off bar after printing. The label and backing can be torn off or cut between labels.</p>

Display Shows	Action/Explanation
PRINT MODE	<p>Selecting Print Mode: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Tear-off</p> <p>Selections: Tear-off, cutter, peel-off, liner take-up, rewind</p> <p>Print mode settings tell the printer the method of media delivery that you wish to use. Be sure to select a print mode that your hardware configuration supports as some selections displayed are for optional printer features.</p>
MEDIA TYPE	<p>Setting Media Type: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Continuous</p> <p>Selections: Continuous, non-continuous</p> <p>This parameter tells the printer the type of media you are using. Selecting continuous media requires that you include a label length instruction in your label format (^ LLxxx if you are using ZPL or ZPL II).</p> <p>When non-continuous media is selected, the printer feeds media to calculate label length (the distance between two detections of the inter-label gap, webbing, or alignment notch or hole).</p>
SENSOR TYPE	<p>Setting the Sensor Type: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Web</p> <p>Selections: Web, mark</p> <p>This parameter tells the printer whether you are using media with a web (gap/ space between labels, notch, or hole) to indicate the separation between labels or if you are using media with a black mark printed on the back. If your media does not have black marks on the back, leave your printer at the default setting (web).</p>
SENSOR SELECT	<p>Setting the Sensor Select: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Auto select</p> <p>Selections: Auto select, reflective, transmissive</p> <p>This parameter tells the printer the sensor you wish to use. "Auto select" is compatible with most types of media. However, if you encounter difficulties with calibration, refer to "Types of Media" on page 6 to help you choose the appropriate sensor for your media. (Select the reflective sensor with either continuous or non-continuous black mark media; choose the transmissive sensor if you are using non-continuous web media.)</p>

Display Shows	Action/Explanation
PRINT METHOD	<p>Selecting Print Method: Press the INCREMENT (+) key for the next value; press the DECREMENT (-) key for the previous value.</p> <p>Default: Thermal transfer</p> <p>Selections: Thermal transfer, direct thermal</p> <p>The print method parameter tells the printer the method of printing you wish to use: direct thermal (no ribbon) or thermal transfer (using thermal transfer media and ribbon).</p> <p>NOTE: Selecting direct thermal when using thermal transfer media and ribbon creates a warning condition, but printing will continue.</p>
PRINT WIDTH	<p>Setting Print Width: Press the INCREMENT (+) key to increase the value, press the DECREMENT (-) key to decrease the value. To change the unit of measurement, press the DECREMENT (-) key until the unit of measurement is active, then press the INCREMENT (+) key to toggle to a different unit of measure (inches, mm, or dots).</p> <p>Default; Range: The default and range of acceptable values may vary depending on what printer you have. Refer to “Printing Specifications” on page 80 for further information about the ranges available for your model. Print width determines the printable area across the width of the label.</p>

Listing Printer Information	
Display Shows	Action/Explanation
LIST FONTS	<p>List Fonts: Press the INCREMENT (+) key to print a label listing all of the available fonts.</p> <p>This selection is used to print a label that lists all of the fonts currently available in the printer, including standard printer fonts plus any optional fonts. Fonts may be stored in RAM, FLASH memory, font EPROMs, or font cards.</p>
LIST BAR CODES	<p>List Bar Codes: Press the INCREMENT (+) key to print a label listing all of the available bar codes.</p> <p>This selection is used to print a label that lists all of the bar codes currently available in the printer.</p>
LIST IMAGES	<p>List Images: Press the INCREMENT (+) key to print a label listing all of the available images.</p> <p>This selection is used to print a label that lists all of the images currently stored in the printer's RAM, FLASH memory, optional EPROM, or optional memory card.</p>
LIST FORMATS	<p>List Formats: Press the INCREMENT (+) key to print a label listing all of the available formats.</p> <p>This selection is used to print a label that lists all of the formats currently stored in the printer's RAM, FLASH memory, optional EPROM, or optional memory card.</p>
LIST SETUP	<p>List Setup: Press the INCREMENT (+) key to print a label listing the current printer configuration.</p> <p>This selection is used to print a label that lists the current printer configuration information. (Same as the CANCEL key self test.)</p>
LIST ALL	<p>List All: Press the INCREMENT (+) key to print a label listing all of the available fonts, bar codes, images, formats, and the current printer configuration.</p> <p>This selection is used to print a label that lists the five previous selections, as described.</p>

Display Shows	Action/Explanation
INITIALIZE CARD	<p>Initialize Memory Card CAUTION: Perform this operation only when it is necessary to erase all previously stored information from the optional memory card. Press the SETUP/EXIT key to bypass this function.</p> <ol style="list-style-type: none"> 1. Press the INCREMENT (+) key to select "YES." If your printer is set to require a password, you will now be prompted to enter the password. Enter the password and then press the SELECT key. 2. The display will ask "INITIALIZE CARD?". Press the INCREMENT (+) key "YES." 3. The front panel LCD will ask "ARE YOU SURE?". 4. Press the INCREMENT (+) key "YES" to begin initialization. <p style="text-align: center;"><i>or</i></p> <p>Press the DECREMENT (-) key "NO" to cancel the request and return to the "INITIALIZE CARD" prompt.</p> <ol style="list-style-type: none"> 5. Press the SETUP/EXIT key followed by the SELECT key. If initialization is still in process, the front panel display will flash back and forth between the two phrases "CHECKING B: MEMORY" and "PRINTER IDLE." When initialization is complete, the printer will automatically exit the configuration mode and the front panel will display "PRINTER READY." <p>NOTE: Depending on the amount of memory in the memory card, initialization may take up to five minutes to complete.</p>
INIT FLASH MEM	<p>Initialize Flash Memory CAUTION: Perform this operation only when it is necessary to erase all previously stored information from the FLASH memory. Press the SETUP/EXIT key to bypass this function.</p> <ol style="list-style-type: none"> 1. Press the INCREMENT (+) key to select "YES." If your printer is set to require a password, you will now be prompted to enter the password. Enter the password and then press the SELECT key. 2. The display will ask "INITIALIZE FLASH?". Press the INCREMENT (+) key "YES." 3. The front panel LCD will ask "ARE YOU SURE?". 4. Press the INCREMENT (+) key "YES" to begin initialization. <p style="text-align: center;"><i>or</i></p> <p>Press the DECREMENT (-) key "NO" to cancel the request and return to the "INITIALIZE FLASH" prompt.</p> <ol style="list-style-type: none"> 5. Press the SETUP/EXIT key followed by the SELECT key. If initialization is still in process, the front panel display will flash back and forth between the two phrases "CHECKING E: MEMORY" and "PRINTER IDLE." When initialization is complete, the printer will automatically exit the configuration mode and the front panel will display "PRINTER READY." <p>NOTE: Depending on the amount of free FLASH memory, initialization may take up to one minute to complete.</p>

Media and Ribbon Sensor Calibration

Performing the manual calibration procedure first resets the sensitivity of the sensors to better detect the media and ribbon you are using. With the sensors at their new sensitivity, the printer then performs the manual calibration. Changing the type of ribbon and/or media may require resetting the sensitivity of the media and ribbon sensors.

Display Shows	Action/Explanation
SENSOR PROFILE	Sensor Profile: Press the INCREMENT (+) key to print a media sensor profile. See Figure 23. The media sensor profile may be used to troubleshoot registration problems that may be caused when the media sensor detects preprinted areas on the media or experiences difficulty in determining web location. If the sensitivity of the media and/or ribbon sensors MUST be adjusted, use the manual calibration procedure.
MANUAL CALIBRATION	Manual Calibration: Press the INCREMENT (+) key to start the calibration procedure. This procedure is used to reset the sensitivity of the media and ribbon sensors. The manual calibration is then performed.

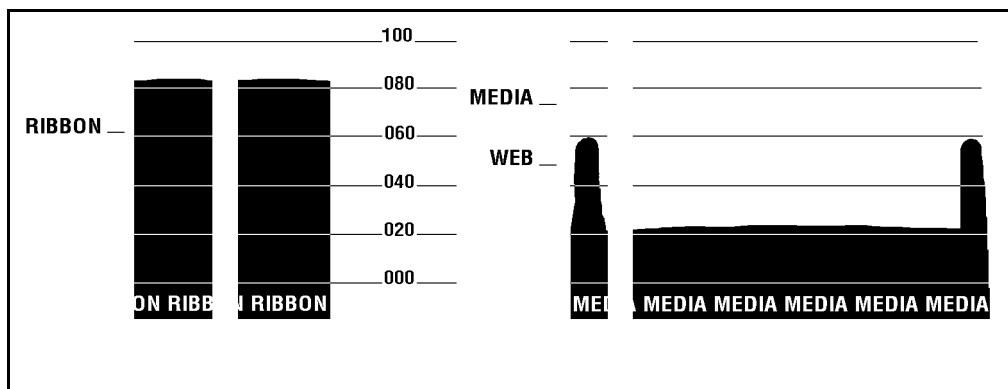


Figure 23

Setting Communication Parameters

Communication parameters must be set correctly for the printer to communicate with the host computer. These parameters make sure that the printer and host computer are “speaking the same language.” All communication parameters are password protected.

Display Shows	Action/Explanation
SERIAL COMM	Setting Serial Communications: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: RS-232 Selections: RS-232, RS-422/485, RS-485 multidrop Select the communications port that matches the one being used by the host computer.
BAUD	Setting Baud: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: 9600 Selections: 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400 The baud setting of the printer must match the baud setting of the host computer for accurate communications to take place. Select the value that matches the one being used by the host computer.
DATA BITS	Setting Data Bits: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: 7-bits Selections: 7-bits, 8-bits The data bits of the printer must match the data bits of the host computer for accurate communications to take place. Set the data bits to match the setting being used by the host computer. NOTE: Must be set to 8 data bits to use Code Page 850.

Display Shows	Action/Explanation
PARITY	<p>Setting Parity: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Even</p> <p>Selections: Even, odd, none</p> <p>The parity of the printer must match the parity of the host computer for accurate communications to take place. Select the parity that matches the one being used by the host computer.</p>
HOST HANDSHAKE	<p>Setting Host Handshake: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: XON/XOFF</p> <p>Selections: XON/XOFF, DTR/DSR</p> <p>The handshake protocol of the printer must match the handshake protocol of the host computer for communications to take place. Select the handshake protocol that matches the one being used by the host computer.</p>
PROTOCOL	<p>Setting Protocol: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: None</p> <p>Selections: None, Zebra, ACK_NACK</p> <p>Protocol is a type of error checking system. Depending on the selection, an indicator may be sent from the printer to the host computer signifying that data has been received. Select the protocol that is requested by the host computer. Further details on protocol can be found in the <i>ZPL II Programming Guide Volume I</i>.</p> <p>NOTE: Zebra is the same as ACK_NACK except that with Zebra the response messages are sequenced.</p> <p>NOTE: If Zebra is selected, printer must use DTR/DSR host handshake protocol.</p>

Display Shows	Action/Explanation
NETWORK ID	<p>Setting Network ID: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit. Default: 000 Range: 000 - 999</p> <p>Network ID is used to assign a unique number to a printer used in an RS-422/RS-485 network. This gives the host computer the means to address a specific printer. If the printer is used in a network, you must select a network ID number. This does not affect TCP/IP or IPX networks.</p>
COMMUNICATIONS	<p>Setting Communications Mode: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: Normal mode Selections: Normal mode, diagnostics</p> <p>The communication diagnostics mode is a troubleshooting tool for checking the interconnection between the printer and the host computer. When "diagnostics" is selected, all data sent from the host computer to the printer will be printed as straight ASCII hex characters. The printer prints all characters received including control codes, like CR (carriage return). A sample printout is shown in Figure 33 on page 77.</p> <p>NOTES on diagnostic printouts:</p> <ul style="list-style-type: none"> • FE indicates a framing error. • OE indicates an overrun error. • PE indicates a parity error. • NE indicates noise. <p>For any errors, check that your communication parameters are correct. Set the print width equal to or less than the label width used for the test. See page 42 for more information.</p>

Selecting Prefix and Delimiter Characters

Prefix and delimiter characters are 2-digit hex values used within the ZPL/ZPL II formats sent to the printer. The printer uses the last prefix and delimiter characters sent to it, whether from a ZPL II instruction or from the front panel.

NOTE: DO NOT use the same hex value for the control, format, and delimiter character. The printer needs to see different characters to function properly.

Display Shows	Action/Explanation
CONTROL PREFIX	<p>Control Prefix Character: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit.</p> <p>Default: 7E (tilde - displayed as a black square)</p> <p>Range: 00-FF</p> <p>The printer looks for this 2-digit hex character to indicate the start of a ZPL/ZPL II control instruction.</p>
FORMAT PREFIX	<p>Format Prefix Character: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit.</p> <p>Default: 5E (caret)</p> <p>Range: 00 - FF</p> <p>The printer looks for this 2-digit hex character to indicate the start of a ZPL/ZPL II format instruction.</p>
DELIMITER CHAR	<p>Delimiter Character: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit.</p> <p>Default: 2C (comma)</p> <p>Range: 00 - FF</p> <p>The delimiter character is a 2-digit hex value used as a parameter place marker in ZPL/ZPL II format instructions. Refer to the <i>ZPL II Programming Guide Volume I</i> for more information.</p>

Selecting ZPL Mode	
Display Shows	Action/Explanation
ZPL MODE	<p>Selecting ZPL Mode: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: ZPL II</p> <p>Selections: ZPL II, ZPL</p> <p>The printer will remain in the selected mode until it is changed by this front panel instruction or by using a ZPL/ZPL II command. The printer accepts label formats written in either ZPL or ZPL II. This eliminates the need to rewrite any ZPL formats you already have. Refer to the <i>ZPL II Programming Guide Volume II</i> for more information on the differences between ZPL and ZPL II.</p>
Power-Up and Head Close Parameters	
MEDIA POWER UP	<p>Media Power Up: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Feed</p> <p>Selections: Feed, calibration, length, and no motion</p> <p>This parameter establishes the action of the media when the printer is turned on.</p> <ul style="list-style-type: none"> • Calibration: Recalibrates the media and ribbon sensors. • Feed: Feeds the label to the first web. • Length: Determines the length of the label. • No Motion: Media does not move.
HEAD CLOSE	<p>Head Close: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Feed</p> <p>Selections: Feed, calibration, length, no motion</p> <p>Determines the action of the media after the printhead has been opened and then closed.</p> <ul style="list-style-type: none"> • Calibration: Recalibrates the media and ribbon sensors. • Feed: Feeds the label to the first web. • Length: Determines the length of the label. • No Motion: Media does not move.

Label Positioning Parameters	
Display Shows	Action/Explanation
BACKFEED	<p>Backfeed Sequence: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Default (90%)</p> <p>Selections: Default, after, before, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, off</p> <p>This parameter establishes when and how much label backfeed occurs after a label is removed or cut in the peel-off or cutter modes. It has no effect in rewind or tear-off modes. This parameter setting can be superseded by the ~JS instruction when received as part of a label format (refer to the <i>ZPL II Programming Guide Volume I</i>).</p> <p>NOTE: The difference between the value entered and 100% establishes how much backfeed occurs before the next label is printed. For example, a value of 40 means that 40% of the backfeed takes place after the label is removed or cut. The remaining 60% takes place before the next label is printed. A value of "before" means that all backfeed will take place before the next label is printed.</p>
LABEL TOP	<p>Adjusting Label Top Position: Press the INCREMENT (+) key to increase the value, press the DECREMENT (-) key to decrease the value. The displayed value represents dots.</p> <p>Default: +0</p> <p>Range: -120 to +120 dot rows</p> <p>The label top position adjusts the print position vertically on the label. Positive numbers adjust the label top position further down the label (away from the printhead); negative numbers adjust the position up the label (toward the printhead).</p>
LEFT POSITION	<p>Adjusting Left Position: Press the DECREMENT (-) key to move to the next position, press the INCREMENT (+) key to change between + and to increase the value of the digit. The displayed value represents dots.</p> <p>Default: 0000</p> <p>Range: -9999 to +9999</p> <p>NOTE: For a negative value, enter the value before changing to the minus sign.</p> <p>This parameter establishes how far from the left edge of a label the format will begin to print by adjusting horizontal positioning on the label. Positive numbers adjust the printing to the left by the number of dots selected; negative numbers shift printing to the right.</p>

Display Shows	Action/Explanation
WEB S. MEDIA S. RIBBON S. TAKE LABEL S. MEDIA LED RIBBON LED	These parameters are automatically set during the calibration procedure. They should only be changed by a qualified service technician. Refer to the maintenance manual for more information on these parameters. Press the SELECT key repeatedly to skip these parameters.
LCD ADJUST	LCD Display Adjustment: Press the DECREMENT (-) key to decrease the value (reduce brightness), press the INCREMENT (+) key to increase the value (increase brightness). Range: 00 to 19 This parameter allows you to adjust the brightness of your display if your display is difficult to read.
FORMAT CONVERT	Format Convert: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: None Selections: None, 150 V 300, 150 V 600, 200 V 600, 300 V 600 Selects the bitmap scaling factor. The first number is the original dots per inch (dpi) value; the second is the dpi to which you would like to scale.
PASSWORD LEVEL	Password Level: Press the INCREMENT (+) or DECREMENT (-) key to display other choices. Default: Selected items Selections: Selected items, all items This parameter allows you to select whether certain Zebra-selected menu items ("selected items") or all menu items ("all items") are password protected.

Display Shows	Action/Explanation
IP RESOLUTION*	<p>IP Resolution: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Dynamic</p> <p>Selections: Dynamic, permanent</p> <p>Depending on the selection, allows either the user ("permanent") or the server ("dynamic") to select the IP address. For more information, refer to <i>ZebraNet Networking: PrintServer II Installation and User's Guide</i>.</p>
IP PROTOCOLS*	<p>IP Protocols: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: All</p> <p>Selections: All, gleaning only, RARP, BOOTP, DHCP, DHCP/BOOTP</p> <p>If "dynamic" was chosen in the previous parameter, this selection determines the method(s) by which the PrintServer II will receive the IP address from the server. For more information, refer to <i>ZebraNet Networking: PrintServer II Installation and User's Guide</i>.</p>
IP ADDRESS*	<p>IP Address: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit.</p> <p>This parameter allows you to select the IP address <i>if</i> "permanent" was chosen in "IP RESOLUTION." (If "dynamic" was chosen, the user cannot select the address.) For more information, refer to <i>ZebraNet Networking: PrintServer II Installation and User's Guide</i>.</p>
SUBNET MASK*	<p>Subnet Mask: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Permanent (user <i>must</i> set)</p> <p>Selections: Dynamic (user <i>may</i> set, but server can assign), permanent</p> <p>This parameter selects the part of the IP address that is considered to be part of the local network. It can be reached without going through the default gateway.</p>
DEFAULT GATEWAY*	<p>Default Gateway: Press the DECREMENT (-) key to move to the next digit position, press the INCREMENT (+) key to increase the value of the digit.</p> <p>This parameter allows you to select the IP address that the network traffic is routed through if the destination address is not part of the local network.</p>

* Option required

Display Shows	Action/Explanation
LANGUAGE	<p>Selecting the Display Language: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: English</p> <p>Selections: English, Spanish, French, German, Italian, Norwegian, Portuguese, Swedish, Danish, Spanish 2, Dutch, Finnish, Japanese</p> <p>This parameter allows you to change the language used on the front panel display.</p>
You have now completed the entire configuration and calibration sequence. You may either press the SELECT key or the SETUP/EXIT key.	
DARKNESS	<p>You are now back at the first parameter in the configuration sequence.</p> <p>NOTE: If you pressed the SELECT key but are through programming the printer configuration, you may press the SETUP/EXIT key and continue with the "SAVE SETTINGS" function.</p>
SAVE SETTINGS	<p>Save Settings: Press the INCREMENT (+) or DECREMENT (-) key to display other choices.</p> <p>Default: Permanent</p> <p>Selections: Permanent, temporary, cancel, load defaults, load last save</p> <p>This display appears when you attempt to exit the configuration mode.</p> <ul style="list-style-type: none"> • Permanent: Permanently saves the changes, even when printer power is turned off. • Temporary: Saves the changes until you change the values again or until power is turned off. • Cancel: Cancels all changes from the time you entered the configuration mode except for darkness and tear-off position (if they were changed). • Load defaults: Loads factory defaults. • Load last save: Loads the values from the last permanent save.
PRINTER READY	<p>Press the SETUP/EXIT key to activate the displayed choice.</p> <p>You have exited the configuration and calibration sequence and are now ready for normal printer operation.</p>

Routine Care and Adjustments

Cleaning

The following table provides a recommended cleaning schedule. Specific cleaning procedures are provided on the following pages.

Area		Method	Interval
Printhead		Solvent*	After every roll of media (or 500 feet of fanfold media) when printing in the direct thermal mode.
Platen roller		Solvent*	
Media sensors		Air blow	
Ribbon sensor		Air blow	After every roll of ribbon or three rolls of media when printing in the thermal transfer mode.
Media path		Solvent*	
Ribbon path		Solvent*	
Pinch roller. (Optional value peel-off option required. See Figure 26.)		Solvent*	<i>These intervals are intended as guidelines only. You may have to clean more often, depending upon your application and media.</i>
Cutter Module	If cutting continuous, pressure-sensitive media	Citrus-based adhesive remover	After every roll of media (or more often, depending upon your application and media).
	If cutting tag stock or label backing material	Solvent* and air blow	After every two or three rolls of media.
Tear-off/peel-off bar		Solvent*	Once a month.
Take label sensor		Air blow	Once every six months.



CAUTION: Use only the cleaning agents indicated. Zebra Technologies Corporation will not be responsible for damage caused by any other cleaning fluids used on the Z4M or Z6M printer.

Cleaning the Exterior

The exterior surfaces of the printer may be cleaned with a lint-free cloth. Do not use harsh or abrasive cleaning agents or solvents. If necessary, a mild detergent or desktop cleaner may be used sparingly.

Cleaning the Interior

Remove any accumulated dirt and lint from the interior of the printer using a soft bristle brush and/or vacuum cleaner.

Cleaning the Printhead and Platen Roller

Inconsistent print quality, such as voids in the bar code or graphics, may indicate a dirty printhead. For best results, perform the following cleaning procedure after every roll of ribbon.

NOTE: The printer can remain on while you are cleaning the printhead. In this way all label formats, images, and all temporary parameter settings stored in the printer's internal memory will be saved.

To clean the printhead, refer to [Figure 24](#) and follow these steps:

1. Open the printhead assembly.
2. Remove the media and ribbon (if loaded).
3. Using a swab soaked in the Zebra-recommended solvent, wipe along the print elements from end to end. (The print elements are on the brown strip just behind the chrome strip on the printhead.) Allow sufficient time for the solvent to evaporate.
4. Manually rotate the platen roller and clean thoroughly with solvent and a swab.
5. Brush/vacuum any accumulated paper lint and dust away from the media and ribbon paths.
6. Reload media and/or ribbon, and close the printhead assembly.

NOTE: If print quality has not improved after performing this procedure, try cleaning the printhead with Save-a-Printhead cleaning film. This specially coated material removes contamination buildup without damaging the printhead. Call your authorized Zebra reseller for more information.

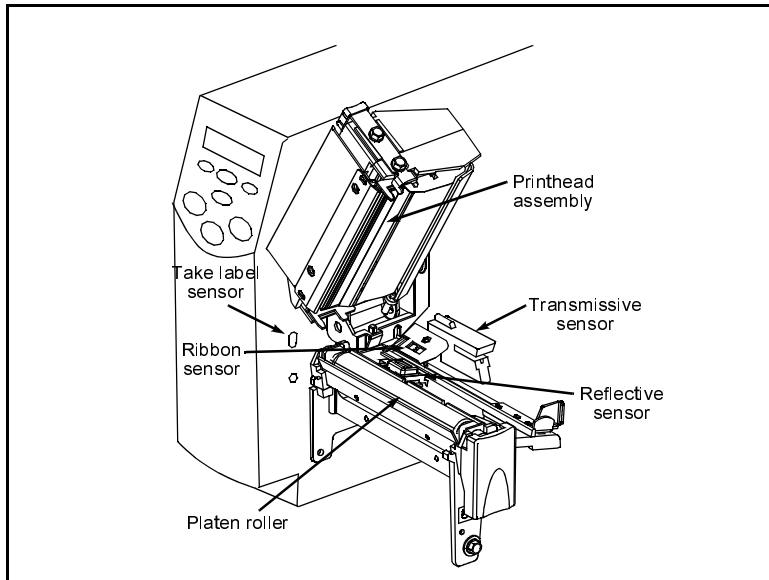


Figure 24

Cleaning the Sensors

Brush or vacuum any accumulated paper lint and dust away from the printer sensors. Refer to Figure 24. The reflective sensor, transmissive sensor, and ribbon sensor should be cleaned on a regular basis to ensure proper operation of the printer. For printers with the value peel-off, power peel-off, liner take-up, and/or power rewind option(s) installed, clean the take label sensor.

Cleaning the Power Peel-Off Module

(Power peel-off option required)

Perform the following procedure if adhesive buildup begins to affect peel performance.

Refer to Figure 25.

1. Open the printhead assembly.
2. Open the front housing assembly by lifting the two handles; then, pivot down the front housing assembly.
3. Remove the accumulated adhesive by rolling the sticky side of a blank label against the peel rollers and lifting it away. (Do this step repeatedly until a majority of the adhesive is gone.)
4. Use a swab soaked with the Zebra-recommended solvent to remove adhesive from the tear-off/peel-off bar and reflective surface.
5. Close the front housing assembly.
6. Close the printhead assembly.

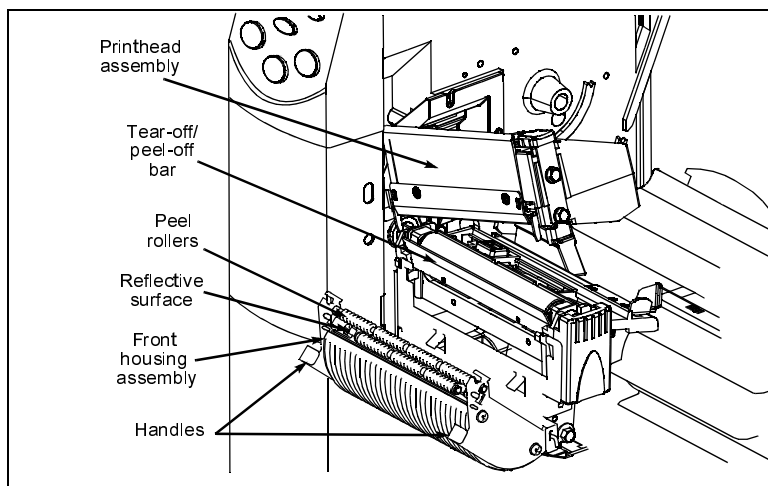


Figure 25

Cleaning the Value Peel-Off Module

(Value peel-off option required)

Perform the following procedure if adhesive buildup begins to affect peel-off performance.

Refer to Figure 26.

1. Open the printhead assembly.
2. Open the pivot bracket assembly by pivoting the module toward you.
3. Use a swab soaked with the Zebra-recommended solvent to remove adhesive from the tear-off/peel-off bar.
4. Manually rotate the pinch roller and clean thoroughly with solvent and a swab.
5. Close the pivot bracket assembly.
6. Close the printhead assembly.

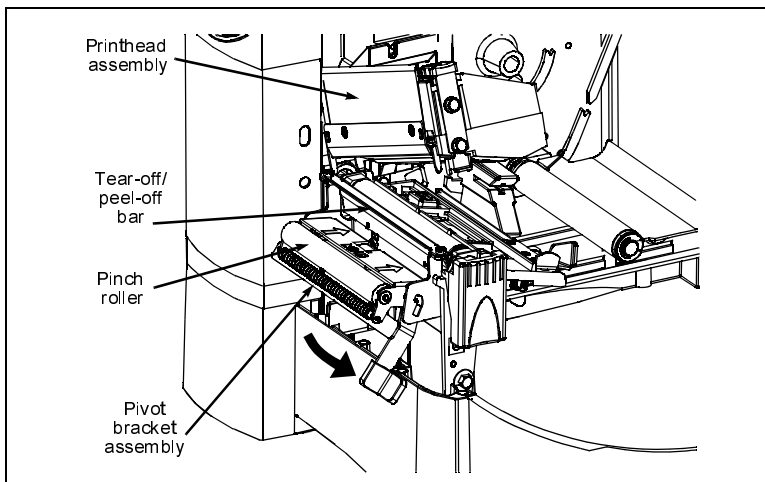


Figure 26

Cleaning the Cutter Module

(Cutter option required)



WARNING!!! For personnel safety, ALWAYS turn off and unplug the printer before performing this procedure.

Refer to [Figure 27](#).

To clean adhesive off of the upper and lower cutter blades:

1. Remove the cutter shield by removing the thumb screw and lock washer.
2. Use a swab moistened with the Zebra-recommended solvent to wipe along the upper cutter blade.
3. To expose the lower cutter blade, turn the cutter motor thumbnut counterclockwise until you see the “V”-shaped lower cutter blade.
4. Clean the lower blade, following the instructions in step 2.
5. Replace the cutter shield.
6. When you have finished cleaning the cutter module, plug in and turn on the printer. The lower cutter blade will return to its correct operating positions.

If the cutter continues to perform unsatisfactorily, contact an authorized service technician.

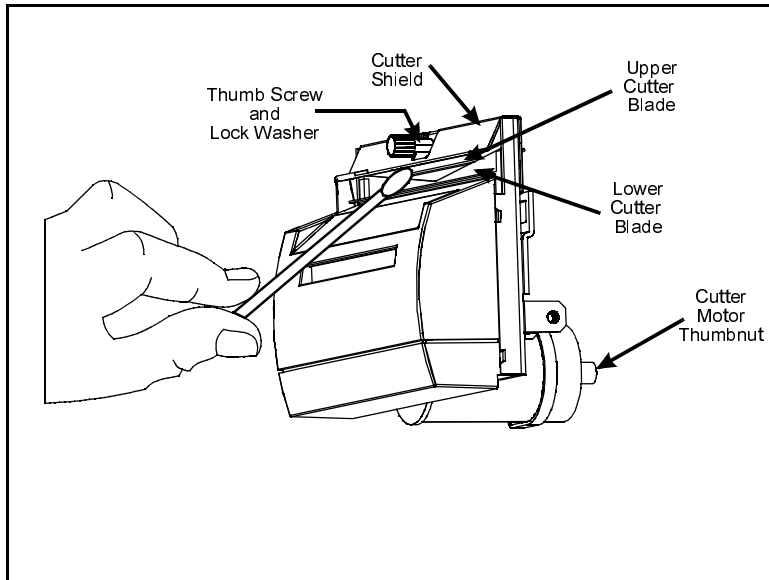


Figure 27

Lubrication



CAUTION! No lubricating agents of any kind should be used on this printer! Some commercially available lubricants will damage the finish and the mechanical parts if used.

Printhead Pressure Adjustment

This adjustment may be necessary if printing is too light on one side or if thick media is used.

Refer to [Figure 28](#).

The pressure adjustment dials each have four possible settings designated by blocks of increasing size embossed on the print mechanism. The smallest block (fully counterclockwise) is considered “position 1” and the largest block (fully clockwise) is considered “position 4.”

The following tables will help you to select the initial dial settings for your media.

Z4M		
Media Width	Left Dial	Right Dial
1" (25.4 mm)	3	1
2" (51 mm)	4	1
3" (76 mm)	3	2
3.5" and up (89 mm and up)	3	3

Z6M		
Media Width	Left Dial	Right Dial
2" (50 mm)	4	1
3" (75 mm)	6	2
4" (100 mm)	7	3
5" (125 mm)	7	4
5.5" and up (140 mm and up)	6	6

NOTE: *Some media types require higher pressure to print well. For these media, increase both dials one position. If the media tends to shift to the left while printing, increase the right dial setting one position or decrease the left dial setting one position. If the media tends to shift to the right while printing, increase the left dial setting one position or decrease the right dial setting one position.*

*In addition, if you have a **Z6M** printer with the **Value Peel-Off** option, Zebra recommends setting the left dial to 7 and the right dial to 6 when using media that is 6" or wider.*

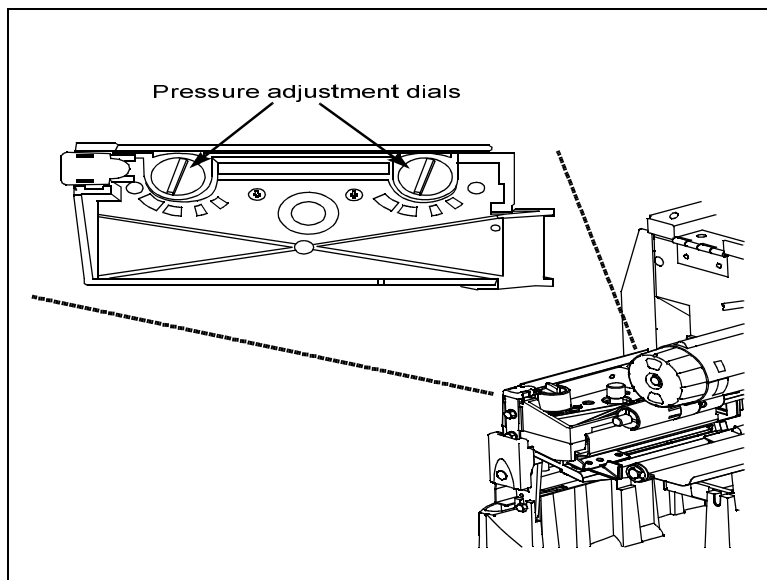


Figure 28

Power Rewind Media Alignment

(Power rewind option required)

NOTE: Under normal operating conditions, media alignment should not be necessary if the media/backing was initially installed tightly against the backplate of the take-up spindle.

Perform the following adjustment if the media does not track properly onto the take-up spindle.

Refer to [Figure 29](#).

1. With media and backing material loaded, open the printhead assembly.
2. Turn the adjustment dial clockwise to align the media/backing material more to the right. (The image will move to the left.)

or

Turn the dial counterclockwise to align the media/backing material more to the left. (The image will move to the right.)

3. Manually rotate the take-up spindle and ensure the media/backing tracks properly.
4. Close the printhead assembly.

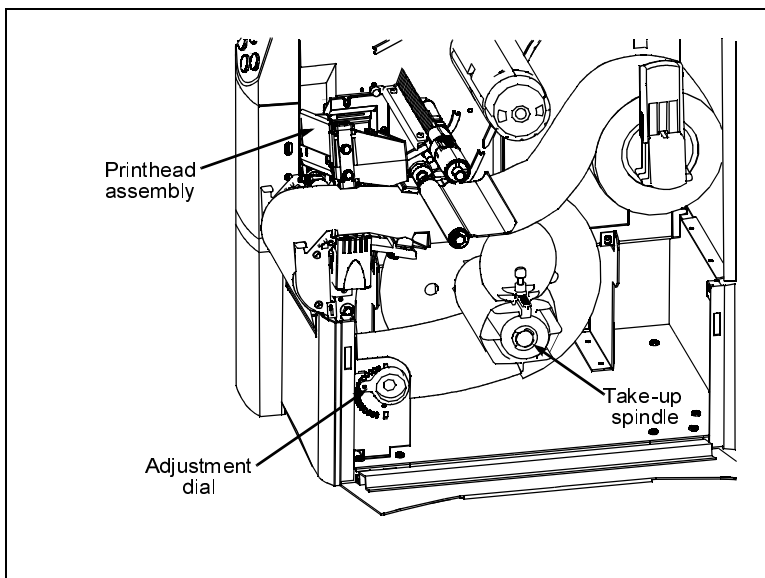


Figure 29

Fuse Replacement

A user-replaceable AC power fuse is located just below the AC power switch at the rear of the printer. The replacement fuse is a 3AG fast blow style rated at 5 Amp/250 VAC.

NOTE: Before replacing the fuse, turn off the AC power switch and unplug the AC power cord.

To replace the fuse, insert the tip of a flat blade screwdriver into the slot in the end of the fuse holder end cap. Press in slightly on the end cap and turn the screwdriver slightly counterclockwise. This will disengage the end cap from the fuse holder and permit removal of the fuse.

To install a new fuse, reverse the sequence.



Troubleshooting

LCD Error Conditions and Warnings

Error condition RIBBON OUT

Problem	Solution
In thermal transfer mode, the ribbon is not loaded <i>or</i> loaded incorrectly.	Load the ribbon correctly. See “Ribbon Loading” on page 34.
In thermal transfer mode, the ribbon sensor is not sensing correctly loaded ribbon.	Perform the media and ribbon sensor calibration (see page 45).
In direct thermal mode, when ribbon is not used:	Put the printer in direct thermal mode via the front panel and remove ribbon (if loaded).
	Ensure that the printer driver or software settings are correctly set (if applicable).

Error condition PAPER OUT

Problem	Solution
The media is not loaded <i>or</i> loaded incorrectly.	Reload the media. Refer to “Roll Media Loading” on page 22.
The media sensor is not positioned properly.	Check the position of the reflective sensor. See “Positioning the Media Sensor” on page 9.
The printer is set for non-continuous media, but continuous media is loaded.	Either load the correct media or set the printer for the correct media type via the front panel.
	Ensure that the printer driver or software settings are correctly set (if applicable).
	Calibrate the printer (see page 45).
The incorrect media sensor is being used.	Via the front panel, locate the “SENSOR SELECT” menu item (page 41) and manually select the correct sensing method.

Error condition HEAD OPEN

Problem	Solution
The printhead is not fully closed.	Close the printhead.
The ribbon is loaded incorrectly; it is covering the head open sensor.	Correctly align the ribbon with the guide mark on the ribbon guide plate before closing the printhead assembly. See “Ribbon Loading” on page 34.

Error condition RIBBON IN

Problem	Solution
Print method is incorrectly set.	Via the front panel, locate the “PRINT METHOD” menu item (page 42) and select thermal transfer mode.
	Ensure that the printer driver and/or software settings are correctly set (if applicable).
The ribbon is loaded.	Remove the ribbon and set the printer to direct thermal mode. (See “PRINT METHOD” on page 42.)
	Ensure that the printer driver and/or software settings are correctly set (if applicable).

Warning HEAD OVER TEMP

Problem	Solution
The printhead is over temperature.	Allow the printer to cool. Printing automatically resumes when the printhead elements cool to an acceptable operating temperature.

Warning HEAD UNDER TEMP

Problem	Solution
The printhead is under temperature.	Continue printing while the printhead reaches the correct operating temperature.
	The environment may be too cold for proper printing. Relocate the printer to a warmer area.

Warning CUTTER JAM

Problem	Solution
Cutter blade is in the media path.	Turn off the printer power and unplug the printer. Inspect the cutter module for debris and clean as needed following the cleaning instructions on page 60 .

OUT OF MEMORY*

Problem	Solution
*There is not enough memory to perform the function shown on the second line of the error message.	Insufficient DRAM for the label length, downloaded fonts/graphics, and images.
	Ensure that the device, such as FLASH memory or PCMCIA card, is installed and not write protected or full.
	Ensure that the data is not directed to a device that is not installed or available.

Print Quality Problems

General print quality issues

Problem	Solution
You are using an incorrect media and ribbon combination for your application.	Consult your authorized Zebra reseller/distributor for information and advice.
The printer is set at the incorrect print speed.	For optimal print quality, set the print speed to the lowest possible setting via ZPL II, the driver, or the software.
The printer is set at the incorrect darkness level.	For optimal print quality, set the darkness to the lowest possible setting via the front panel, the driver, or the software.
The printhead is dirty.	Clean the printhead according to the instructions on page 56 .
There is light printing (or no printing) on the left or right side of the label or the printed image is not sharp.	The pressure adjustment dials need to be adjusted. Follow the printhead pressure adjustment instructions on page 62 .

Gray lines on blank labels with no consistent pattern

Problem	Solution
The printhead is dirty.	Clean the printhead according to the instructions on page 56.

Light, consistent vertical lines running through all of the labels

Problem	Solution
The printhead or platen roller is dirty.	Clean the printhead, platen roller, or both according to the instructions on page 56.

Intermittent creases on the left and right edges of the label

Problem	Solution
There is too much pressure on the printhead.	Reduce the printhead pressure. Refer to the printhead pressure adjustment on page 62.

Wrinkled ribbon

Problem	Solution
The ribbon is not loaded correctly.	Load the ribbon correctly. See “Ribbon Loading” on page 34.
The darkness setting is incorrect.	Set the darkness to the lowest possible setting for good print quality. See “Darkness” on page 40.
Incorrect printhead pressure or balance.	Set the pressure to the minimum required for good print quality. See “Printhead Pressure Adjustment” on page 62.
The media is not feeding correctly. It is “walking” from side to side.	Make sure that the media guide and media supply guide touch the edge of the media.

Calibration

Problem	Solution
Loss of printing registration on labels. Excessive vertical drift in top-of-form registration.	Adjust the reflective sensor position. See page 10.
	Set the printer for the correct media type. See page 41.
	Ensure that the media guides are properly positioned.
	Via the front panel, locate the “SENSOR SELECT” menu item (page 41) and manually select the correct sensing method.
	Reload the media. Check the reflective sensor position (see page 10).
	Clean the platen roller according to the instructions on page 56.
“Auto Calibrate” failed.	Perform a manual calibration (see page 45).
	Load the media. Ensure that the reflective sensor is properly positioned (see page 10).

Communication Problems

A label format was sent to the printer but not recognized. The DATA light does not flash.

Problem	Solution
The printer does not respond to label requests.	Check the printer driver or software communications settings (if applicable).
	Verify the prefix and delimiter characters. See page 49.
	Confirm you are using the correct communication cable. See page 18 for the requirements.
	Via the front panel, check the protocol setting. It should be set to “none.” See page 47.
	Ensure that the correct driver is being used (if applicable).

A label format was sent to the printer. Several labels print, then the printer skips, misplaces, misses, or distorts the image on the label.

Problem	Solution
The host is set to EPP parallel communications.	Change the settings on the computer host to standard parallel communications.
The serial communication settings are incorrect.	Check the communication cable length. See page 18 for requirements.
	Check the printer driver or software communications settings (if applicable).

A label format was sent to the printer but not recognized. The DATA light flashes but no printing occurs.

Problem	Solution
The prefix and delimiter characters set in the printer do not match the ones in the label format.	Verify the prefix and delimiter characters. See page 49.
Incorrect data is being sent to the printer.	Check the communication settings on the computer. Ensure that they match the printer settings.

Printer Diagnostics

Power-On Self Test

A power-on self test (POST) is performed automatically each time the printer is turned on. During this test sequence, the front panel lights and liquid crystal display (LCD) monitor the progress of the POST. If the printer fails any of these tests, the word “FAILED” will be added to the display. If this occurs, notify an authorized Zebra reseller.

Additional Printer Self Tests

These self tests produce sample printouts and provide specific information that help determine the operating conditions for the printer.

Each self test is enabled by pressing a specific front panel key or combination of keys while turning the POWER switch on. Keep the key(s) depressed until the DATA light turns off (approximately five seconds). When the power-on self test is complete, the selected self test starts automatically.

NOTE: When performing self tests, avoid sending a label format to the printer. In the case of a remote host, disconnect all data interface cables from the printer.

When canceling a self test prior to its actual completion, always turn the printer power off and then back on to reset the printer.

When performing these self tests while in the peel-off mode, you must remove the labels as they become available.

If your media is not wide enough or long enough, unexpected and/or undesired results may occur. Make sure that your print width is set correctly for the media you are using before you run any self tests, otherwise the test may print out on the platen roller. See [page 42](#) for information on setting the print width.

CANCEL Key Self Test

This self test prints a listing of the configuration parameters currently stored in the printer's memory. See Figure 30. (Depending on the options ordered, your label may look different.)

1. Turn off the printer.
2. Press and hold the CANCEL key while turning on the power.
3. Release the key after the DATA light turns off (approximately five seconds).


Z4M Test Label		Z6M Test Label	
PRINTER CONFIGURATION		PRINTER CONFIGURATION	
Zebra Technologies ZTC Z4X-200dpi		Zebra Technologies ZTC Z6X-300dpi	
+10..... DARKNESS		+11..... DARKNESS	
+000..... TEAR OFF		+000..... TEAR OFF	
TEAR OFF..... PRINT MODE		TEAR OFF..... PRINT MODE	
NON-CONTINUOUS..... MEDIA TYPE		CONTINUOUS..... MEDIA TYPE	
WEB..... SENSOR TYPE		WEB..... SENSOR TYPE	
AUTO SELECT..... SENSOR SELECT		AUTO SELECT..... SENSOR SELECT	
THERMAL-TRANS..... PRINT METHOD		THERMAL-TRANS..... PRINT METHOD	
104 0/8 MM..... PRINT WIDTH		1210..... LABEL LENGTH	
1230..... LABEL LENGTH		RS232..... SERIAL COMM.	
PARALLEL..... PARALLEL COMM.		38400..... BAUD	
RS232..... SERIAL COMM.		8 BITS..... DATA BITS	
19200..... BAUD		NONE..... PARITY	
8 BITS..... DATA BITS		NONE..... MOST HANDSHAKE	
NONE..... PARITY		000..... NETWORK ID	
DSR/OTR..... MOST HANDSHAKE		NORMAL MODE..... COMMUNICATIONS	
NONE..... PROTOCOL		<?> 7EH..... CONTROL PREFIX	
000..... NETWORK ID		<?> 5EH..... FORMAT PREFIX	
NORMAL MODE..... COMMUNICATIONS		<?> 2CH..... DELIMITER CHAR	
<?> 7EH..... CONTROL PREFIX		ZPL II..... ZPL MODE	
<?> 5EH..... FORMAT PREFIX		CALIBRATION..... MEDIA POWER UP	
<?> 2CH..... DELIMITER CHAR		CALIBRATION..... HEAD CLOSE	
ZPL II..... ZPL MODE		DEFAULT..... BACKFEED	
CALIBRATION..... MEDIA POWER UP		+000..... LABEL TOP	
CALIBRATION..... HEAD CLOSE		+0030..... LEFT POSITION	
DEFAULT..... BACKFEED		003..... MEDIA S.	
+000..... LABEL TOP		001..... TAKE LABEL	
+0030..... LEFT POSITION		013..... MEDIA LED	
003..... MEDIA S.		111..... RIBBON LED	
001..... TAKE LABEL		110..... LCD ADJUST	
013..... MEDIA LED		0PSMFXM..... MODES DISABLED	
111..... RIBBON LED		1504 127MM FULL..... RESOLUTION	
110..... LCD ADJUST		V39.10.SP02 <..... FIRMWARE	
0PSMFXM..... MODES DISABLED		V1.9.0.0..... HARDWARE ID	
1504 127MM FULL..... RESOLUTION		CUSTOMIZED..... CONFIGURATION	
V39.10.SP02 <..... FIRMWARE		3072..... R: RAM	
V1.9.0.0..... HARDWARE ID		NONE..... E: ONBOARD FLASH	
CUSTOMIZED..... CONFIGURATION		NONE..... FORMAT CONVERT	
3072..... R: RAM		NONE..... OPTION	
NONE..... E: ONBOARD FLASH		PERMANENT..... IP RESOLUTION	
NONE..... FORMAT CONVERT		ALL..... IP PROTOCOL	
NONE..... OPTION		010.003.004.150..... IP ADDRESS	
PERMANENT..... IP RESOLUTION		255.000.000.000..... SUBNET MASK	
ALL..... IP PROTOCOL		000.000.000.000..... DEFAULT GATEWAY	
010.003.004.150..... IP ADDRESS		2000-12-18 12:18:18..... TIME STAMP	
255.000.000.000..... SUBNET MASK			
000.000.000.000..... DEFAULT GATEWAY			
2000-12-18 12:18:18..... TIME STAMP			
FIRMWARE IN THIS PRINTER IS COPYRIGHTED		FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

Figure 30

The configuration may be changed either temporarily (for specific label formats or ribbon and label stock) or permanently (by saving the new parameters in memory). Refer to [page 14](#) for further information about the configuration procedure.

This self test can be used to provide the test labels required when making adjustments to the printer's mechanical assemblies. See the sample printout in Figure 31.

1. Turn off the printer.
2. Press and hold the PAUSE key while turning on the power.
3. Release the key after the DATA light turns off (approximately five seconds).

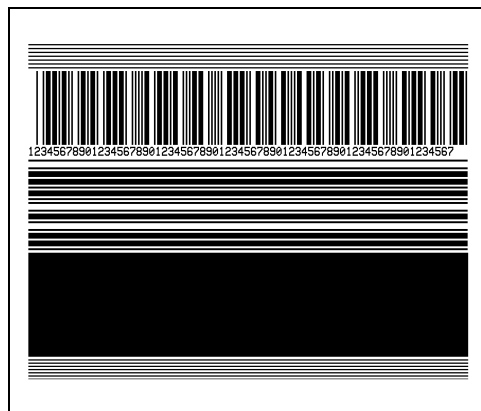

- The initial self test prints 15 labels at 2"/51 mm per second, then automatically pauses the printer. Each time the PAUSE key is pressed, an additional 15 labels print.
- Pressing the CANCEL key while the printer is paused alters the self test. Now each time the PAUSE key is pressed, the printer prints 15 labels at 6"/152 mm per second.
- Pressing the CANCEL key again while the printer is paused alters the self test again. Each time the PAUSE key is pressed, the printer prints 50 labels at 2"/51 mm per second.
- Pressing the CANCEL key again while the printer is paused alters the self test a third time. Now each time the PAUSE key is pressed, the printer prints 50 labels at 6"/152 mm per second.
- Pressing the CANCEL key again while the printer is paused alters the self test a fourth time. Each time the PAUSE key is pressed, the printer prints 15 labels at the printer's maximum speed.
- To exit this self test at any time, press and hold the CANCEL key.

FEED Key Self Test

See Figure 32.

1. Turn off the printer.
2. Press and hold the FEED key while turning on the power.
3. Release the key after the DATA light turns off (approximately five seconds).

The FEED key self test prints out at various darkness settings above and below that of the darkness value shown on the configuration label. Look at these labels and determine which one has the best darkness setting for your application. This value can be entered into the printer by setting the darkness during the configuration procedure. Refer to [page 40](#) for more information.



Figure 32

The value printed on that label is added to (plus) or subtracted from (minus) the darkness value specified on the configuration label. The resulting numeric value (0 to 30) is the best darkness value for that specific media/ribbon combination.

Communications Diagnostics Test

This test is controlled from the front panel display. Refer to [page 48](#). A typical printout from this test is shown in Figure 33. Turn off the power to exit this self test.

NOTE: *This label will be inverted when printed.*

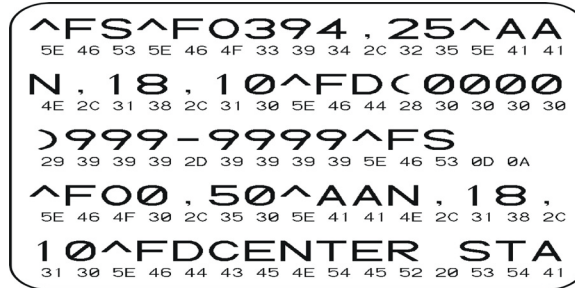


Figure 33

Loading Factory Defaults

1. Press the SETUP/EXIT key two times.
2. Use the INCREMENT (+) or DECREMENT (-) key to scroll through the “SAVE CHANGES” choices.
3. When “LOAD DEFAULTS” displays, press the SETUP/EXIT key.



Specifications

NOTE: Printer specifications are subject to change without notice.

General Specifications

General Specifications		Z4M		Z6M	
Height		13.3"	338 mm	13.3"	338 mm
Width		10.9"	277 mm	13.4"	341 mm
Depth		18.7"	475 mm	18.7"	475 mm
Weight (without options)		32.4 lbs.	14.7 kg	34.7 lbs.	16 kg
Electrical		90-265 VAC, 48-62 Hz, 5 Amps (fused)		90-265 VAC, 48-62 Hz, 5 Amps (fused)	
Agency Approvals		CISPR 22B, IEC 950, 801-2, -3, and -4 standard. Complies with FCC Class B and Canadian Doc Class A rules. Carries the CE mark of compliance.			
Temperature	Operating	40° to 104° F	5° to 40° C	40° to 104° F	5° to 40° C
	Storage	-40° to 140° F	-40° to 60° C	-40° to 140° F	-40° to 60° C
Relative Humidity	Operating	20% to 85%, non-condensing		20% to 85%, non-condensing	
	Storage	5% to 85%, non-condensing		5% to 85%, non-condensing	
Communication Interface		<ul style="list-style-type: none">• RS-232/CCITT V.24 and RS-485 serial data interface; 600 to 38400 baud, parity, bits/character, and XON-XOFF or DTR/DSR handshake protocol required.• RS-485 serial data interface; 600 to 38400 baud, parity, bits/character (all selectable). XON/XOFF handshake protocol required.• 8-bit parallel data interface; supports IEEE 1284 bi-directional parallel communication in "nibble mode."• Error detection CRC protocol.			

Printing Specifications

Printing Specifications		Z4M		Z6M	
Print resolution		203 dots/inch	8 dots/mm	203 dots/inch	8 dots/mm
		300 dots/inch	12 dots/mm	300 dots/inch	12 dots/mm
Dot size (width x length)	203 dots/inch	0.00492" x 0.00492"	0.125 mm x 0.125 mm	0.00492" x 0.00492"	0.125 mm x 0.125 mm
	300 dots/inch	0.0033" x 0.0039"	0.084 mm x 0.099 mm	0.0033" x 0.0039"	0.084 mm x 0.099 mm
Maximum print width		4.1"	104 mm	6.6"	168 mm
Minimum print length		1 dot row		1 dot row	
Maximum print length	203 dots/inch	105"	2667 mm	65"	1651 mm
	300 dots/inch	45"	1143 mm	29"	737 mm
Bar code modulus ("X") dimension	203 dots/inch	5 mil to 50 mil		5 mil to 50 mil	
	300 dots/inch	3.3 mil to 33 mil		3.3 mil to 33 mil	
Programmable constant print speeds	203 & 303 dots/inch	Per second: 2", 3", 4", 5", 6"	Per second: 51 mm, 76 mm, 102 mm, 127 mm, 152 mm	Per second: 2", 3", 4", 5", 6"	Per second: 51 mm, 76 mm, 102 mm, 127 mm, 152 mm
	Add'l 203 dots/inch	Per second: 7", 8", 9", 10"	Per second: 178 mm, 203 mm, 229 mm, 254 mm	Per second: 7", 8", 9", 10"	Per second: 178 mm, 203 mm, 229 mm, 254 mm
Thin film printhead with energy control					

Ribbon Specifications

Ribbon Specifications		Z4M		Z6M	
Ribbon must be wound with the coated side out					
Ribbon width (Zebra recommends using ribbon at least as wide as the media to protect the printhead from wear.)	Minimum	>1"	25.4 mm	>2"	60 mm
	Maximum	4.3"	109 mm	6.9"	174 mm
Standard lengths	2:1 media to ribbon roll ratio	984'	300 m	984'	300 m
	3:1 media to ribbon roll ratio	1476'	450 m	1476'	450 m
Ribbon core inside diameter		1"	25.4 mm	1"	25.4 mm

Media Specifications

Media Specifications			Z4M		Z6M	
Label length	Minimum	Tear-off	0.5"	13 mm	0.5"	13 mm
		Peel-off	1"	25.4 mm	1"	25.4 mm
		Rewind	0.5"	13 mm	0.5"	13 mm
		Cutter	1"	25.4 mm	1.5"	38.1 mm
	Maximum		39"	991 mm	39"	991 mm
Label width (maximum)			4.5"	114 mm	7.0"	178 mm
Total thickness (includes liner, if any)		Minimum	0.0023"	0.058 mm	0.0023"	0.058 mm
		Maximum	0.010"	0.25 mm	0.010"	0.25 mm
Core size			3"	76 mm	3"	76 mm
Maximum roll diameter			8"	203 mm	8"	203 mm
Inter-label gap		Minimum	0.079"	2 mm	0.079"	2 mm
		Preferred	0.118"	3 mm	0.118"	3 mm
		Maximum	0.157"	4 mm	0.157"	4 mm
Ticket/tag notch size (width x length)			0.236" x 0.12"	6 mm x 3 mm	0.236" x 0.12"	6 mm x 3 mm

Options

Z4M	Z6M
• Cutter	• Cutter
• Value peel-off	• Value peel-off
• Liner take-up	• PCMCIA card
• PCMCIA card	• 1 MB or 2 MB FLASH
• 1 MB or 2 MB FLASH	• 300 dpi printhead
• 300 dpi printhead	

Zebra Programming Language (ZPL II)


Z4M/Z6M ZPL II Features	
• Downloadable graphics (with data compression)	• Programmable quantity with print pause
• Bit image data transfer and printing, mixed text/graphics	• Communicates in printable ASCII characters
• Format inversion	• Controlled via mainframe, mini, PC, portable data terminal
• Mirror image printing	• In-Spec OCR-A and OCR-B
• Four-position field rotation (0°, 90°, 180°, 270°)	• UPC/EAN (nominal 100% magnification [6 dots/mm printheads only])
• Slew command	• Serialized fields

Bar codes

Z4M/Z6M Bar Code Features	
• Code 11	• LOGMARS
• Code 39 (supports ratios of 2:1 to 3:1)	• Plessey
• Code 49 (2-dimensional bar code)	• EAN-8, EAN-13, EAN EXTENSIONS
• Code 93	• UPC-A, UPC-E, UPC EXTENSIONS
• Code 128 (supports serialization in all subsets and UCC case codes)	• MSI
• Codabar (supports ratios of 2:1 to 3:1)	• PDF-417 (2-dimensional bar code)
• Codablock	• Micro-PDF-417
• Interleaved 2 of 5 (supports ratios of 2:1 to 3:1; modulus 10 check digit)	• POSTNET
• Industrial 2 of 5	• MaxiCode
• Standard 2 of 5	• Datamatrix
• QR Code	• Check digit calculation where applicable

AC Power Cord

Since many areas of the world have specific power requirements, an AC power cord may not be included with your printer. The power cord *must* meet your local electrical requirements.

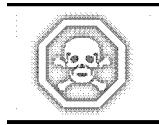

WARNING!!! For personnel and equipment safety, always use a three-prong plug with an earth ground connection to the AC power source.

Power Line Cord Specifications

- The overall length must be less than 9.8" (3.0 m).
- It must be rated for at least 5A, 250 VAC.
- The chassis ground (earth) **MUST** be connected to assure safety and reduce electromagnetic interference. The ground connection is handled by the third wire (earth) in the power cord (see Figure 34).
- The AC power plug and IEC 320 connector must bear the certification mark of at least one of the known international safety organizations shown in Figure 35.

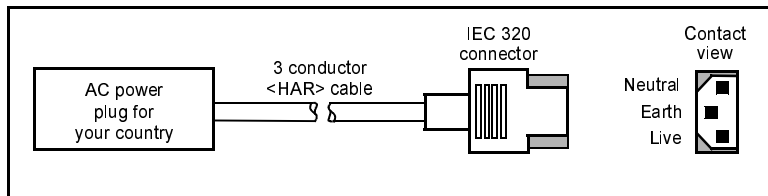


Figure 34

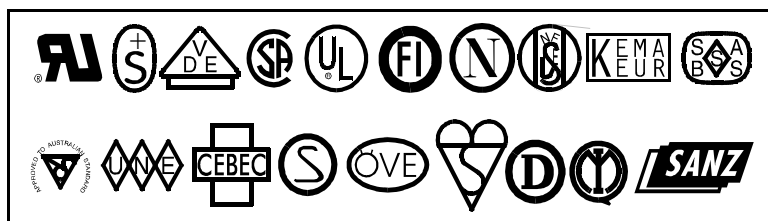


Figure 35



Appendix

Printer Interface Technical Information

Serial Data Communications

The following table illustrates the pin connections on the DB-25 connector at the rear of the printer.

Pin No.	Description
1	Chassis ground
2	TXD (transmit data) output from the printer
3	RXD (receive data) input to the printer
4	RTS (request to send) output from the printer
5	Not used
6	DSR (data set ready) input to the printer
7	RS-232 signal ground
8	Not used
9	+5v @ 1A source
10	Not used
11	RS-485 signal ground
12	Not used
13	RS-485 input A(-)
14	RS-485 output A(-)
15	Not used
16	RS-485 input B(+)
17 and 18	Not used
19	RS-485 output B(+)
20	DTR (data terminal ready) output from the printer
21-25	Not used

RS-232 Interface

This printer is configured as Data Terminal Equipment (DTE). The serial data cable used to connect the printer to the host computer will be one of two styles:

- **9-pin to 25-pin cable** – (null modem cable) must have a 9-pin “D” type (DB-9S) connector on the end that is plugged into the serial port at the computer and a 25-pin “D” type (DB-25P) connector on the other end that is plugged into the connector at the rear of the printer. Figure 36 shows the required cable connections.

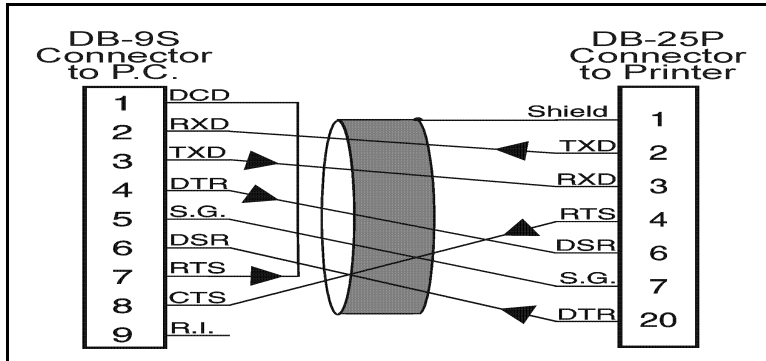


Figure 36

- **25-pin to 25-pin cable** – (null modem cable) must have a 25-pin “D” type (DB-25S) connector on the end that is plugged into the serial port at the computer and a 25-pin “D” type (DB-25P) connector on the other end that is plugged into the connector at the rear of the printer. Figure 37 shows the required cable connections.

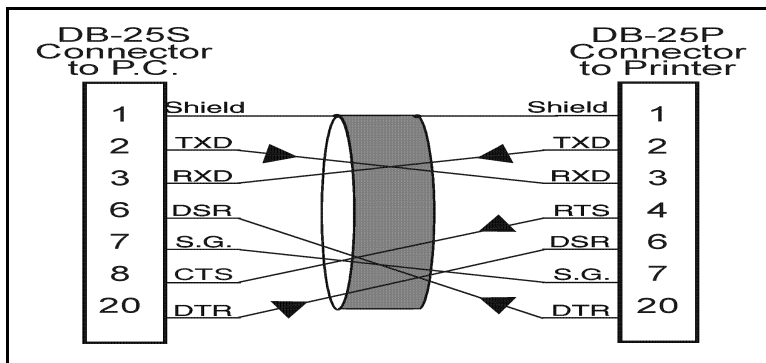


Figure 37

Hardware Control Signal Descriptions

For all RS-232 input and output signals, the Z4M and Z6M printers follow both the Electronics Industries Association (EIA) RS-232 and the Consultative Committee for International Telegraph and Telephone (CCITT) V.24 standard signal level specifications.

When DTR/DSR handshaking is selected, the Data Terminal Ready (DTR) control signal output from the printer controls when the host computer may send data. DTR ACTIVE (positive voltage) permits the host to send data. When the printer places DTR in the INACTIVE (negative voltage) state, the host must not send data.

NOTE: When XON/XOFF handshaking is selected, data flow is controlled by the ASCII Control Codes DC1 (XON) and DC3 (XOFF). The DTR Control lead will have no effect.

Request to send (RTS) is a control signal from the printer that is connected to the clear to send (CTS) input at the host computer. RTS is always ACTIVE (positive voltage) when the printer is on.



CAUTION: This printer complies with FCC “Rules and Regulations”, Part 15 for Class B Equipment, using fully shielded six-foot data cables. Use of longer cables or unshielded cables may increase radiated emissions above the Class B limits.

RS-485 Interface

Figure 38 illustrates the pin connections on the DB-25 connector at the rear of the printer that are used for the RS-485 communication protocol.

NOTE: *XON/XOFF* handshaking must be used for RS-485 communications.

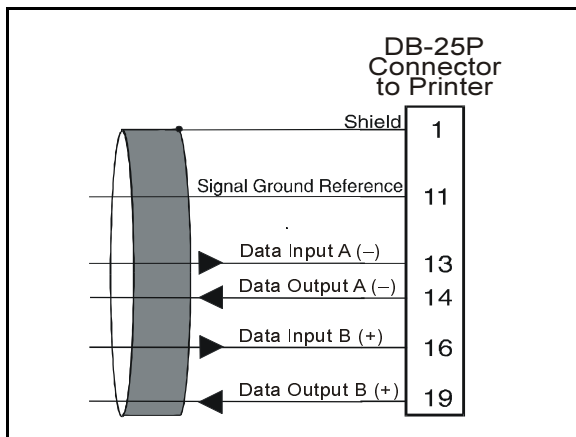


Figure 38

Parallel Data Communications

The following table illustrates the pin connections on the bi-directional parallel connector at the rear of the printer.

Pin No.	Description
1	nStrobe/HostClk
2-9	Data Bits 1-8
10	nAck/PtrClk
11	Busy/PtrBusy
12	PError/AckDataReq
13	Select/Xflag
14	nAutoFd/HostBusy
15	Not used
16 and 17	Ground
18	+5v @1A
19-30	Ground
31	ninit
32	nFault/nDataAvail
33 and 34	Not used
35	+5v through a 3.3 KW resistor
36	nSelectin/1284 active

Parallel Interface

The 8-bit parallel data interface supports IEEE 1284 bi-directional parallel communications in “nibble mode.” The parallel interface provides a means of communication that is typically faster than the previously mentioned serial interface methods. In this method, the bits of data that make up a character are sent all at one time over several wires in the cable, one bit per wire.

Parallel Cabling Requirements

An IEEE-1284 compatible bi-directional parallel data cable is required when this communication method is used. The required cable must have a standard 36-pin parallel connector on one end that is plugged into the mating connector located at the rear of the printer. The other end of the cable connects to the printer connector at the host computer.



Index

A

- Adjustments
 - Printhead Pressure, 62
 - Reflective Sensor, 10
- Auto Calibration, 12

C

- Cabling Requirements, 18
- Calibrating the Printer, 5
- Cleaning
 - Cutter Module, 60
 - Exterior, 56
 - Interior, 56
 - Power Peel-Off Module, 58
 - Printhead and Platen Roller, 56
 - Sensors, 57
 - Value Peel-off Module, 59

- Communication Problems, 71

Configuration

- Changing Password-Protected Parameters, 38
- Configuration and Calibration Sequence, 40
- Entering the Setup Mode, 37
- Leaving the Setup Mode, 39
- Printer Driver Software, 15
- Printer, 14

D

- Damage (See Reporting Damage)

F

- Fanfold Media Loading, 32
- Front Panel
 - Display, 19
 - Keys, 20
 - Lights, 21
- Fuse Replacement, 65

I

- Inspection, 1

L

- LCD Error Conditions and Warnings, 67
- Loading
 - Factory Defaults, 77
 - Media, 8
 - Ribbon, 11
- Lubrication, 61

M

- Media Requirements, 2

O

- Operator Controls
 - Front Panel, 13
 - POWER Switch, 13

P

- Positioning the Media Sensor
 - Reflective Sensor, 9
 - Transmissive Sensor, 11
- Power Rewind Media Alignment, 64
- Print Mode, 8
- Print Quality Problems, 69
- Printer Diagnostics
 - CANCEL Key Self Test, 74
 - Communications Diagnostics Test, 77
 - FEED Key Self Test, 76
 - PAUSE Key Self Test, 75
- Printer Interface Technical Information
 - Hardware Control Signal Descriptions, 87
 - Parallel Data Communications, 89
 - Parallel Interface, 89
 - RS-232 Interface, 86
 - RS-485 Interface, 88
 - Serial Data Communications, 85

Printer Overview, 4
Printer Power, 3
Printing a Test Label, 15

R

Reporting Damage, 2
Ribbon Removal, 36
Ribbon Requirements, 2
Roll Media Loading
 Cutter Mode, 23
 Liner Take-up Mode, 29
 Power Peel-off Mode, 28
 Power Rewind Mode, 30
 Tear-off Mode, 22
 Value Peel-off Mode, 24

S

Specifications
 AC Power Cord, 83
 Bar Codes, 82
 General, 79
 Media, 81
 Options, 81
 Zebra Programming Language (ZPL II), 82
Storage, 2
System Considerations
 Data specifications, 17
 Interfaces, 17

T

Types of Media
 Continuous Media, 7
 Non-continuous black mark media, 7
 Non-Continuous Web Media, 6

U

Unpacking, 1