


## Air Volume Control

### Installation Instructions

Your Brady Air Volume Control is made of the finest materials available, and design to offer you trouble-free service. Please follow the instructions for installation carefully to insure maximum performance from this quality Brady product.

1. Check the system for leaks. Your Air Volume Control will not replenish enough air to overcome leaks in the system.
2. Make sure that the side of the control marked "tank side" is closest to the tank. The control will not function otherwise.
3. Your Brady Air Volume Control should be installed into the 1/4" or 3/8" N.P.T. tank port above and closest to the discharge port as shown below.
4. Connecting the tubing (**vacuum line**) to the suction port located at the center of the control and the suction port on the pump. You Air Volume Control works on a vacuum principle, so make sure that the tubing connected to the pump is clear and not obstructed or kinked.
5. A snug fit is all that is necessary for all connections. Do not over tighten!
6. For best results and easy installation, use the Brady UK-1 Installation kit.

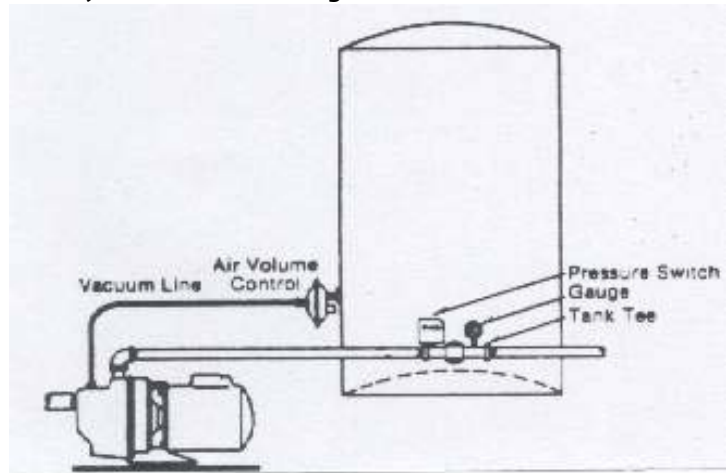

Products, Incorporated

2151 Logan Street, Clearwater, FL 33765 U.S.A.

Telephone: (727) 443-4508

Fax: (727) 447-8416