
MOPPERN

Item No.: ET223-BLACK

Installation guide

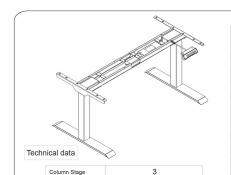

125KG 580-1230mm

1100-1900mm

Max. Weight Capacity


Height Range


Width Range


Accessory	list
-----------	------


Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department should you have any queries.


No.	Image	Spec	Qty
Α	©	M6	4
В	0	M6	4
С	O	M6	8
D	6	М6	12
Е	< ⊕	St4.2	16
F		Allen Key 4x4mm	1

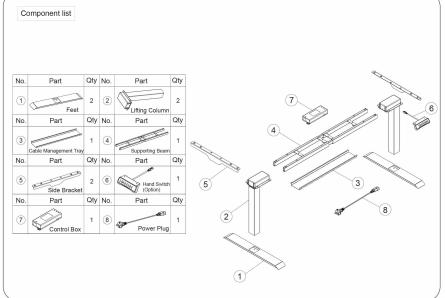


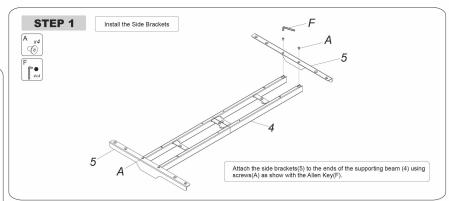


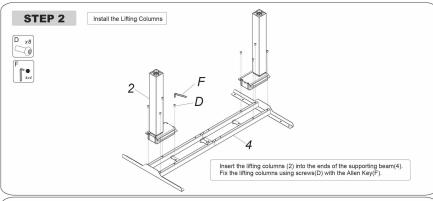


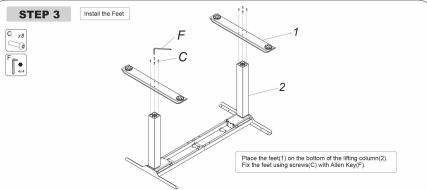

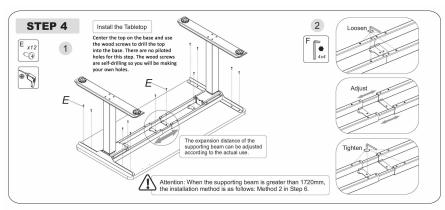

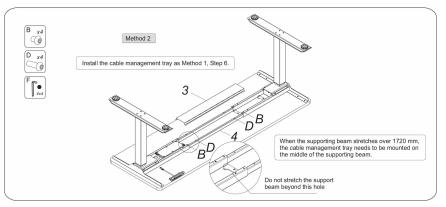

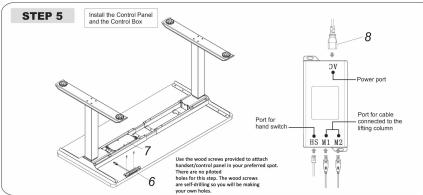

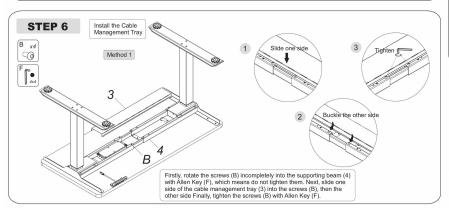

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only themanufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with	1. Check if all the cables be connected well
a power supply	2. Contact your supplier or dealer
No response while pressing up arrow/down arrow after	1. Check if all the cables be connected well
connected with a power supply	2. Contact your supplier or dealer
	1. Check if overloaded, max loading: 125kg:
Rising in a low speed	2. Contact your supplier or dealer
The motor not move as instructed	Contact your supplier or dealer
Go down but not go up	1.Reposition
	2.Contact your supplier or dealer
Downward sliding	Check if overloaded, max loading: 125kg:
Downward sliding	2. Contact your supplier or dealer
Frequently Reposition	Check if overloaded, max loading: 125kg;
Frequently Reposition	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
	Contact your supplier or dealer;
Not enough up&down height	Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice it will restore factory settings
	2.Contact your supplier or dealer

Attention

- 1. Power supply: AC100V-240V,50/60Hz 2. Service Environment: 0-40℃
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.

 4. The electric box contains electronic components, metals, plastics, wires etc., so
- dispose of it in accordance with each country's environmental legislation, not the
- displace to it. in advance with consumer state of the general household waste.

 5. Check carefully to ensure correct and complete assembly before using.

 6. Be familiar with all functions and program settings of the product before first use.

 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.

 9. Corroshe or abrasive materials are forbidden to clean the equipment. Must ensure
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use appliance in sale way and understand the hazards involved. Children shall not play with the appliance.
 17. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazard sources in your operating environment. e.g.,
- do not litter the tools around. Aways be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

 14. Keep the original package of the equipment if necessary in case of the future use in transportation.






This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time. Monday - Friday

Item No.: HS11A-1

Operation Instruction

1. Product Outline

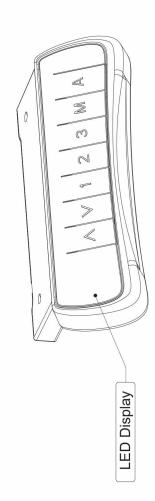

2. Product Specification

Introduction to the Buttons:

- (1) "▲": Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1": Position 1, first height position saved by the user (4) "2": Position 2, second height position saved by the user
- (5) "3": Position 3, third height position saved by the user
 - (6) "M" : Height memory function
- (7) "A" : Alert button to remind users changing posture

 
3. Operating Instructions

- Height Adjustable Function:
- Press the"▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
- a. Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-";
- Press "1", "2", or "3" then, that is, save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3"; b. Press "1", "2" and "3" button directly to automatically adjust the memory height you
- saved.



Reversible Desk Return Assembly Instructions





Applies to: BK/CH/FL/MJ/ML/WH2045


List of Hardware:

Part	Part	Part
Wood Dowel	Shallow Cover	Worksurface Bracket
Cam Pin	Deep Cover	Side Panel Brackets (2)
Cam Lock	Grommet	M6 Screw
Wood Screw		Leveling Glide

Tools Needed:

- -Phillips Screwdriver
- -Power Screwdriver
- -A Helper

- 1.) Assemble on carpet or cardboard to protect parts during assembly. Assembly will require 2 people for safety.
- 2.) Determine if the return will be left or right handed (see diagram next page). Locate Side Panel & End Panel and arrange like shown in drawing. Insert leveling glides, then insert all cam pins, cam locks and wood dowels. Then connect the panels by inserting the dowels into the holes on opposite panel and inserting cam pins into cam locks (see diagram). Then, twist the cam locks with a Phillips Screwdriver to secure connection.
- 3.) Next, locate the Desktop and insert hardware. Then, set the desktop on the lower assembly and twist cams to securely connect.

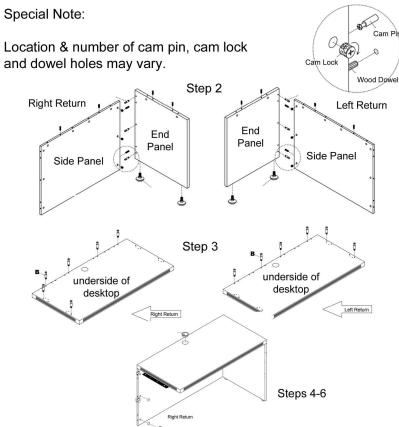


- 4.) Now it's time to attach the return to your desk. Locate the large flat bracket and M6 machine screws (it may be attached to the desktop already. If not, center the bracket over the edge and install 4 of the screws). With a helper, have one person hold the return desk stable while the other screws the machine screws into the desk.
- 5.) Once installed & leveled, use the wood screws to install the offset side panel brackets. This will further secure the side panel, but is an optional step. A power screwdriver is helpful.
- 6.) Lastly, insert the grommet into the desktop and use the caps provided to cover the cam locks.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday



Box/Box/File Desk Pedestal Assembly Instructions

Applies towards: BK/CH/FL/MJ/ML/WH2066

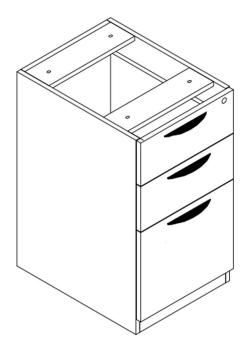

List of Hardware:

Part	Part
4 Large Bolts	3 Drawer Pulls with screws
	4 Leveling
1 set of keys	Glides

- 1.) Install 4 leveling glides.
- 2.) Use the screws to attach drawer pulls.
- 3.) To install under desk, remove the top box drawer (or top two box drawers) by locating the black tabs inside of the left & right drawer slides. Push down on one and push up on the other. This will release the drawer from the slides. Use 4 large bolts to connect to threaded holes on underside of desk. Once done, simply insert drawers back into the slides. They will snap in place.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday



Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (In MN): 952-941-2837 Fax: 952.949.9816 www.modernc.icefurniture.com

Reversible Desk Return CH/FL/MJ/ML/MWAL/WH2045B Half Panel

For installation on Electric Lift L-Desks with non-adjustable returns.







ASSEMBLY INSTRUCTIONS

Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday

Half Panel placement shown in gray

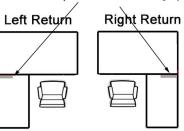

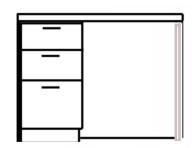

Tip: Make sure your drawer pedestal is connected to your return desk with the four bolts includes with the file. If that does not stabilize the desk as desired, install this half panel for additional support.



1.) Screw in both leveling glides into Half Panel.

