


# Dual Electric Lift Benching Workstation Assembly Instructions

### modernofficefurniture.com

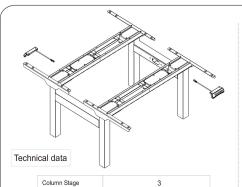

125KG

580-1230mm

1100-1900mm

Height:1200mm-2000mm

Width:600mm-800mm
Thickness:greater than 18mm

Accessory	list

Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department should you have any queries.

No.	Image	Spec	Qty
Α	<b>©</b>	M6	4
В		M6	4
С		M6	12
D	<b>\( \sigma \)</b>	St4.2	16
E		Allen Key 4x4mm	1


Note: there are 2 screw packages in total.


### Component list

Max. Weight Capacity
Height Range

Width Range

Suitable tabletop dimensions

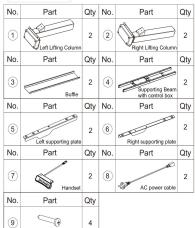

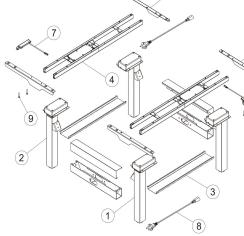



#### Matching Parts


Handset Screv

Part	Qty	Part	Qty
Leg Beam	2	Leg Beam Cover	2




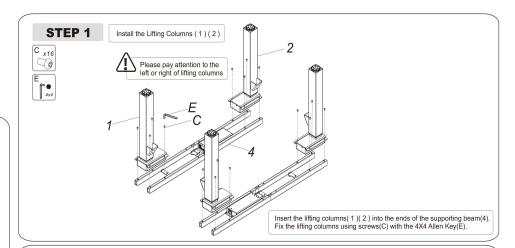


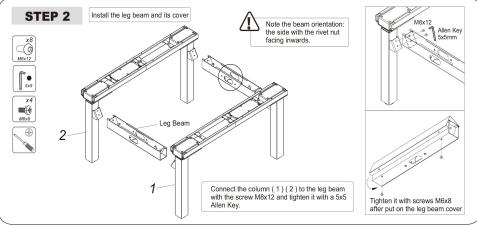


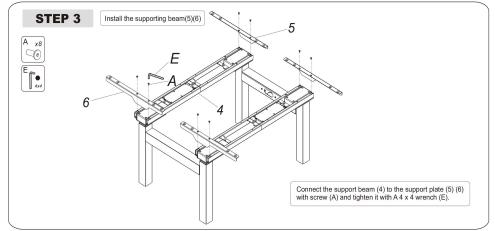


Questions? Call 1-800-443-5117 Mon-Fri, 8:30-5PM CT

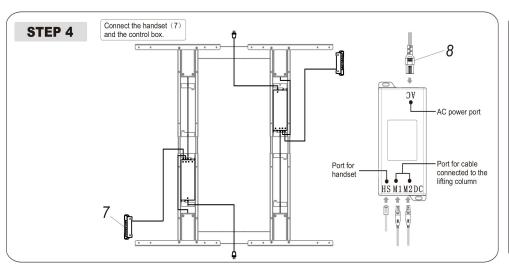

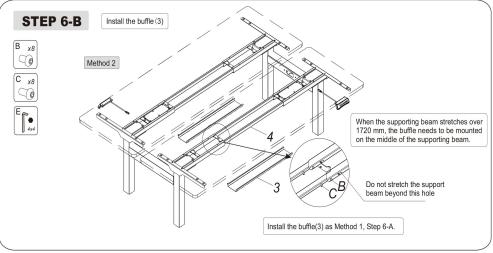

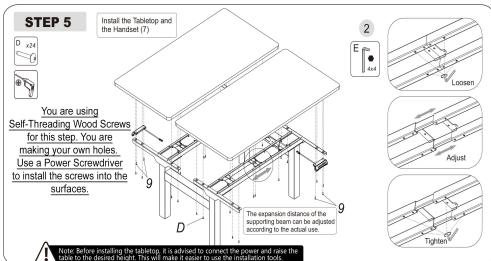

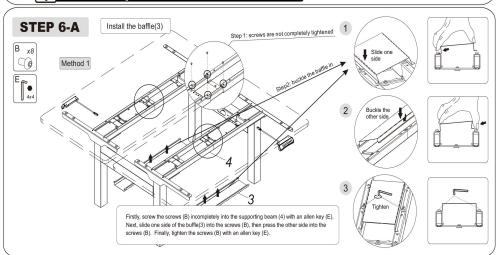

### Troubleshooting

The following suggestions will help you diagnose and resolve common issues and errors. If you encounter an exception that is not listed in the table below, please contact your vendor. All of these exceptions or errors can only be investigated and corrected by the manufacturer or trained

Fault phenomenon	Method
No response while long pressing down arrow after connected with	1.Check if all the cables be connected well
a power supply	2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after	1.Check if all the cables be connected well
connected with a power supply	2. Contact your supplier or dealer
	1. Check if overloaded, max loading: 125kg;
Rising in a low speed	Contact your supplier or dealer
The motor not move as instructed	Contact your supplier or dealer
0 - dawa but a - t	1.Reposition
Go down but not go up	2.Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 125kg:
Downward Silding	2. Contact your supplier or dealer
Eroquently Deposition	Check if overloaded, max loading: 125kg:
Frequently Reposition	2. Contact your supplier or dealer
Overwork	Restart after suspend for 18mins while connecting with power;
(Duty cycle: Max 2min on/18min OFF)	Contact your supplier or dealer;
Not enough up&down height	Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twic it will restore factory settings
,	2.Contact your supplier or dealer



- 1. Power supply: AC100V-240V,50/60Hz
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use. 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
- 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.

  9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure
- that the cleaner used will not pollute the environment.
- 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- 13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children. 14. Keep the original package of the equipment if necessary in case of the future use in




modernofficefurniture.com

**Dual Electric** MODERN Dual Electric
Lift Benching Workstation **Assembly Instructions** 



## Dual Electric Lift Benching Workstation Assembly Instructions

modernofficefurniture.com

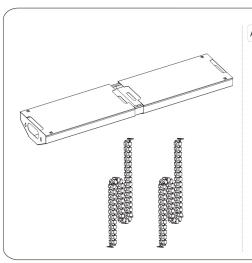



### Accessory list


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.


No.	Image	Spec	Qty
1		M6	4
2	<b>⊕</b>	ST4.2	8
3	To	M5	8
4	To	M6	2
5		Allen Key 4x4	1


### Component list

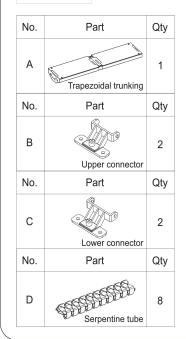


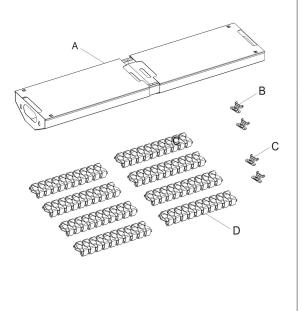


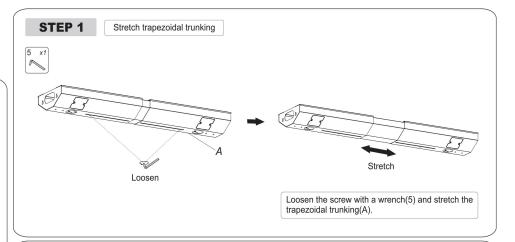


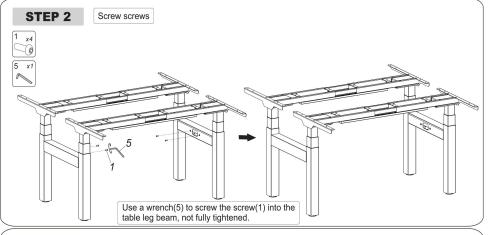


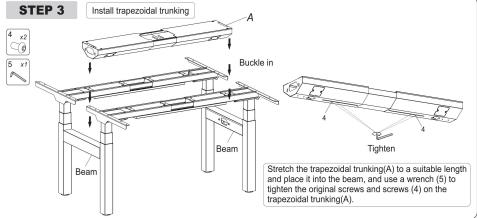

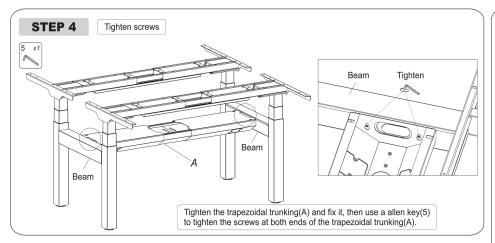

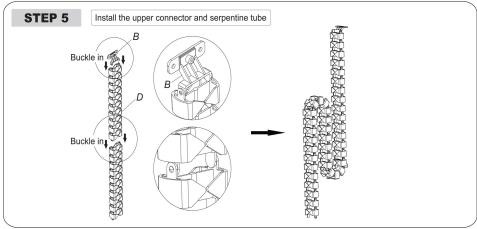

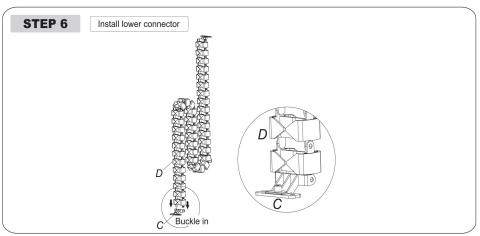

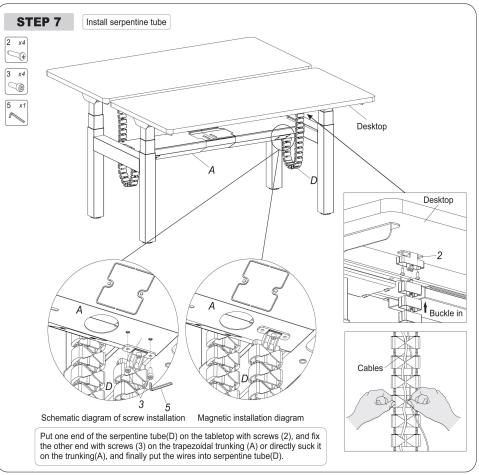




modernofficefurniture.com

MODERN Dual Electric
Lift Benching Workstation **Dual Electric Assembly Instructions** 

### **Handset Operation Guide**
 
### 1. Product Outline





modernofficefurniture.com

### Questions? Call 1-800-443-5117 Mon-Fri, 8:30-5PM CT

### 2. Product Specification

Button introduction: There are seven buttons that "▲", "▼", "1", "2", "3", "M", "A"

- (1) "▲": Adjust the desk upwards
- (2) "▼": Adjust the desk downwards
- (3) "1": Position 1, first height position saved by the user
- (4) "2": Position 2, second height position saved by the user
- (5) "3": Position 3, third height position saved by the user
- (6) "M": Height memory function
- (7) "A": Alert button to remind users changing posture

### 3. Operating Instructions

- Height Adjustable Function:
  - Press the "▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
  - a. Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-";
  - Press "1", "2", or "3" then, that is, save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3";
  - b. Press "1", "2" and "3" button directly to automatically adjust the memory height you saved.

### Reminder Function:

- a. Press REMINDER button "A" to activate the function. The LED display shows "̞ʃʃʃ" or "ϼn".
  b. Two seconds later, press the "▲" or "▼" button to adjust the reminder time only
- when the display screen flashes. The default time of the reminder is 45 minutes, which is shown as "-45". Then press any button to save the time setup, or wait 5 seconds and system will save the time setup automatically. During the countdown, any operation will lead to a repeat starting of the timer. When the countdown finishes, display screen will show "-707" the buzzer will be active with a 10-second "DiDi...DiDi...DiDi..."tone.
- c. Within the 10-second reminder buzz, press any button to reactivate the time countdown that is set up in (b) step. If no operation during the 10-second reminder buzz, there will be another reminder buzz after 5 minutes. No operation during the second buzz will turn off the Long-Time Sitting Reminder.
- d. Press and hold the "A" button for three seconds to turn off the Long-Time Sitting Reminder. The LED display shows "<code>UFF</code>" or "<code>oFF</code>".
- Anti-collision sensitivity adjustment optional features:
  - a. Press and hold the "▲" "▼" button for 5 seconds at the same time to switch the sensitivity. Switch one level for 1 time and divide it into 4 levels (A-3, A-2, A-1, A-0);

  - c. During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.
  - d. Press and hold the "▲" "▼" button for 5 seconds at the same time. If the display does not display the above code, there is no anti-collision function.

### Troubleshooting:

- a. When the LED display shows "ℜ5ʃ" or "r5₺", long press the "▼" button, the standing desk runs to the lowest or highest position and then runs in reverse until it stops, at this time the display shows the height number, release the "▼" button, after the reset, the desk can be used normally;
- b. When it doesn't work and the LED shows "E01" or "E02", please retry 18 minutes later.
- c. If the " $\blacktriangledown$ " button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power, showing "R5F" or "r5t" and then long press the " $\blacktriangledown$ " button to start the reset process.
- d. If you perform the above operations, the desk still does not work properly, please contact customer service.

### Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.