
MOPPERN

Item No.: ET223-BLACK

Installation guide

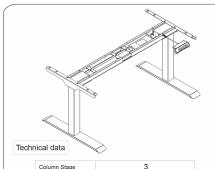



h	nical data	\Diamond
	Column Stage	3
	Max. Weight Capacity	125KG
	Height Range	580-1230mm
	Width Range	1100-1900mm


Accessory list


Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department should you have any queries.


No.	Image	Spec	Qty
Α	@	M6	4
В	(M6	4
С		М6	8
D	0	M6	12
Е	< ⊕	St4.2	16
F		Allen Key 4x4mm	1

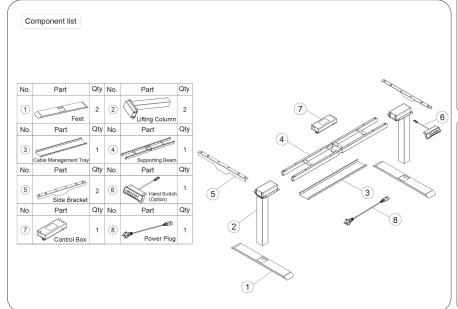


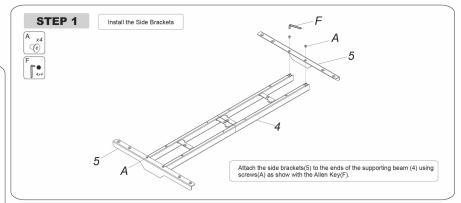


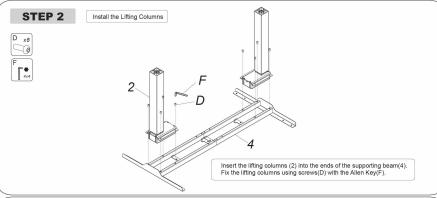


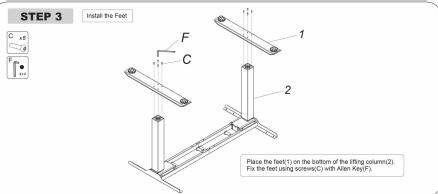

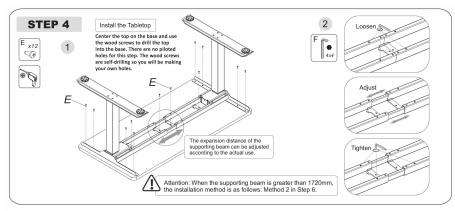

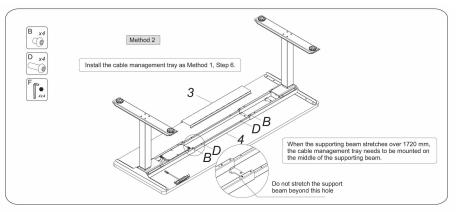

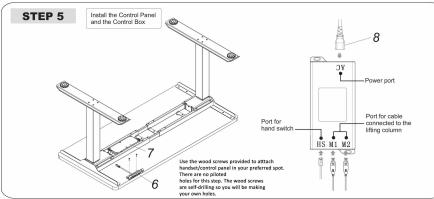

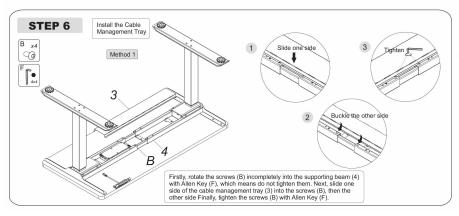

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only themanufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well
	2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1. Check if all the cables be connected well
	2. Contact your supplier or dealer
Rising in a low speed	Check if overloaded, max loading: 125kg;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1.Reposition
Go down but not go up	2.Contact your supplier or dealer
Dawaward alidina	Check if overloaded, max loading: 125kg;
Downward sliding	2. Contact your supplier or dealer
requently Reposition	Check if overloaded, max loading: 125kg:
rrequently Reposition	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
	Contact your supplier or dealer;
Not enough up&down height	Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice it will restore factory settings
	2.Contact your supplier or dealer



- Power supply: AC100V-240V,50/60Hz
- Service Environment: 0-40℃
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.

 5. Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use.

 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not
- 3. Signi in lose cabasey yier V-index or bear of brake system rule or subcucte will not have any effect on the use of the equipment.
 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.

 10. This appliance can be used by children aged from 8 years and above and persons
- the must appliance can be used by clinical against interest and above after persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- win the appliance.

 11. Cleaning and user maintenance shall not be made by children without supervision.

 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazard sources in your operating environment. e.g., on of littler the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children. 14. Keep the original package of the equipment if necessary in case of the future use in transportation.




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday

Item No.: HS11A-1

Operation Instruction

1. Product Outline

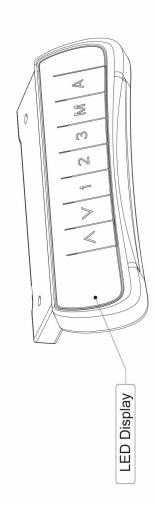

2. Product Specification

Introduction to the Buttons:

- (1) "▲": Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1": Position 1, first height position saved by the user (4) "2": Position 2, second height position saved by the user
- (5) "3": Position 3, third height position saved by the user
 - (6) "M" : Height memory function
- (7) "A": Alert button to remind users changing posture

3. Operating Instructions

- Height Adjustable Function:
- Press the"▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
- a. Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-";
- Press "1", "2", or "3" then, that is, save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3"; b. Press "1", "2" and "3" button directly to automatically adjust the memory height you
- saved.