
MOPPERN

Item No.: ET223-BLACK

Installation guide

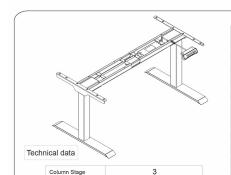

125KG 580-1230mm

1100-1900mm

Max. Weight Capacity


Height Range


Width Range


Accessory	list
-----------	------


Attention: The drawings below are for guidance only and they may differ slightly from the product and fittings received. Please contact our customer service department should you have any queries.


No.	Image	Spec	Qty
Α	©	M6	4
В	0	M6	4
С	O	M6	8
D	6	М6	12
Е	Q	St4.2	16
F		Allen Key 4x4mm	1

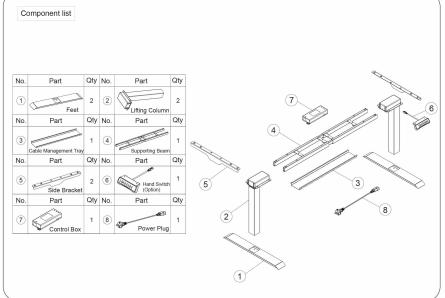


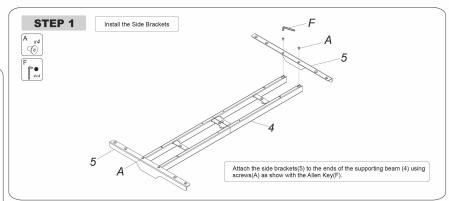


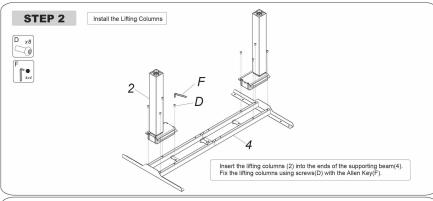


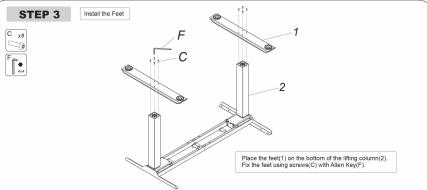

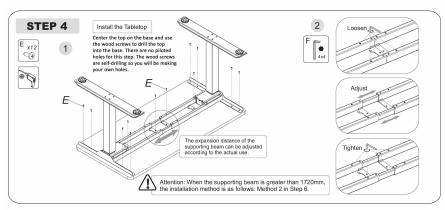

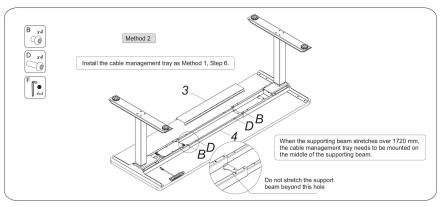

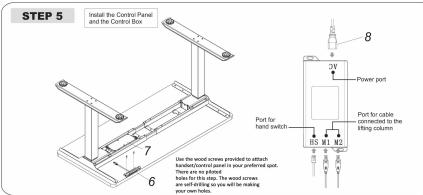

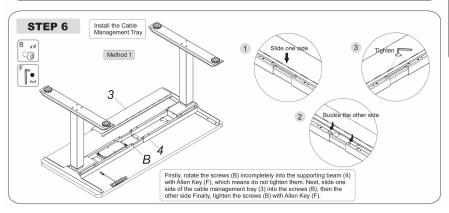

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only themanufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with	1. Check if all the cables be connected well
a power supply	2. Contact your supplier or dealer
No response while pressing up arrow/down arrow after	1. Check if all the cables be connected well
connected with a power supply	2. Contact your supplier or dealer
	1. Check if overloaded, max loading: 125kg:
Rising in a low speed	2. Contact your supplier or dealer
The motor not move as instructed	Contact your supplier or dealer
Go down but not go up	1.Reposition
	2.Contact your supplier or dealer
Downward sliding	Check if overloaded, max loading: 125kg:
Downward sliding	2. Contact your supplier or dealer
Frequently Reposition	Check if overloaded, max loading: 125kg;
Frequently Reposition	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power;
	Contact your supplier or dealer;
Not enough up&down height	Press "M"and "3" together for 3 seconds or more, after hearing continuous beeping for twice it will restore factory settings
	2.Contact your supplier or dealer

Attention

- 1. Power supply: AC100V-240V,50/60Hz 2. Service Environment: 0-40℃
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.

 4. The electric box contains electronic components, metals, plastics, wires etc., so
- dispose of it in accordance with each country's environmental legislation, not the
- displace to it. in advance with consumer state of the general household waste.

 5. Check carefully to ensure correct and complete assembly before using.

 6. Be familiar with all functions and program settings of the product before first use.

 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.

 9. Corroshe or abrasive materials are forbidden to clean the equipment. Must ensure
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use appliance in sale way and understand the hazards involved. Children shall not play with the appliance.
 17. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazard sources in your operating environment. e.g.,
- do not litter the tools around. Aways be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

 14. Keep the original package of the equipment if necessary in case of the future use in transportation.






This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time. Monday - Friday

Item No.: HS11A-1

Operation Instruction

1. Product Outline

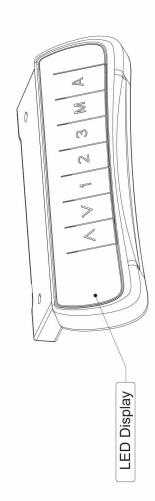

2. Product Specification

Introduction to the Buttons:


- (1) "▲": Adjust the desk upwards
- (2) "▼" : Adjust the desk downwards
- (3) "1": Position 1, first height position saved by the user (4) "2": Position 2, second height position saved by the user
- (5) "3": Position 3, third height position saved by the user
 - (6) "M" : Height memory function
- (7) "A" : Alert button to remind users changing posture

3. Operating Instructions

- Height Adjustable Function:
- Press the"▲" or "▼" button to adjust the height. The LED display shows the current height.
- Height Memory Function:
- a. Press UP or DOWN button and adjust the height to the desired height. Press "M" to save the height, and the screen will display "5-";
- Press "1", "2", or "3" then, that is, save the height to the corresponding position 1 or 2 or 3, which will show in the display screen as "5-1", "5-2", or "5-3"; b. Press "1", "2" and "3" button directly to automatically adjust the memory height you
- saved.



Desk/Credenza Shell Assembly Instructions

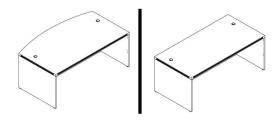

Applies to: (BK/CH/MJ/ML/MWAL/WH) 2001/2002/2043/2089/3624/7124

List of Hardware:


Part	Part
Wood Dowel	Сар
Cam Pin	Leveling Glide
No.	
Cam Lock	Grommet

Tools Needed:

- -Phillips Screwdriver
- A helper!

- 1.) Assemble on carpet or cardboard to protect parts during assembly. Assembly will require 2 people for safety.
- 2.) Locate left & right side panels.
 Screw in the leveling glides by hand.
 Then, insert wood dowels & cam pins.
 The wood dowels fit into the slightly larger holes, compared to the cam pin holes
- 3.) Locate front panel and insert all cam locks on the left & right sides. Then, align one of the side panels and connect the panel by inserting the cam pins into the cam locks and the dowels into the corresponding holes. (see diagram on next page). Twist the cam locks with a Phillips Screwdriver to secure.

Special Note:

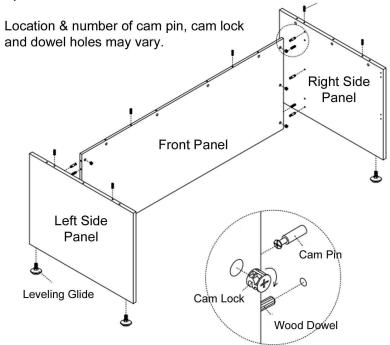

- 4.) Next, insert all cam pins, dowels and cam locks on the top edges of the side panels and front panels. Locate the desktop and with a helper, carefully set the desktop on top of the assembly shown above. Twist cam locks to secure the connection.
- 5.) Your last step is to insert the grommet(s) provided into the desktop. Cover the cam locks with the caps provided.



Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday



4-Door Hutch Assembly Instructions





Applies to: BK/CH/FL/MJ/ML/WH2044 MJ2025-CHL

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday

List of Hardware:

Part	Part	Part
Wood Dowel	Cam Lock Cap	Otty 4 Outside Door Hinge
Cam Pin		Oty 4 Inside Door Hinge
		Qty 8
Cam Lock	Grommet	Hinge Plate

- Figure A are flat


 Outside Door Hinges have a 'bump'
- 1.) Locate the Back Panel, Left & Right Side Panels and Center Shelf. Insert all wooden dowels, cam pins and cam locks. Connect Back Panel to the Center Shelf. Then connect the Left Side Panel, then Right Side Panel. Once all panels are connected, use your screwdriver to twist the cam locks to secure the connections.
- 2.) Connect the Middle Support Panel in same method.
- 3.) Attach Top Surface in same method.
- 4) Attach all 8 Hinge Plates to the inside walls of the hutch. Use two per door. The holes are piloted. DO NOT TIGHTEN DOWN THE SCREWS ALL OF THE WAY. LEAVE WIGGLE ROOM!


Tools Needed:


- -Phillips Screwdriver
- -A Helper


Special Note:

Location & number of cam pin, cam lock and dowel holes may vary.

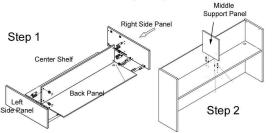

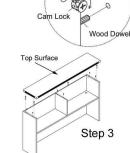

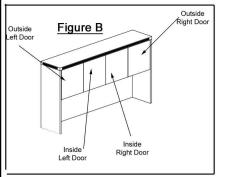

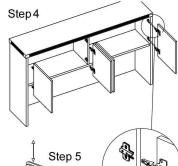

4.) Your next step is to attach the hutch doors. See Figure "B" which identifies the Outside Doors and Inside Doors. There are different hinges that connect the inside & outside hinges.

See Figure "A" to help identify. Attach two hinges per door. Use the hinges with the 'bump' on the Outside Left & Right Doors and the flat hinges on the Inside Left & Right Doors. The holes are piloted. Use the screws provided. Once the hinges are attached, slide the hinges over the Hinge Brackets, fitting the screw head of the Hinge Bracket in the slot of the Hinge. Once fitted, slightly tighten the set screw. Now, set your hutch on your desk. Use the double-sided tape to securely adhere to desktop.


- 5.) Next, it is time to adjust the doors so that they properly align. Using your screwdriver, turn the Set Screw on the hinge to adjust the depth and the screws on the hinge plate to move the door up/down.
- 6.) Last step is to install Cam Lock Caps and Grommet cover.

Video on Hinge Door Adjustment available at link: http://www.modernofficefurniture.com/office-furniture-assembly-instructions.html "How to Adjust Hinges on 4-Door Hutch"



Box/Box/File Desk Pedestal Assembly Instructions

Applies towards: BK/CH/FL/MJ/ML/WH2066

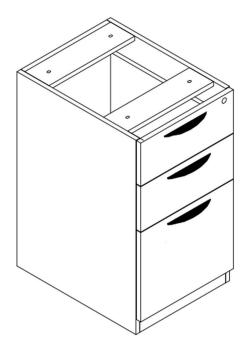

List of Hardware:

Part	Part
4 Large Bolts	3 Drawer Pulls with screws
	4 Leveling
1 set of keys	Glides

- 1.) Install 4 leveling glides.
- 2.) Use the screws to attach drawer pulls.
- 3.) To install under desk, remove the top box drawer (or top two box drawers) by locating the black tabs inside of the left & right drawer slides. Push down on one and push up on the other. This will release the drawer from the slides. Use 4 large bolts to connect to threaded holes on underside of desk. Once done, simply insert drawers back into the slides. They will snap in place.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday