




User Manual


Gas Fire Pit

55000 BTU

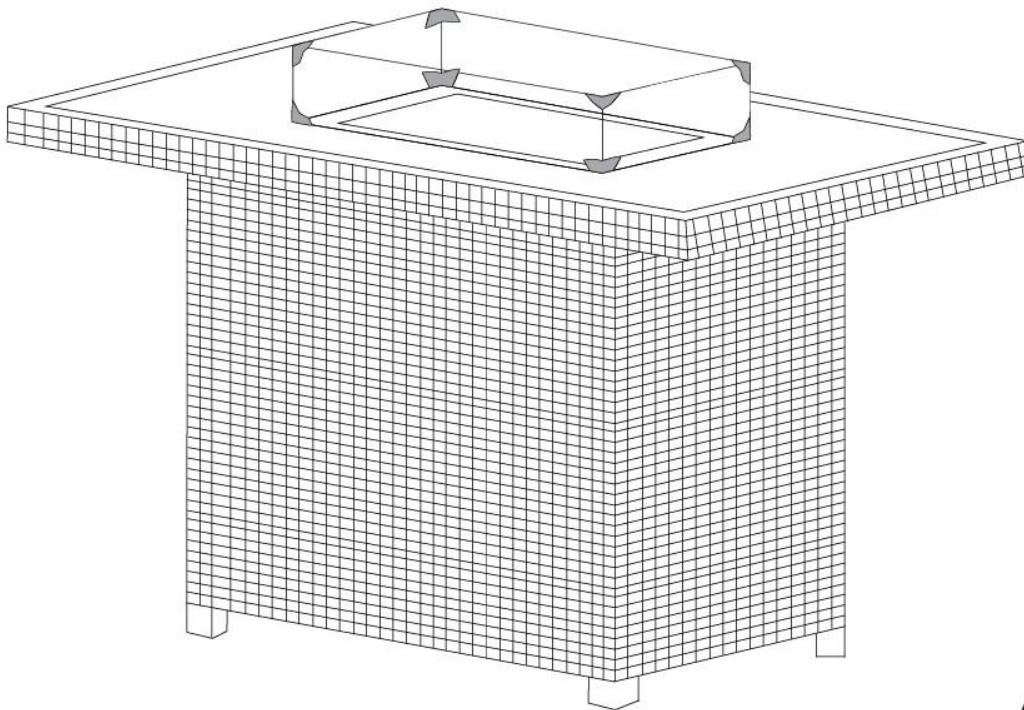

Model No: Ofiretable43-BK/MB/DB/GR



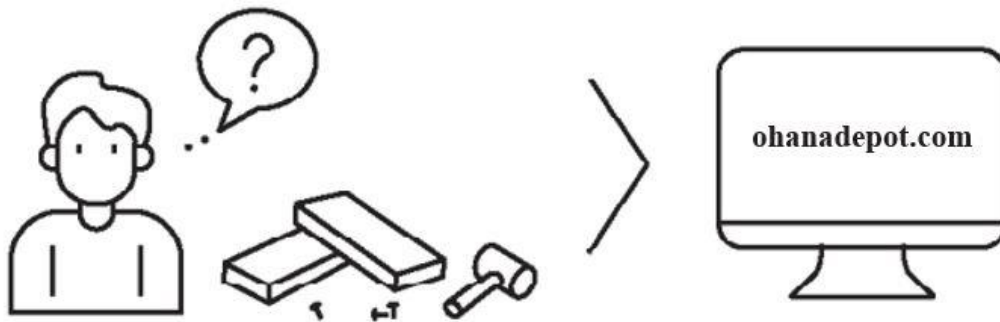

Reach out to us to for expert support



contact@ohanadepot.com



ohanadepot.com



1-503-894-3454 (USA)

1-866-374-8195 (USA)

Scan OR Code for More Products at ohanadepot.com





WARNING


PLEASE READ THE ENTIRE MANUAL PRIOR TO ASSEMBLY AND OPERATION. DO NOT attempt to operate until you have read & understood the general safety information in this manual and all assembly & leak checks are completed.


Verify all parts and components are present. Check all pieces for any damage before assembly. If any parts are damaged or missing, contact customer service at contact@ohanadepot.com

- Some pieces contain sharp edges, which may cause personal injury or property damage. To prevent injury or damage, please wear protective gloves during assembly.
- Set power tools to the lowest speed possible to prevent any damage.



 DANGER	CARBON MONOXIDE HAZARD
	<p>This appliance can produce carbon monoxide which has no odor.</p> <p>Using it in an enclosed space can kill you.</p> <p>Never use this appliance in an enclosed space such as a camper, tent, car or home.</p>

 DANGER
FIRE OR EXPLOSION HAZARD
<ul style="list-style-type: none">• If you smell gas:• Shut off gas supply to the appliance.• Extinguish any open flame.• If the odor continues, leave the area immediately.• After leaving the area, call your gas supplier or fire department.• Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

 WARNING: FOR OUTDOOR USE ONLY
<p>Installation and service must be performed by a qualified installer, service agency, or the gas supplier.</p> <p>INSTALLER: Leave this manual with the appliance.</p> <p>CONSUMER: Retain this manual for future reference.</p>

WARNING

- Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.
- An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING

- If the information in this manual is not followed exactly, a fire or explosion may result in property damage, injury, or loss of life.
- Solid fuels shall not be burned in this appliance.
- Inspect the burner at intervals recommended by the manufacturer.
- The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged.
- The replacement burner shall be that specified by the manufacturer.



WARNING

- DO NOT place any object or add any combustion objects into the fire pit. This product is designed to safely combust propane only.
- DO NOT use this product if the gas supply/gas control system has been submerged underwater. Contact a qualified service technician to replace parts.
- The installation of this product and storage of propane gas must comply with local codes and regulations.



WARNING

- Improper installation, adjustment, alternation, service or maintenance can cause property damage, personal injury, or death. Read and follow the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.
- This is not a toy. Improper use may cause serious injury or death. Children and pets must be supervised at all times when using this product.
- DO NOT connect this product to a remote gas supply.

CONSUMER

Retain this manual for future reference.



WARNING



WARNING

- This product and fuels used to operate this product, and the product of combustion of such fuels, can expose you to chemicals including benzene.



WARNING

- When using the lava/glass rocks in the fire pit for the first time, you may hear popping sounds and lava/glass rocks may bounce in the fire pit for the first 30 minutes. Keep a safe distance from the fire pit until the rocks settle.



WARNING

- Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.

WARNING

You must provide propane gas and a propane cylinder. Use a standard 20 lb. Propane cylinder only.

Use this heater only with a propane vapor withdrawal supply system. See Chapter 5 of the Standard for Storage and Handling of Liquified Petroleum Gas, ANSI/NFPA 58. Your local library or fire department should have this book.

The minimum permissible gas supply pressure of 10 W.C. is required for the purpose of input adjustment.

The minimum hourly of 55,000 BTU is required input rating for a heater for automatic operation at ratings less than full input rating.

The pressure regulator and hose assembly supplied with the appliance must be used.


The installation must conform with local codes, or in the absence of local codes, with National Fuel Gas Code, ANSI Z223.1.

A dented, rusted or damaged propane cylinder may be hazardous and should be checked by your cylinder supplier. Never use a propane cylinder with a damaged valve connection.

The cylinder used must include a collar to protect the cylinder valve.

Do not store a spare LP Gas cylinder under or near this appliance.

Never fill the cylinder beyond 80 percent full.

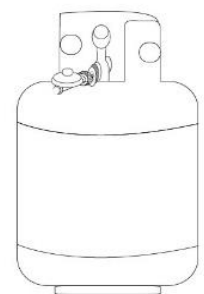


Standard 20 lb. tank

For appliances designed to use a CGA No.791 connection:

- Place the dust cap on the cylinder valve outlet whenever the cylinder is not in use.
- Only install the type of dust cap on the cylinder valve that is provided with the cylinder valve.
- Other types of caps or plugs may result in leakage of propane.


Note: Gas supply pressure: 5 to 250

TABLE DIMENSIONS

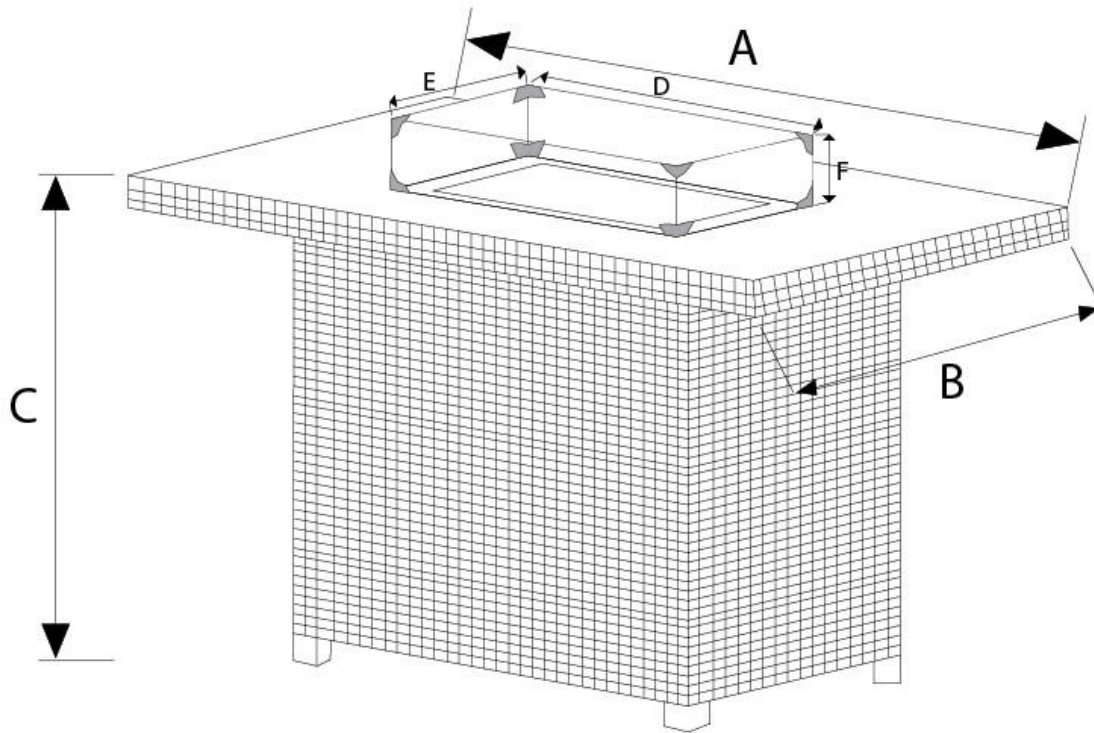







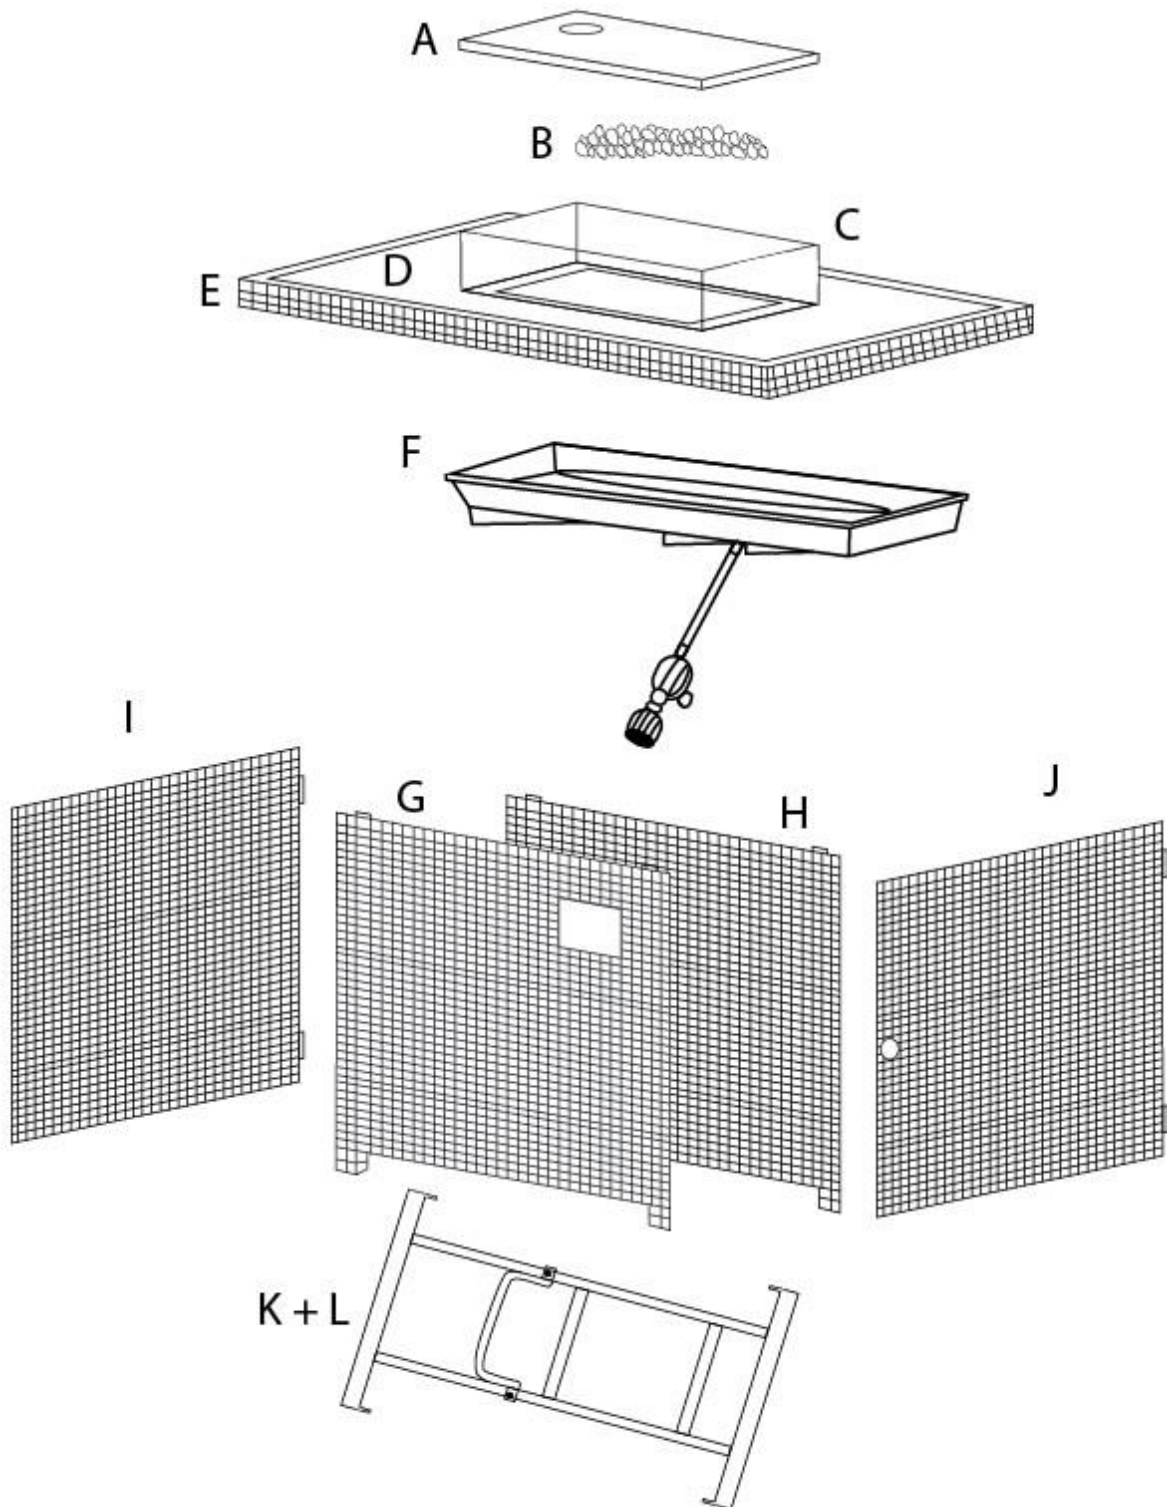





Ref.	Dimension
A	42 in. (106.68 cm)
B	30 in. (76.20 cm)
C	26 in. (66.04 cm)
D	31 in. (78.74 cm)
E	13 in. (33.02 cm)
F	6 in. (15.24 cm)

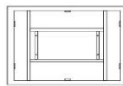
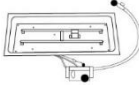



PARTS DIAGRAM



PARTS LIST

Part	Description	Quantity	Picture
A	Fire Bowl Lid	1 pc	
B	Lava Rocks	1 bag	
C	Glass Wind Guard	1 pc	
D	Tempered Glass	1 pc	
E	Table Top Frame	1 pc	
F	Top Frame	1 pc	
G	Front Panel	1 pc	
H	Back Panel	1 pc	
I	Left Panel	1 pc	
J	Door	1 pc	
K	Propane Cylinder H-Frame Support	1 pc	
L	Cross Support	1 pc	

  HARDWARE

 Part	Description	Quantity	Picture
AA	2 inch screw	4 pcs	
BB	1 inch screw	22 pcs	
CC	Tighten Cylinder Collar	1 pc	
DD	Glass Screw	8 pcs	
EE	Clip	2 pcs	

ASSEMBLY INSTRUCTIONS

Choose a clear area for assembly, and a soft surface or cardboard to protect from damages. 2 person assembly recommended.


Step 1

Place the table top frame (E) upside down to the soft, level surface, attach the front panel (G) to the table top frame (E) with the screws (BB) as illustrated.

DO NOT TIGHTEN hardware until all panels have been installed.

Hardware Used

BB 1 inch Screw  4 pcs

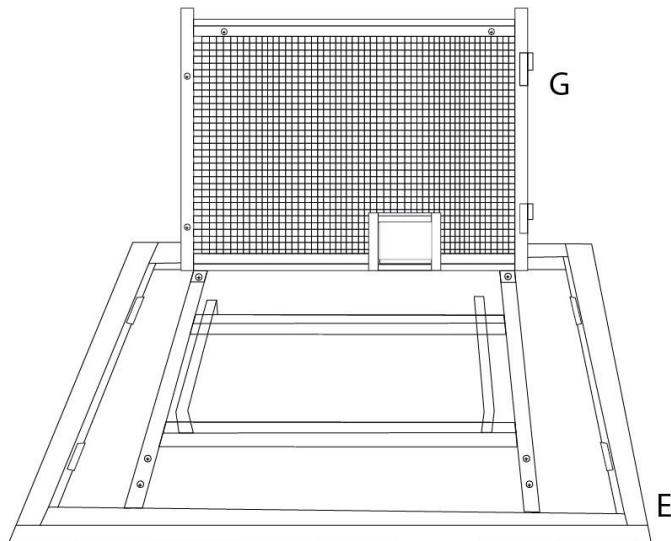


Step 2

Attach the back panel (H) to the table top frame (E) with the screws (BB) as illustrated.

Hardware Used

BB 1 inch Screw  4 pcs

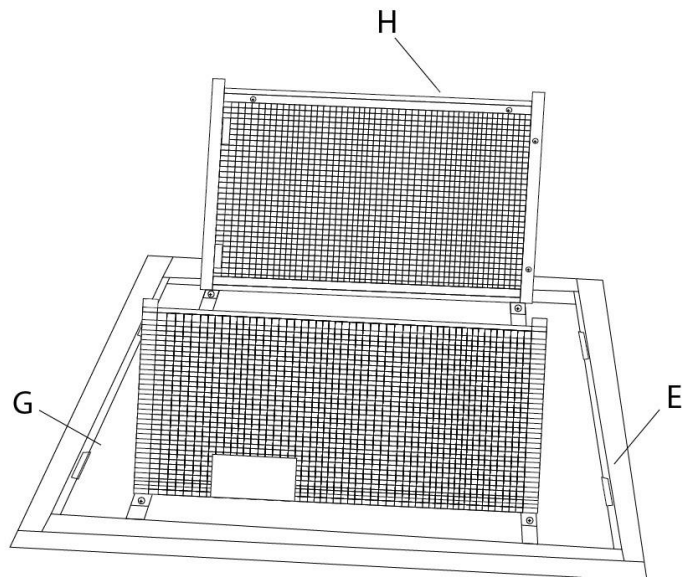


ASSEMBLY INSTRUCTIONS

Step 3

Attach the left panel (I) to the front panel (G) and the back panel (H) with the screws (AA) as illustrated.

Hardware Used

AA 2 inch Screw  2 pcs

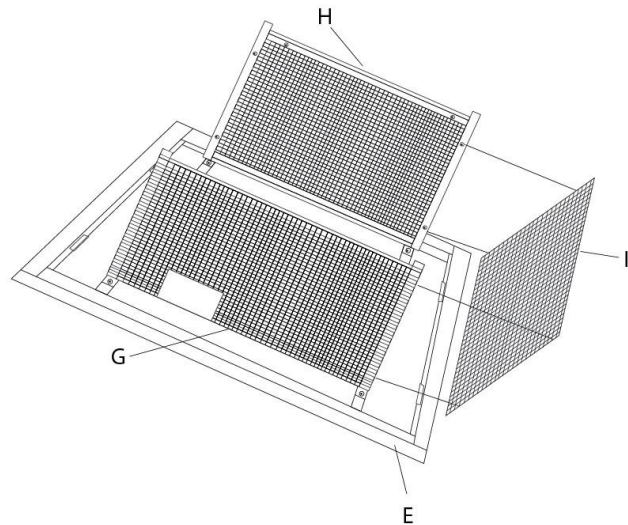


Step 4

Attach the cross support (L) to the propane cylinder H-frame support (K) with the screws (BB) as illustrated.

Hardware Used

BB 1 inch Screw  2 pcs

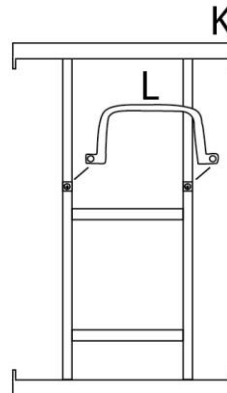

ASSEMBLY INSTRUCTIONS


Step 5

Attach the cylinder holder (K+L) to the front panel (G) and the back panel (H) with the screws (BB) as illustrated.

Note: Using 2 people to lift, turn the gas fire pit into upright position after completing step 5.


Hardware Used

BB 1 inch Screw  4 pcs

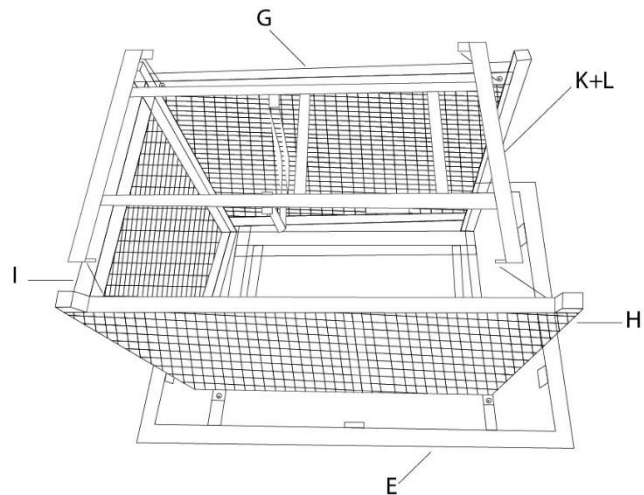

Step 6

Attach the door (J) to the front panel (G) with the hinges as illustrated.

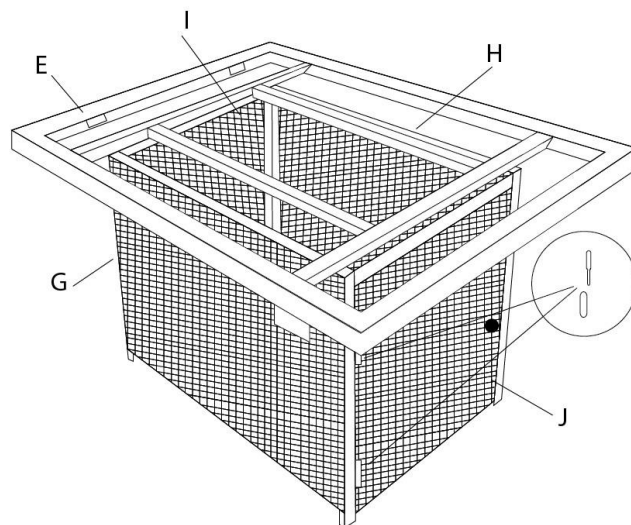


ASSEMBLY INSTRUCTIONS

Step 7

Attach the top frame (F) to the table top frame (E) with the screws (BB) and place the lava rocks (B) on the burning area of the top frame (F) as illustrated.


Hardware Used

BB 1 inch Screw  4 pcs

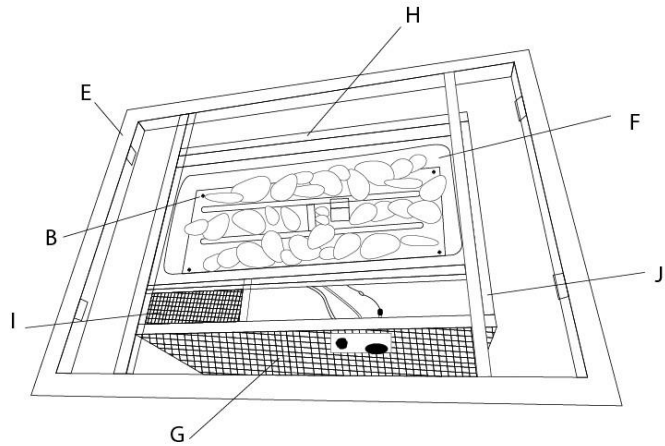

Step 8

Put the tempered glass (D) onto the table top frame (E) as illustrated.

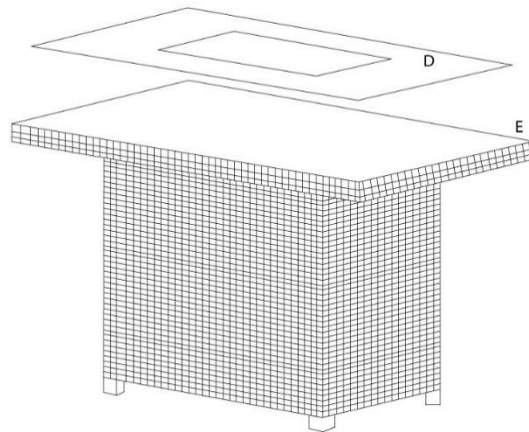


ASSEMBLY INSTRUCTIONS

Step 9

Attach the glass wind guard (C) to the tempered glass (D) with the glass screws (DD) as illustrated.

Hardware Used


DD Glass Screw   8 pcs

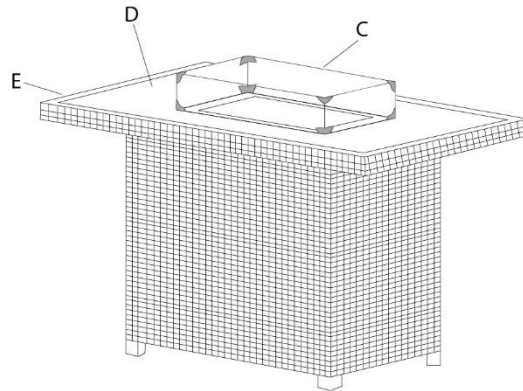

Step 10

Put the LPG cylinder into the cylinder holder (K+L) and turn the cylinder locking bolt clockwise to secure the LPG cylinder as illustrated.

Attach the regulator to the cylinder and turn clockwise by hand.

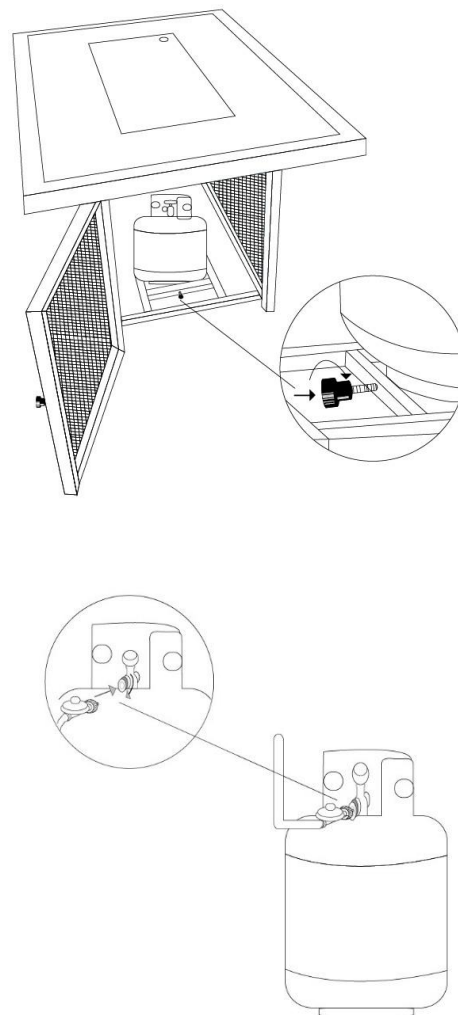

OPERATION

WARNING: DO NOT ATTEMPT TO OPERATE THE APPLIANCE UNTIL YOU HAVE READ AND UNDERSTAND ALL PRECAUTIONS. FAILURE TO DO SO CAN RESULT IN PROPERTY DAMAGE, SERIOUS INJURY, OR DEATH.

CAUTION:

- Do not use an open flame to check for leakage.
- Do not smoke during testing.
- Do not test indoors.
- A leak check must be performed whenever the gas cylinder is replaced.

NOTE:

Use only the pressure regulator supplied with this fire pit.
Replace them with those specified by the manufacturer only.

Before Turning Gas Supply ON:

Your fire pit was designed and approved for OUTDOOR USE ONLY. DO NOT use it inside a building or any other enclosed area.

Make sure surrounding areas are free of combustible materials, gasoline, and other flammable vapors or liquids.

Ensure that there is no obstruction to air ventilation.

Be sure all gas connections are tight and there are no leaks.

Be sure the access panel is clear of debris.

Be sure any component removed during assembly or servicing is replaced and fastened prior to starting.

WARNING

FOR YOUR SAFETY:

If at any time you are unable to light the burner and smell gas, wait 5 minutes to allow gas to dissipate before attempting to light the gas appliance. If after 1 minute, you are unable to light the burner, wait 5 minutes and allow flammable vapors to dissipate before attempting to light the gas appliance.

WARNING

FOR YOUR SAFETY:

DO NOT touch or move the gas appliance for at least 45 minutes after use.

WARNING

Lighting operations should comply with the Lighting Instruction section. Improper lighting operations will cause serious injury and explosion.

OPERATION

WARNING: DO NOT ATTEMPT TO OPERATE THE APPLIANCE UNTIL YOU HAVE READ AND UNDERSTAND ALL PRECAUTIONS. FAILURE TO DO SO CAN RESULT IN PROPERTY DAMAGE, SERIOUS INJURY, OR DEATH.


Before Lighting

The gas fire pit should be thoroughly inspected before each use, and by a qualified service person at least annually.

If relighting a hot gas fire pit, always wait at least 5 minutes.

Lighting instructions

1. Make sure control knob is in the "OFF" position.
2. Turn LP cylinder gas valve to fully open position.
3. Press down control knob and turn it counter clockwise to the "LOW" position.
4. Push in the gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.
5. If the burner is not lit, press down the control knob and turn clockwise to "OFF" position, repeat from step 3 after 5 minutes.
6. When the burner is lit, turn the control knob to the desired heat output position between "LOW" and "HIGH".
7. Press down and turn the control knob clockwise to "OFF" position to shut down the appliance. Turn off the cylinder gas valve.

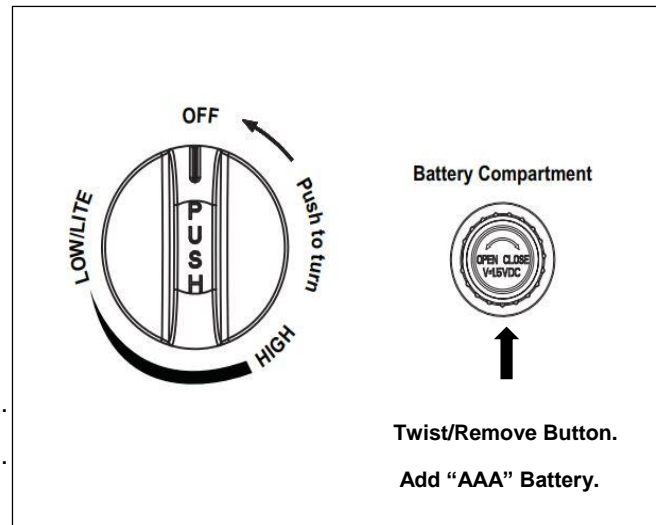


Flame Characteristic

Normally the burner flame is yellow.

If the burner flame is blue and very small, please check the gas cylinder, as it may be low gas pressure or empty. If there is enough gas in the cylinder, please contact customer service to change the burner of the gas fire pit.

If flames lift away from burner or backfire happens or produce thick black smoke, the fire pit should be turned off immediately.

The fire pit should not be operated again until the unit is serviced and/or repaired by a qualified service technician.

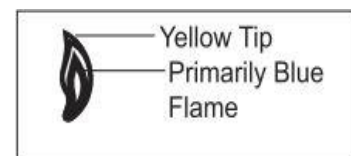

OPERATION


CAUTION: AVOID INHALING FUMES EMITTED FROM THE GAS APPLIANCE'S FIRST USE. SMOKE AND ODOR FROM THE BURNING OF OILS USED IN MANUFACTURING WILL APPEAR. BOTH SMOKE AND ODOR WILL DISSIPATE AFTER APPROXIMATELY 30 MINUTES. THE GAS APPLIANCE SHOULD NOT PRODUCE ANY THICK BLACK SMOKE.

NOTE:

The burner may be noisy when initially turned on. To eliminate excessive noise from the burner, turn the control knob to the LOW position. Then, turn the knob to the level of heat desired.

Operation pressure checked:

If the flame is very small, this is because the supply pressure is not enough. Please refill the gas cylinder.

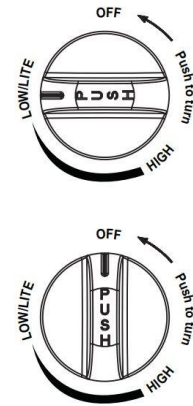

Re-light:

1. Turn the control knob to "OFF" position.
2. Wait five (5) minutes before attempting to relight the appliance.
3. Repeat steps beginning with step 3 of the lighting instruction.

Shut down instructions:

1. Push in and turn the control knob clockwise to "OFF" position.
2. Turn the LP cylinder gas valve clockwise to "OFF" position when the appliance is not in use.

The Event of Gas Leakage:

1. Turn the control knob to "OFF" position.
2. Turn LP cylinder value to "OFF" position.
3. Wait 5 minutes to allow gas to dissipate.
4. If the odor continues, immediately call the gas supplier.

WARNING: Gas appliance will be hot after use. Handle with extreme care.

LOCATING FIRE PIT FOR USE


CAUTION: WHEN CERTAIN MATERIALS OR ITEMS ARE LEFT ABOVE, BESIDE OR UNDER THIS APPLIANCE WHILE IN USE, THEY WILL BE SUBJECT TO RADIANT HEAT AND COULD BE SERIOUSLY DAMAGED.

This gas fire pit is primarily used for the heating of outdoor patios, decks, pools and open working areas.

Always make sure that adequate fresh air ventilation is provided. Follow the spacing tolerances at all times.

This gas fire pit must be placed on level, firm ground.

Never operate in an explosive atmosphere. Keep away from areas where gasoline or other flammable liquids or vapors are stored or used.

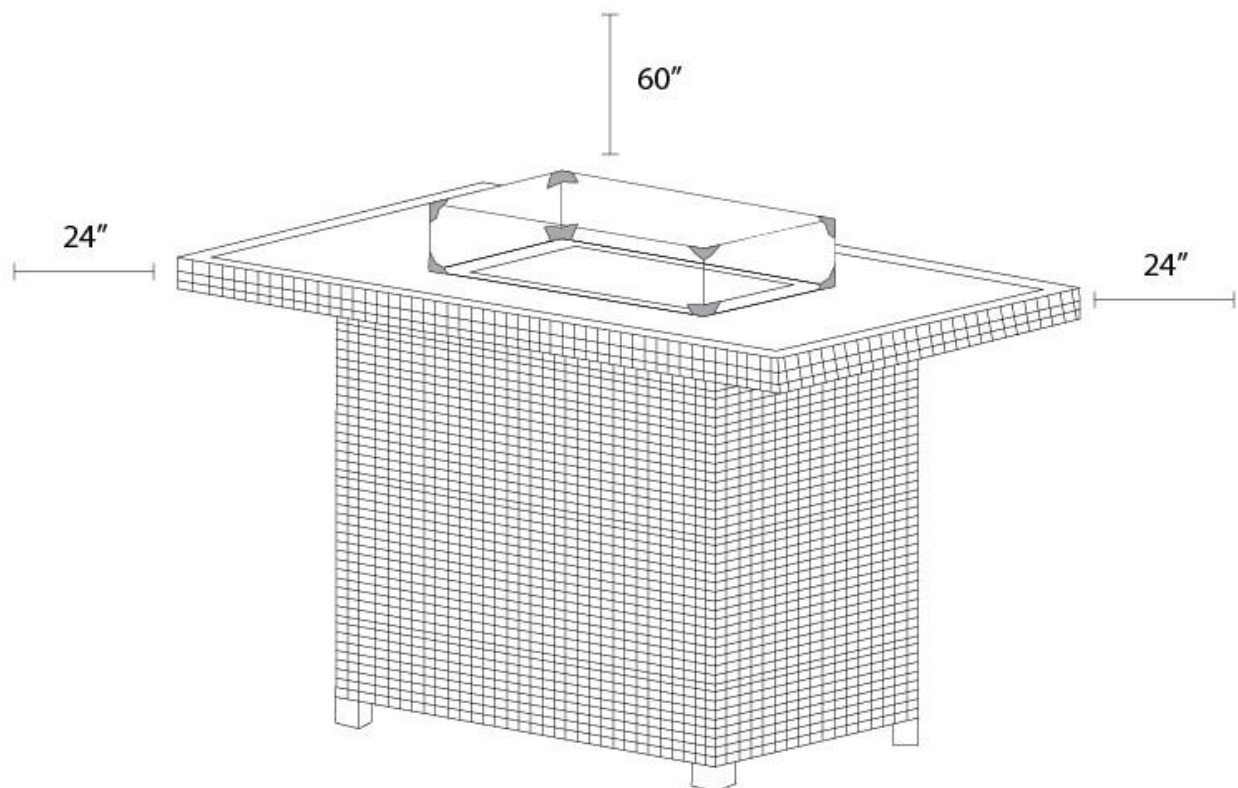

MAINTENANCE AND STORAGE

CLEANING AND MAINTENANCE:

To enjoy years of outstanding performance from gas fire pit, make sure you perform the following maintenance activities on a regular basis:

- Keep exterior surfaces clean.
- Use warm soapy water for cleaning.
Never use flammable corrosive cleaning agents.
- While washing your unit, be sure to keep the area around the burner dry at all times. If the gas control is exposed to water in any way, do NOT try to use it. It must be replaced.
- Keep the appliance area free and clean from combustible materials, gasoline and other flammable vapors and liquids, not obstructing the flow of combustion and ventilation air, keeping the ventilation opening(s) of the cylinder enclosure free and clear from debris.
- Check if there are cracks or worn sections on the hose.
If yes, please call our customer service to replace the hose.
- **At least once a year, the unit should be inspected** for the presence of spiders, spider webs or other insects.
- Air flow must be unobstructed. Keep controls, burner and air circulating air passageways clean. Signs of possible blockage include:

Gas fire pit does NOT reach the desired temperature.

Gas fire pit flow is excessively uneven.

Gas fire pit makes popping noises.
- Spiders and insects can nest in burner or orifices.
This dangerous condition can damage the gas fire pit and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away smaller particles.

WARNING:

FOR YOUR SAFETY

DO NOT touch or move the gas appliance for at least 45 minutes after use.

Allow all burner elements to cool before touching.

NOTE:

In a salt – air environment such as near an ocean, corrosion occurs more quickly than normal.

Frequently check for corroded areas and repair them promptly.

NOTE:

Wait until the gas appliance is cool before covering.

MAINTENANCE AND STORAGE

- Store the fire pit indoors during the winter if it will be subjected to freezing temperatures.
- Disconnect and remove the cylinder from the appliance before the appliance can be stored indoors.

STORAGE

- Turn the control knob to “OFF” position.
- Turn the LP cylinder to OFF position.
- Allow at least 45 minutes for the fire pit to cool down after use, then disconnect and remove the cylinder.
- Cylinder must be stored outdoors in a well –ventilated area out of the reach of children. When the cylinder is disconnected, tightly install the threaded value plugs, and do not store it in a building, garage or any other closed area.
- You may store product indoors ONLY if the cylinder is disconnected and removed.
- Keep the fire pit area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- If you do not use a cover, store this outdoor fire pit in a dry location to maximize product life.
- Store gas fire pit in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow and debris).
- A qualified service person should install and repair the fire pit and inspect it annually.
- **It might be necessary to clean this fire pit frequently. You must keep the control compartment, burner and circulating air passageway clean.**

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner will not light	LPG cylinder valve is closed.	Ensure the regulator is attached to the cylinder valve. Open the valve.
	Coupling nut not fully connected.	Manually tighten the coupling nut to the cylinder valve.
	Low or empty LPG cylinder.	Refill or replace the LPG cylinder.
	Electrode and burner are wet.	Dry the appliance.
	Failed igniter.	Possible part replacement required.
	Broken electrode or spark.	Possible part replacement required.
	Carbon deposit accumulated on the burner port or thermocouple.	Clean the burner and thermocouple.
		Possible part replacement required.
	Obstruction of gas flow.	Ensure the hose is not bent, tangled, or damaged.
Propane Gas Leak	Disconnection between the burner and LPG cylinder.	Ensure no connections are broken.
	Coupling nut improper connection.	Manually tighten all connections.
Sudden drop in flow or reduced flame height	Gas line worn out.	Gas line must be replaced.
	Gas flow regulator is triggered.	Turn off the appliance and reignite.
Flame is yellow or orange or Irregular flame pattern or Fire in venturi or burner	New burner may have residual manufacturing oils.	Allow the fire pit to operate for at least 15 minutes.
	Spider webs or insect nest in burner.	Clean burner.
	Burner ports clogged or blocked.	Clean burner port.
	Gas flow obstruction.	Ensure gas line is not bent and burner is not clogged with debris.
	Poor alignment of opening to burner.	Ensure the burner is properly engaged with opening.
Flame goes out	High wind.	DO NOT use the appliance in high winds.
	Low LPG level.	Exchange, refill or replace LPG cylinder.
	Carbon deposit accumulated on the burner port or thermocouple.	Clean the burner and thermocouple.
Flame seems to lose heat in cold weather	Ice has built upon the surface of the LPG cylinder.	Wait until the LPG cylinder warms up and defrosts.
		DO NOT use this appliance when outdoor temperature is below 40°F (4°C) or LPG cylinder is less than 1/4 full.
		Replace LPG cylinder.

LIMITED ONE YEAR WARRANTY

What is covered under this warranty?

This product is covered under Manufactured Limited Warranty. To ensure your complete satisfaction, this warrants to the original purchaser that this furniture is free from defects in material and workmanship as of the date of purchase and that it will, under normal use proper care, remain so for one year after the date of purchase. Replacement of missing or initially defective parts will be sent at no charge for a period of 10 days from date of purchase. The manufacturer and retailer will not be responsible for missing parts and/or hardware after 10 days from date of purchase.

Warranty does not cover:

Freight and packaging charged to and from our customer service center remain the customer's responsibility. Labor or material charges to remove or replace parts are not covered under this warranty. Any floor sample sales or clearance sales from the store are not covered under this warranty. Furniture used for commercial purposes, failures caused by improper care, unreasonable or abusive use, damage by modification or alteration, freeze damage, acts of nature, rust, fabric stains, ripping or fading, purchased parts or return freight and packaging charges are not covered under this warranty. Proof of purchase (dated register receipt) is required for warranty claims.

How to obtain service:

If you have any questions or concerns, please contact customer service:
contact@ohanadepot.com.