


**INSTALLATION INSTRUCTIONS**  
**Full Doors: for Can-Am Defender**

Item	Description
A	Driver Door
B	Passenger Door

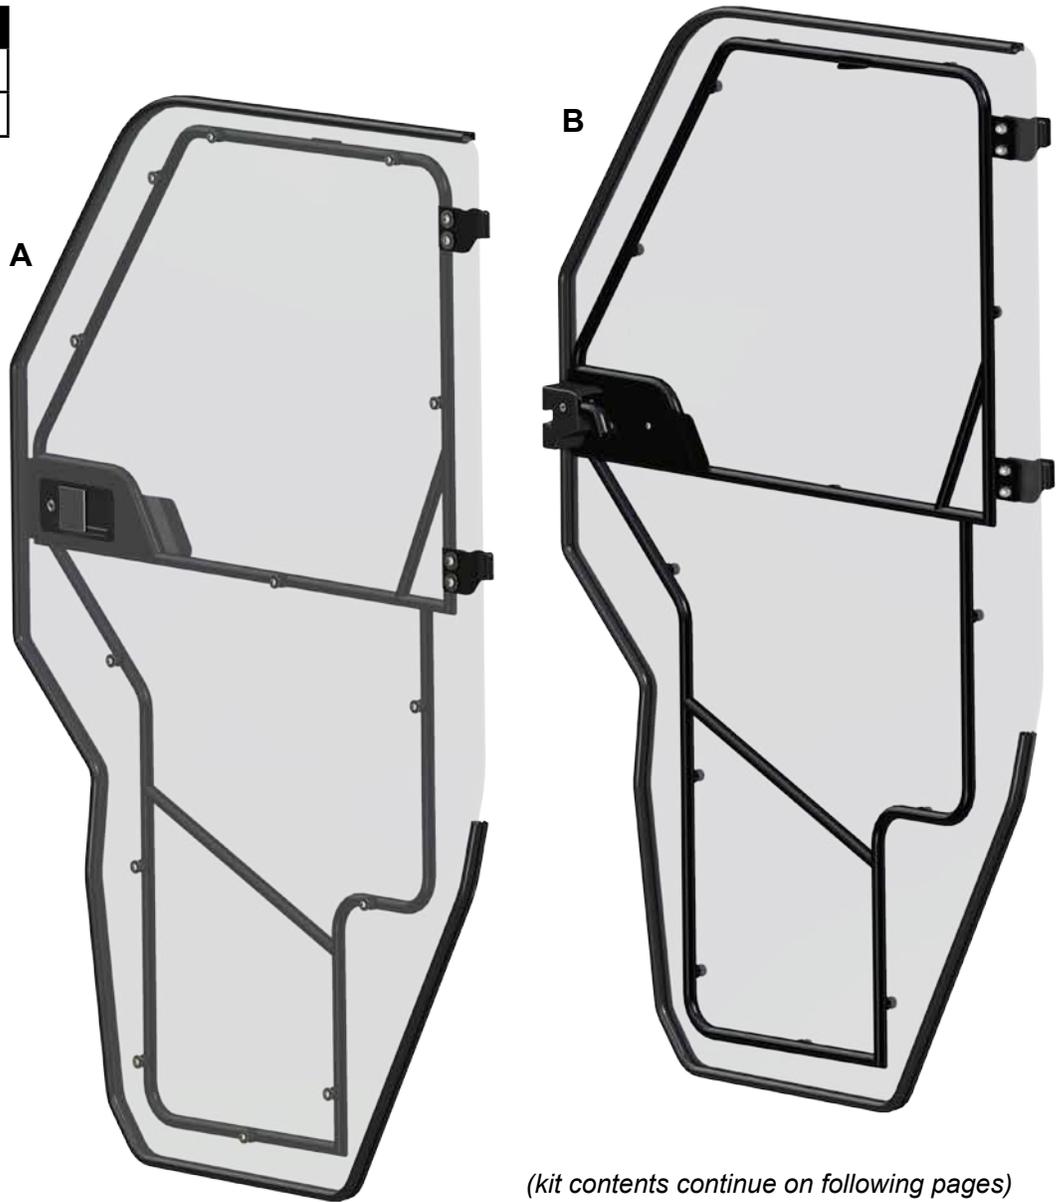

*(kit contents continue on following pages)*

**Read instructions and view illustrations before beginning.**

**Need help with your installation?**

 [sales@superatv.com](mailto:sales@superatv.com)
 [www.superatv.com](http://www.superatv.com)

 1-812-574-7777
  8:00am - 9:00pm EST M-Th  
 8:00am - 7:00pm EST Friday  
 9:00am - 2:00pm EST Saturday

*Thank You  
 For Choosing*




**Liability Statement**  
 SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

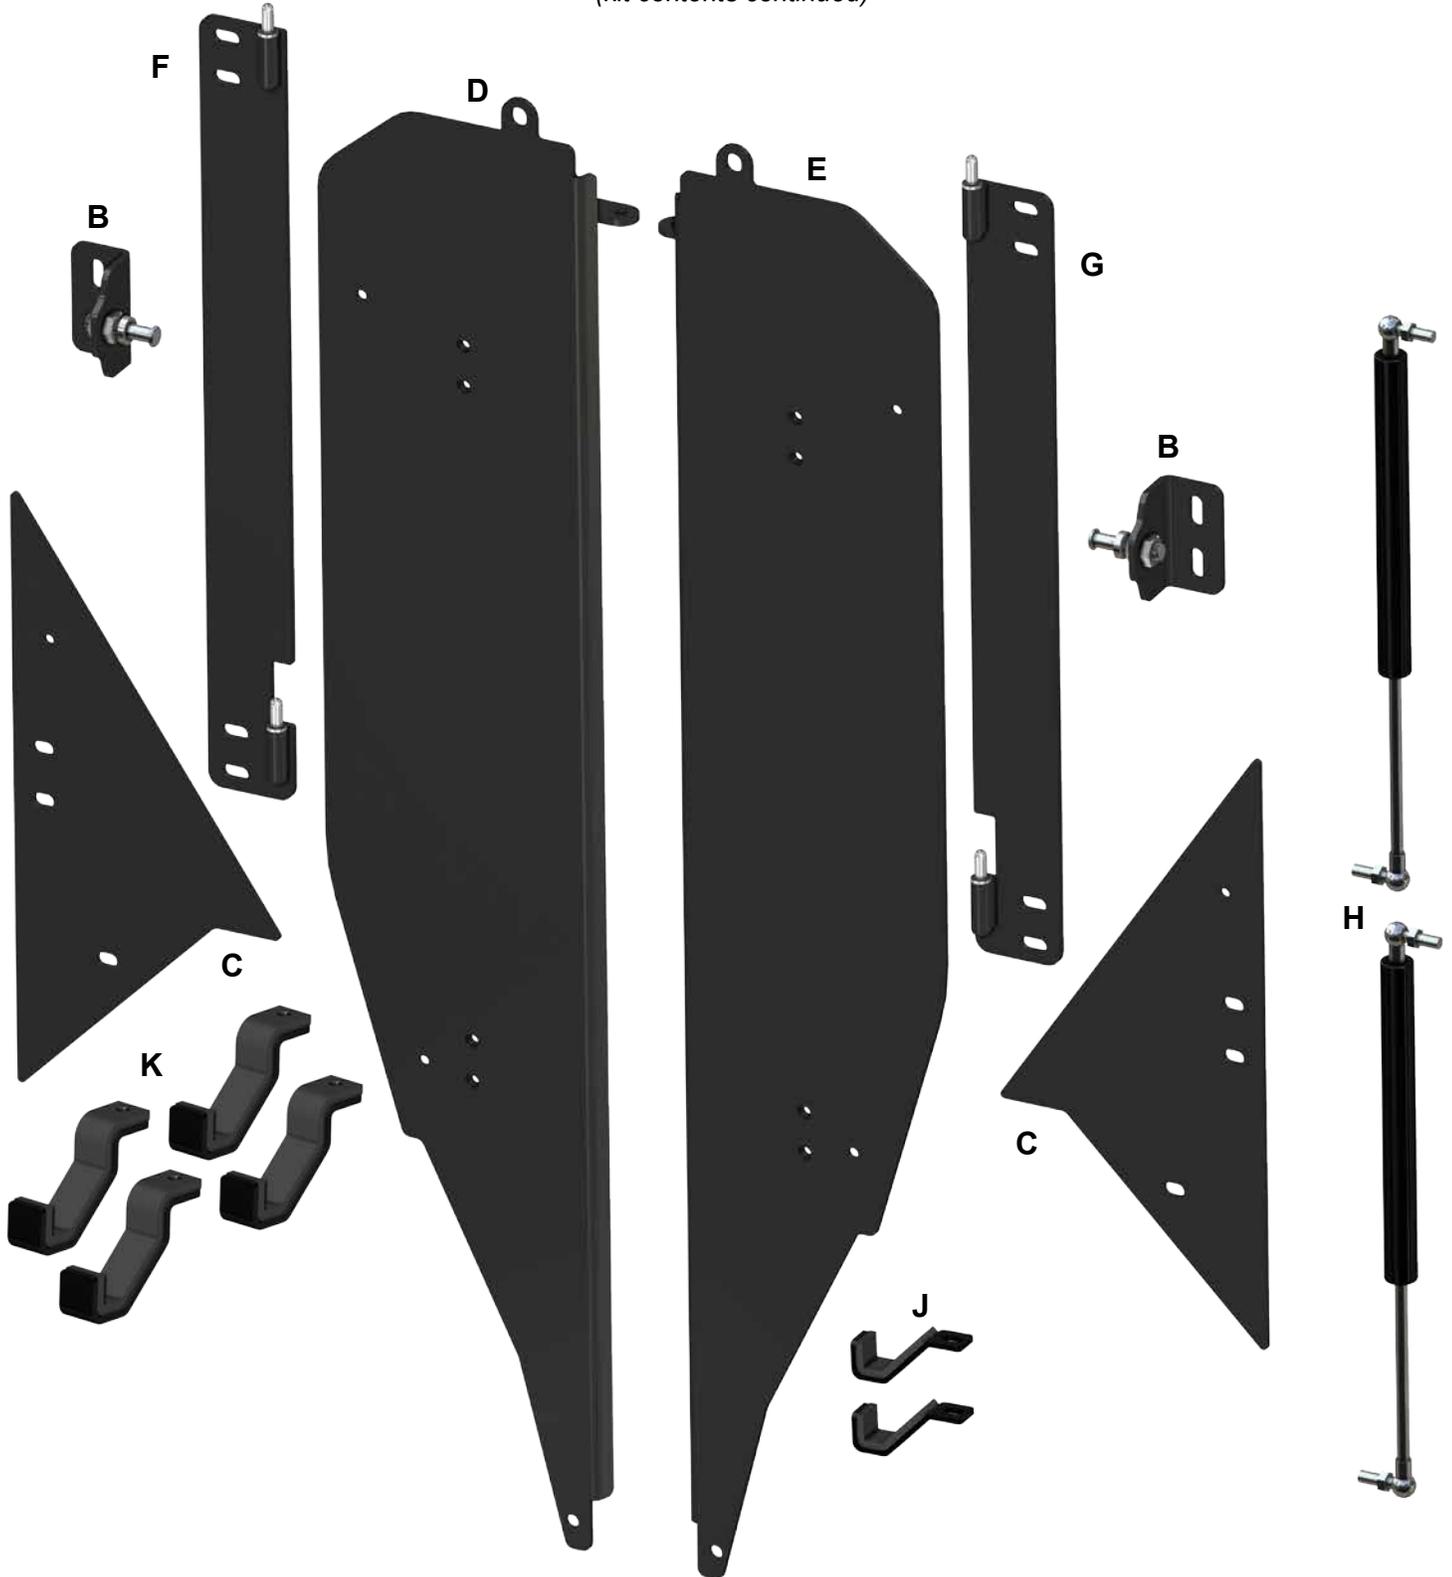



Item	Description	Qty	Item	Description	Qty
B	Striker	2	G	Driver Hinge Assembly	1
C	Pillar Bracket	2	H	Gas Strut	2
D	Passenger Hinge Mount	1	J	Small Clamp	2
E	Driver Hinge Mount	1	K	Large Clamp	4
F	Passenger Hinge Assembly	1			

(kit contents continued)

4x  M5-.80 x 20mm Lg. FHCS

6x  M6-1.0 x 20mm Lg. BHCS

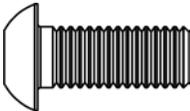
8x  M8-1.25 x 20mm Lg. BHCS

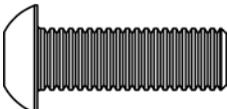
4x  M8-1.25 x 25mm Lg. BHCS


2x  M8-1.25 x 35mm Lg. BHCS

4x  M5-.80 Nylock Nut


6x  M6-1.0 Nylock Nut

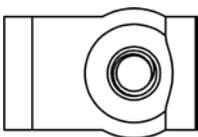2x  M8-1.25 "U" Nut

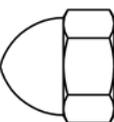8x  M8 Acorn Nut

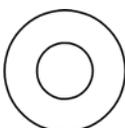6x  M6 Washer

8x  M8-1.25 Nylock Nut

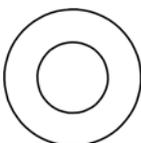14x  M8 Washer

**Cleaning:**



- Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
  - Never use abrasive cleaners, abrasive pads, or gritty cloths.
  - Never use razor blades, scrapers, squeegees, brushes, etc.
1. Thoroughly rinse to float off dirt and mud.
  2. Using a soft cloth, or microfiber cloth, clean with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
  3. To prevent water spots, use a chamois to blot dry.

**Removal:** keep all components removed from machine.






**Driver Door Installation:** do not tighten hardware completely unless noted.

- Install Driver Hinge Mount (E) to Frame with stock hardware. Tighten hardware.
- Install Driver Hinge Assembly (G) to Driver Hinge Mount (E) with hardware shown.

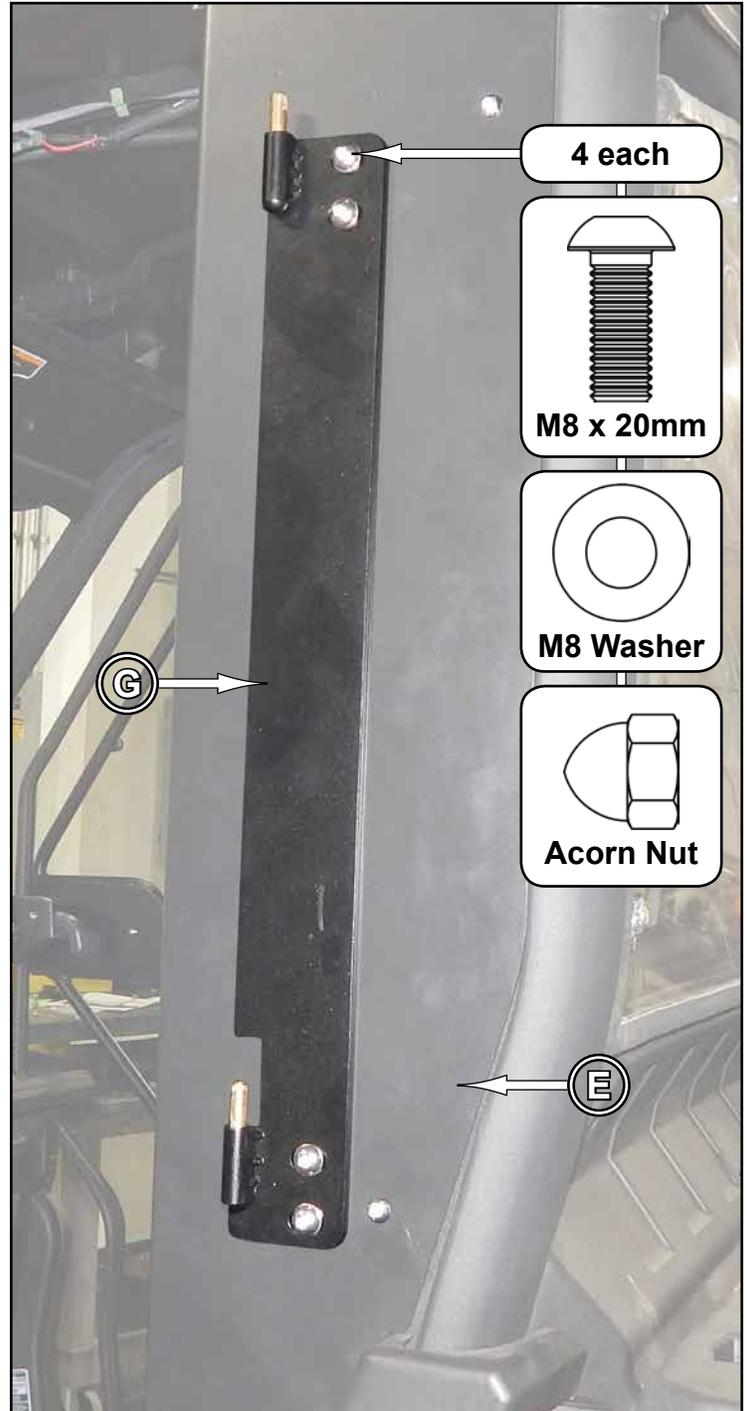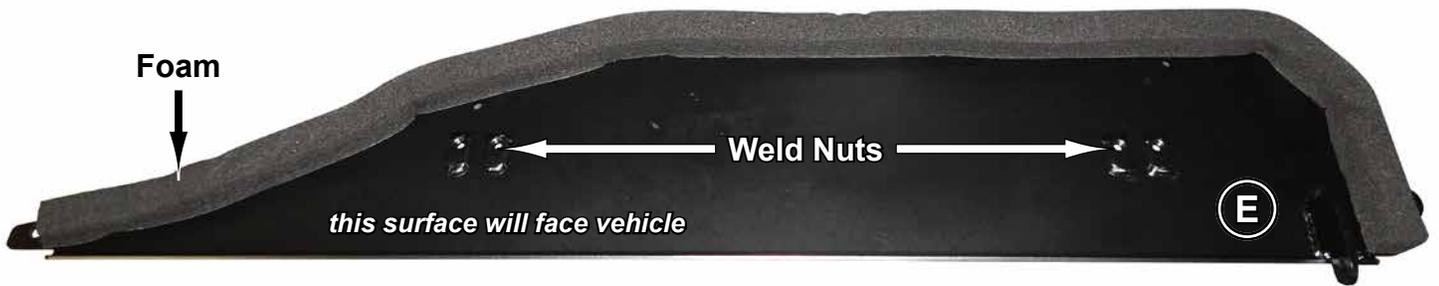


**Driver Door Installation continued:** do not tighten hardware completely unless noted.

- Install Large Clamps (K) to Driver Hinge Mount (E) with hardware shown. Tighten hardware.
- Install Acorn Nuts onto previously installed hardware.

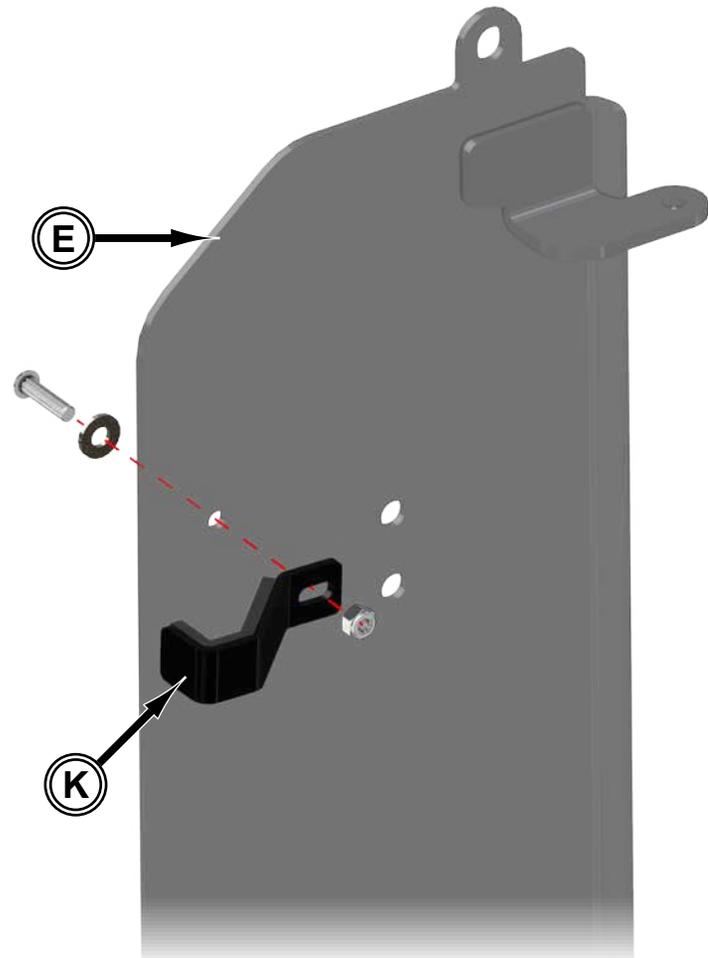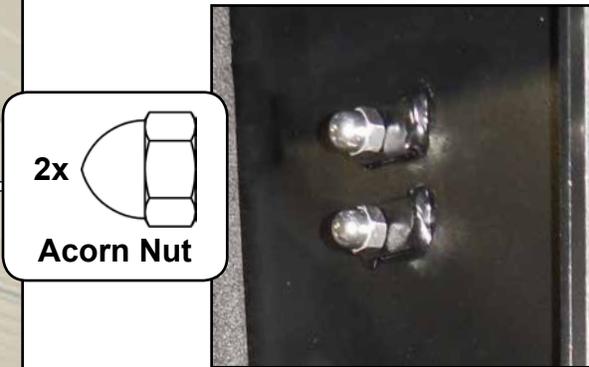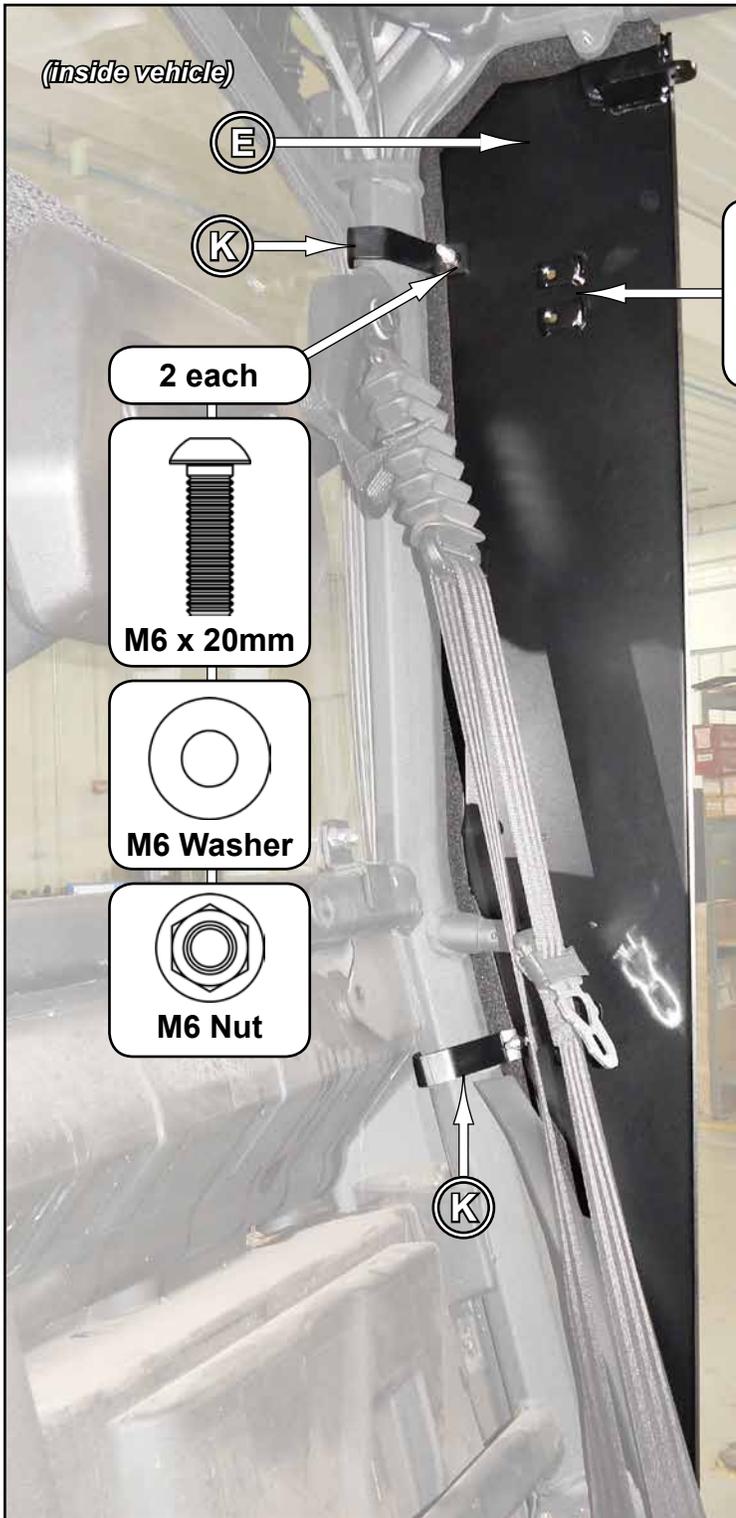


**Driver Door Installation continued:** do not tighten hardware completely unless noted.

- Install provided "U" Joint to Pillar.


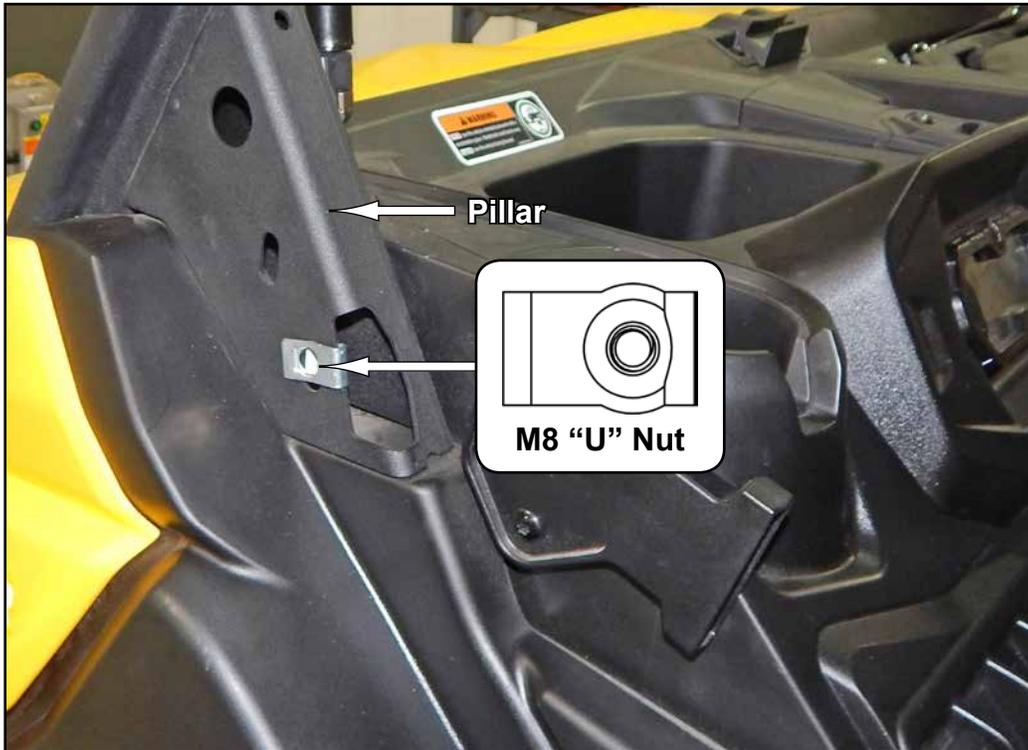


- Secure Pillar Bracket (C) to "U" Nut with hardware shown. Tighten hardware.
- Install Small Clamp (J) to Pillar Bracket (C) and Frame. Tighten hardware.

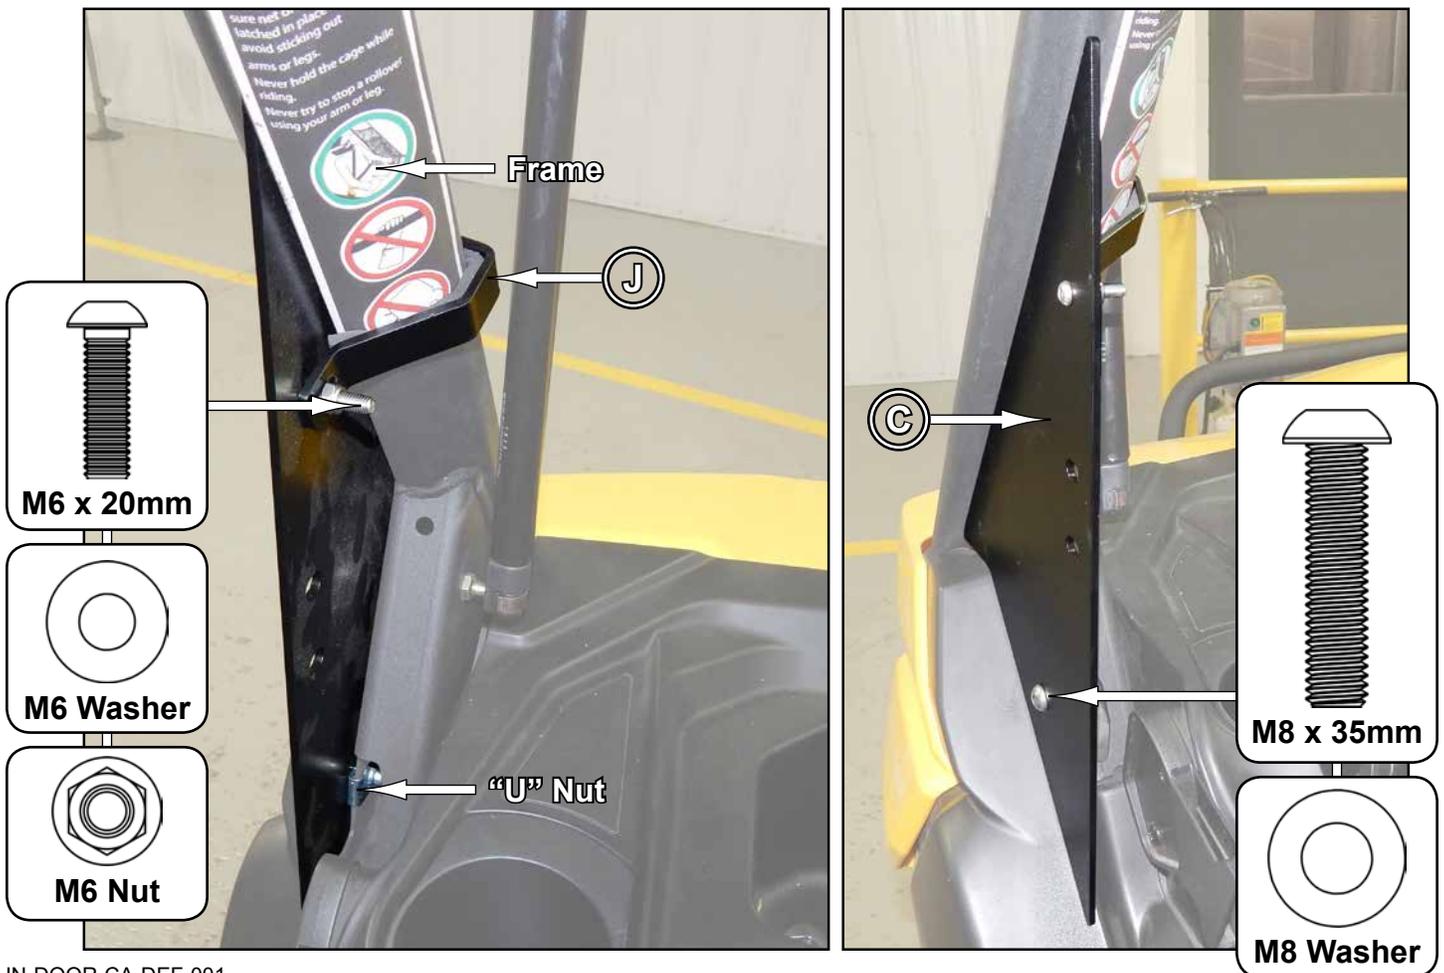


**Driver Door Installation continued:** do not tighten hardware completely unless noted.

- Install Striker (B) to Pillar Bracket (C) with hardware shown.

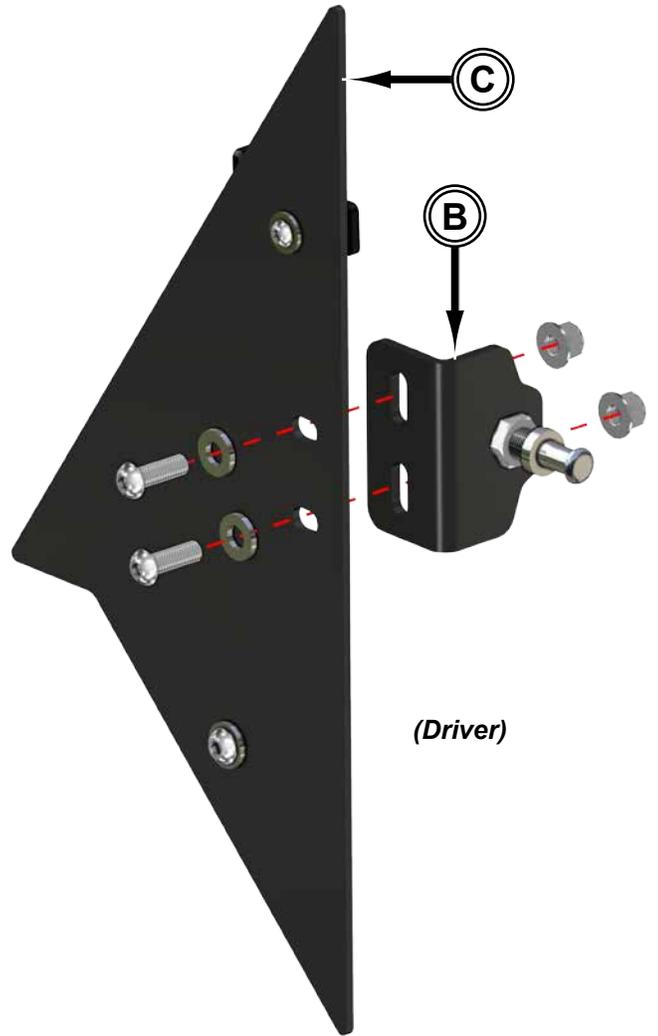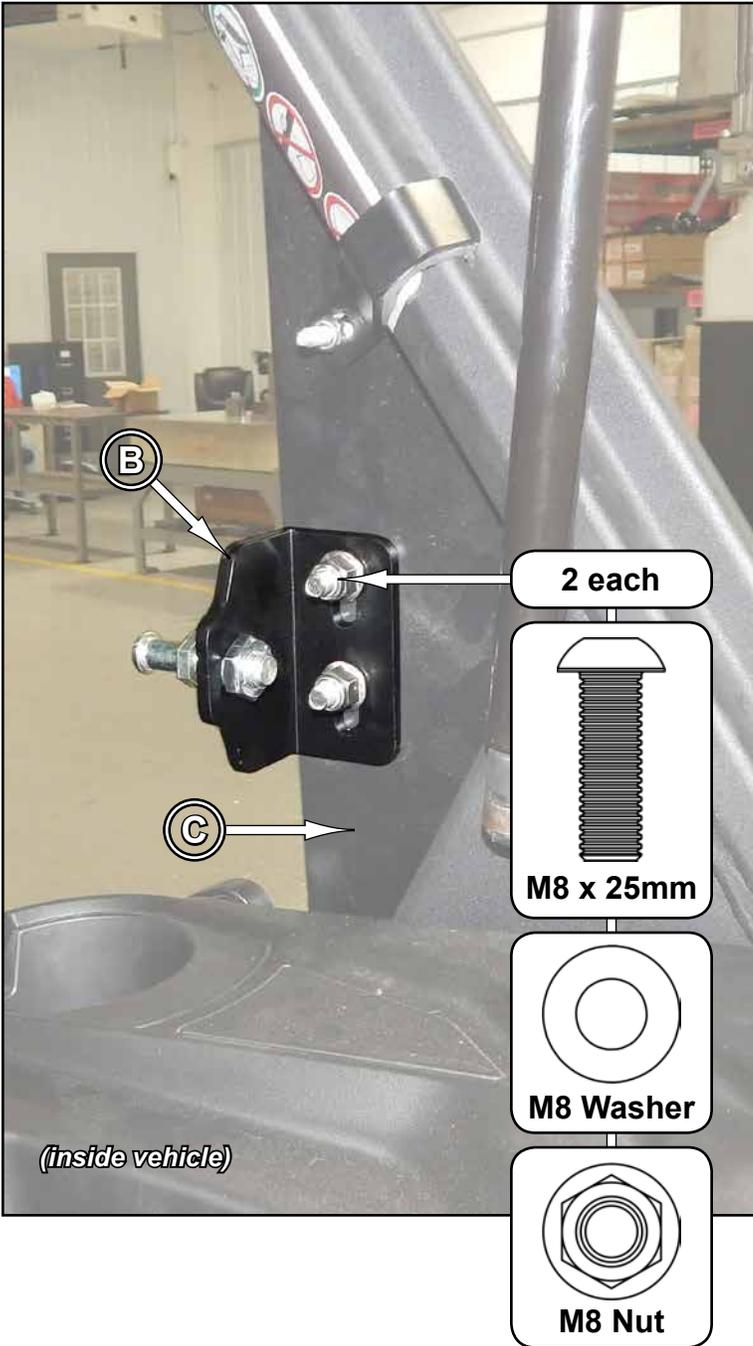

**Driver Door Installation continued:** do not tighten hardware completely unless noted.


- Install Driver Door (A) onto Driver Hinge Assembly (G).

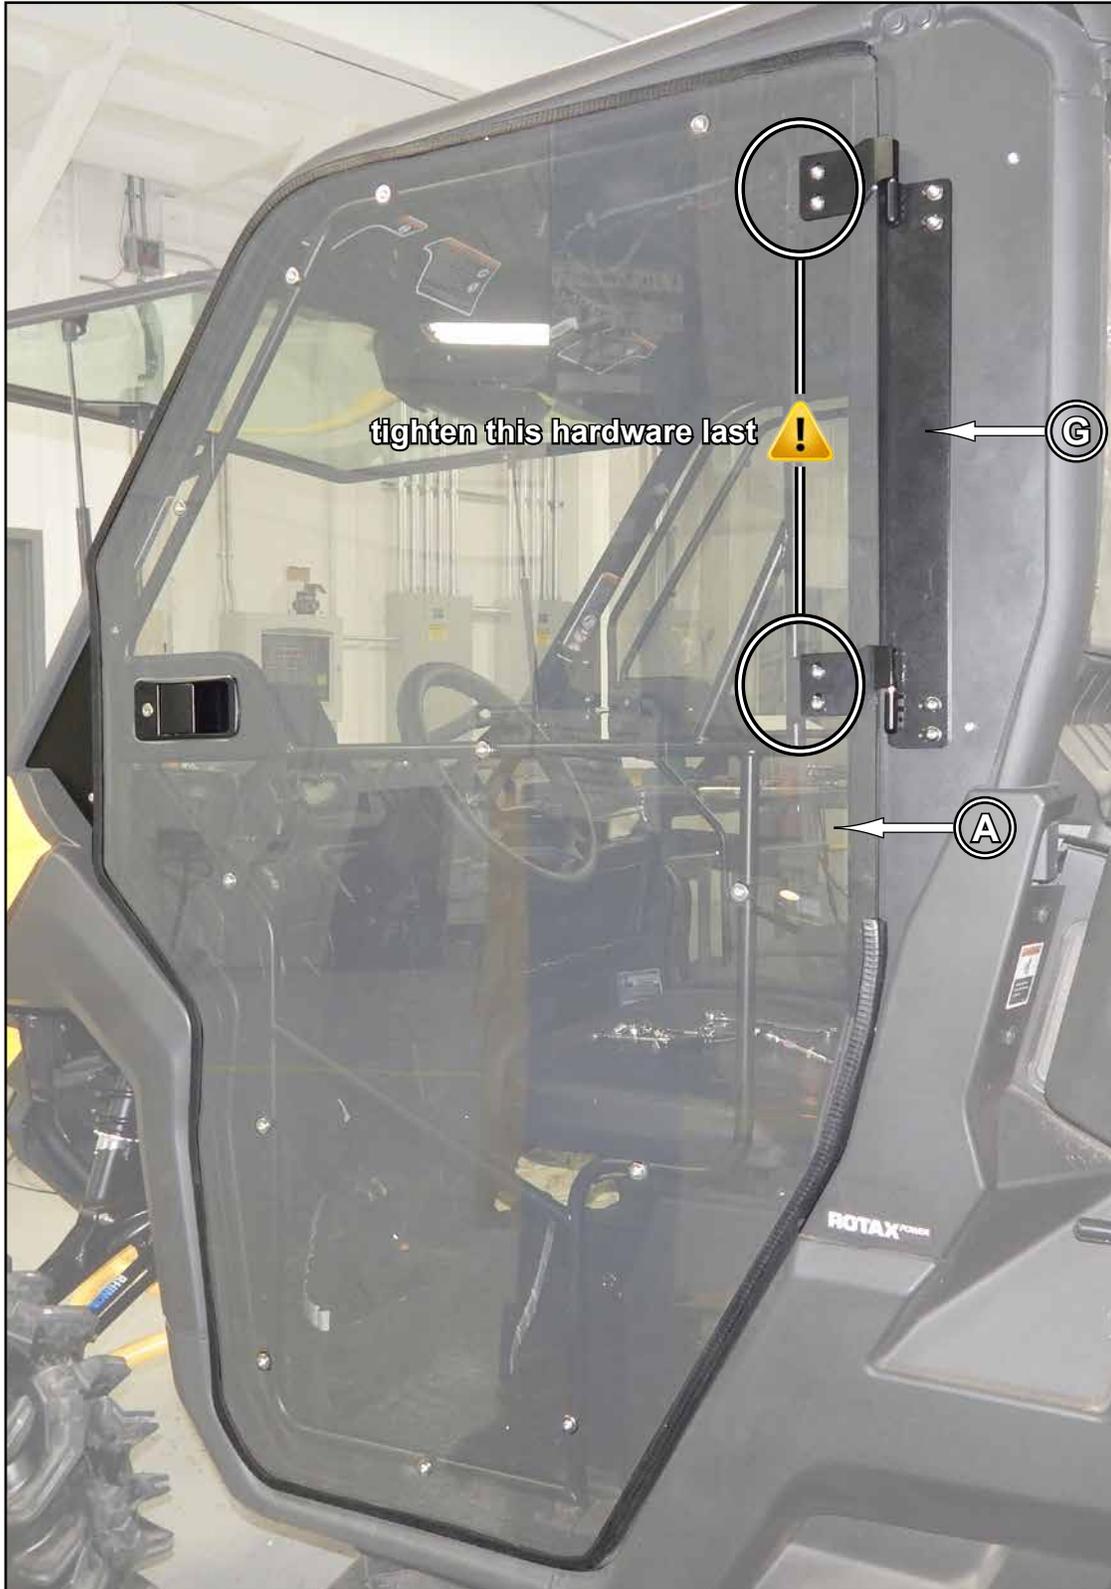

- Close Door, engage Latch / Striker Pin, and align Door to machine.
- Tighten all hardware completely.

**Driver Door Installation continued:** do not tighten hardware completely unless noted.

- Open Driver Door (A) and install Gas Strut (H) to Driver Door (A) and Driver Hinge Mount (E).
- Secure with hardware shown. Tighten hardware.

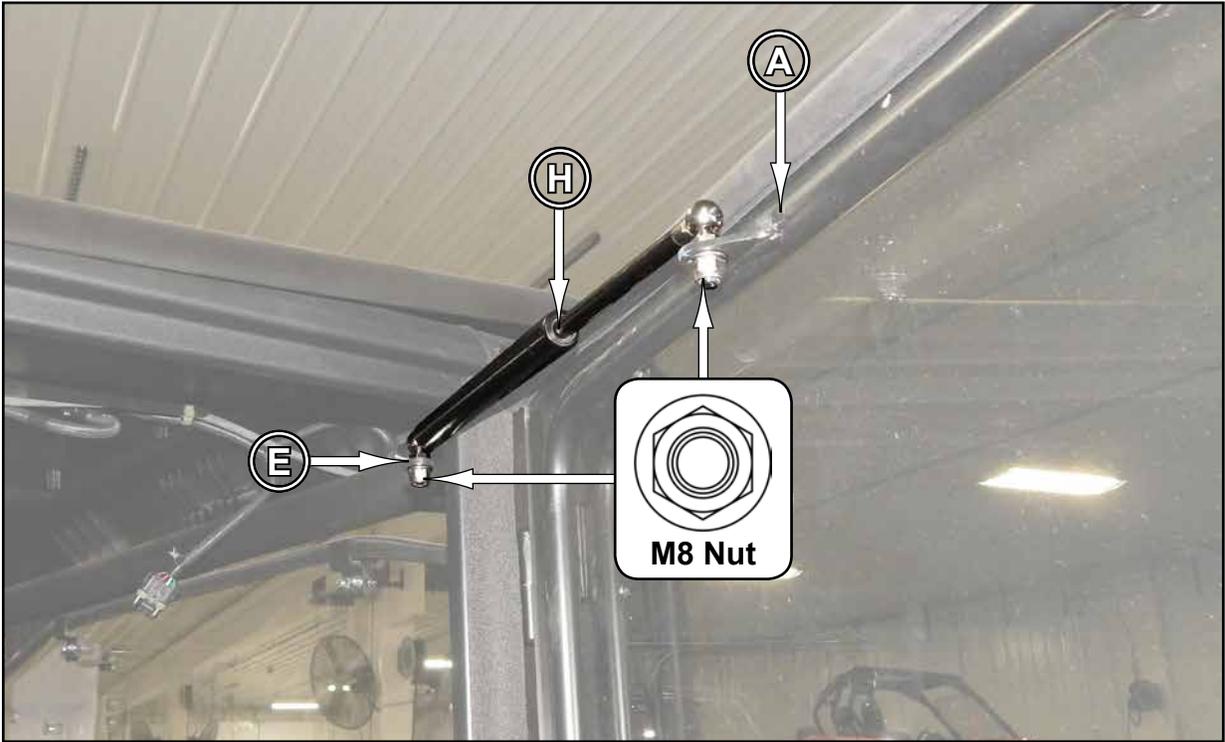

- Install Mirror to Driver Door (A) with hardware shown. Tighten hardware.

