

Basic operation and attention of wireless microphone

- Open the battery compartment correctly and install the battery. Attention shall be paid to the cathode and anode of the battery.
- Turn the power switch on microphone to "ON". If the power indicator lamp does not flash or always lights, inspect whether the battery voltage is insufficient or the polarity of battery is installed oppositely.
- Adjust the microphone volume knob on the audio amplifier and its position according to the sound volume when singing to reach the ideal effect.
- If you use wireless microphone temporarily during the singing process, you can put the microphone switch in mute status; once using is stopped, you can turn the microphone switch in off status. The microphone will pick up sound to amplify it and input to the horn of the audio amplifier no matter it is in mute or off status.
- The effective using distance of wireless microphone is within 30m, please do not use it beyond the effective range in order to avoid inferior effect; when the electricity quantity of battery is reduced or the wireless interference signal of the using environment is too strong, the using distance shall be shortened accordingly.
- To reach the best singing effect, the distance between mouth and microphone shall be 5-15CM and the best angle is 45degrees.
- After the microphone is used for a very long time and lacks of electricity, the indicator lamp for electricity insufficiency will light. Please timely change the battery in order not to affect the singing effect.
- Please do not use the two microphones of the same frequency point for singing within short distance since it may cause silence or interference noise.
- If you have purchased more than two sets of active audio amplifiers matched with wireless microphone from the company and intend to use them together, please select the varieties in different standard frequencies. If the frequency is identical, two sets machines can not be used until they are separated from each other for 100m to avoid mutual interference and other unnecessary troubles! Never get the machine to VCD/CD/DVD and other equipments with strong interference frequency when they are used to avoid mutual interference between the same frequencies, which will affect the wireless signal receiving of the microphone.

Common simple faults and guidance for operation and repair

Fault description	Possible causes	Troubleshooting
Speaker not power on	The power switch is turned on The speaker is out of battery	Turn on the power switch Use power adaptor to charge the
No sound	Audio input is not correctly selected. The audio cable is not connected properly to the line input. Main volume is switched to minimum. No sound when playing U-disk. No sound when playing by line input Poor contact or damage of external audio cable	Change the audio input by pressing the mode button. Reconnect the audio cable. Properly adjust the volume knob. Check the U-disk or the mode switch button. Change the audio source of line input. Readjust or change audio cable.
External microphone	External microphone is not fully inserted in the jack The external microphone switch is not turned on The volume knob of microphone is off	Totally insert the microphone to the jack Turn on the switch of wireless microphone Properly adjust the volume knob of microphone
Problems with wireless	The switch of wireless microphone is not turned on The wireless microphone is not installed with batteries The sound of wireless microphone is in distortion	Turn on the switch of wireless microphone Install the batteries in the wireless microphone Change the battery of wireless microphone

If the above solution did not solve the issue, please contact the nearest local maintenance department. The product technology of our company is upgraded continuously, the product descriptions in this

SINGTRONIC

 
Professional Mobile Karaoke Speaker



Operating Instructions


Please carefully read the operating instruction before using our product

Panel/rear plate/MP3 function and operation

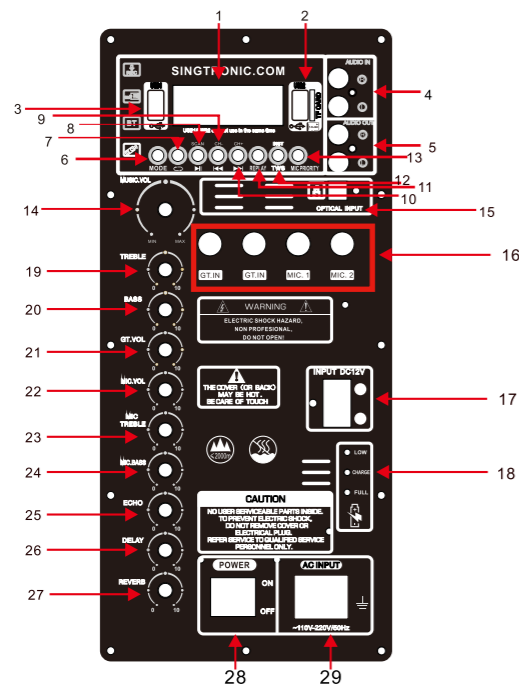


- 25-ECHO: Adjust the echo effect for the microphone.
- 26-DELAY: Adjust the delay effect for the microphone.
- 27-REVERB: Adjust the reverb effect for the microphone.
- 28-POWER: On/Off switch of the portable amplifier.
- 29-AC INPUT: Input for AC power supply.

 Handheld/Headset Microphone

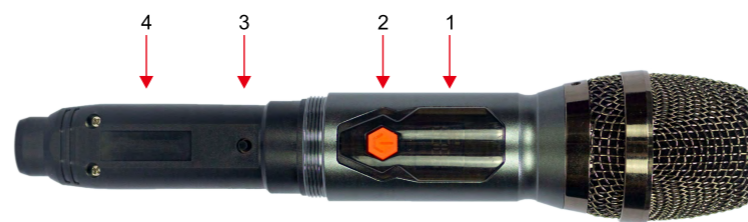

- 1- **Display**: It shows the channel#, frequency, battery status, signal, etc. When the batterie level is low, please replace the batteries with new ones.
- 2- **Power switch**: Long press to switch on/off the microphone.
- 3- **Frequency tuning button**: Short press to change the frequency of the mic. For the first time use, you might need pair the mic with the speaker by following steps:
 - 1) Switch on the microphone.
 - 2) Keep pressing this button, after 2 seconds, press the power switch button at the same time.
- 4- **Battery compartment**: Please use two batteries type LR6-AA, preferably alkaline. When inserting the batteries, make sure that the polarity is correct.

 Remote Control

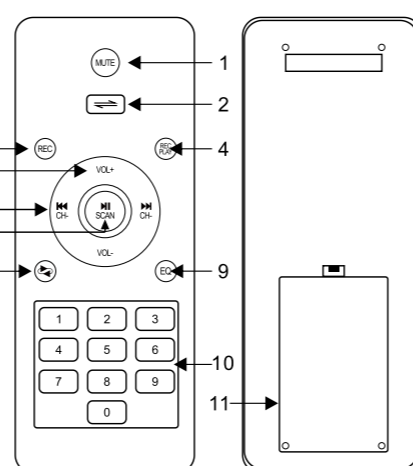

- 1- **MUTE**: Press to mute the speaker.
- 2- **Source select**: Allows you to select between different audio sources: USB storage device, SD memory card, Line input or Bluetooth.
- 3- Start recording.
- 4- Play the recording.
- 5- **VOL +/-**: USB/SD/MP3 player module volume controls.
- 6- **MI**: Play the previous song or next song.
- 7- **MI**: Start and pause playback.
- 8- **MI**: Set the loop mode of the songs to repeat one or repeat all.
- 9- **EQ**: Allows you to select between different equalizations.
- 10- **0-9**: Select the song by number.
- 11- **Battery cover**: Unscrew this cover to access the battery holder. Use two batteries type LR6-AAA, preferably alkaline. When inserting the batteries, make sure that the polarity is correct.

 
SCREEN UI WHEN TURNING ON SPEAKER



When turn on the speaker, please also turn on the power control of screen at the backside, then the screen will appear the UI as above picture show. It takes 30-60 second to power on, please wait patiently.

Attention: Please turn off the power control of the screen first before power-off; or the screen will be running slower and slower.

BACKSIDE TURNER BOARD

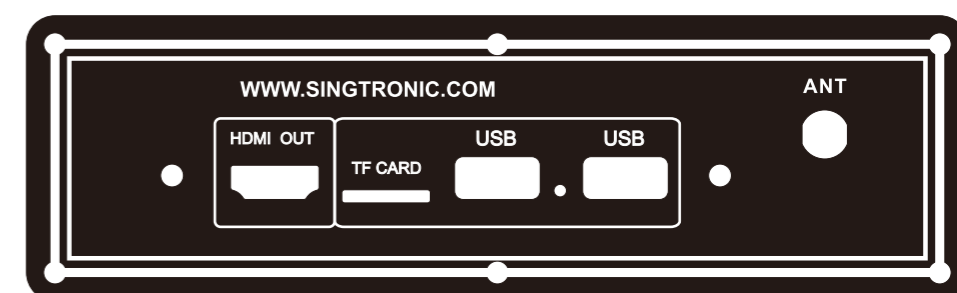

ANT: Connect Antenna Function
HDMI OUT: HDMI output for the VOD system, can connect to external display like TV, projector, etc.
USB: Connection port of USB storage devices.
TF CARD: Connection port TF memory cards.

- 1-Information screen.
- 2-Connection port for USB storage device.
- 3-Connection ports for USB storage device and TF card.
- 4-Line level input, 2 x RCA connectors.
- 5-Line level output, 2 x RCA connectors.
- 6-Select from different audio inputs.
- 7- **MI**: Player loop mode: repeat one or repeat all.
- 8- **MI**: Start and pause in playback.
- 9- **MI**: Play the previous song.
- 10- **MI**: Play the nex song.
- 11- **REPLAY**: Long press to start recording, short press to playback the recording.
- 12- **TWS**: Short press to start TWS connection, long press to weaken the human voice from the music for Karaoke. TWS connection operation: first put both speaker into Bluetooth pairing mode, and press the TWS button on one of the speakers. Then the two speakers will be connected automatically wirelessly.
- 13- **MIC PRIORITY**: Press to switch on/off the microphone priority function. When it is on, the music will be weaken when you speak on the microphone.
- 14- **MUSIC VOL**: Music volume adjustment.
- 15- **OPTICAL INPUT**: Optical input.
- 16- **GT. IN 1, GT. IN 2**: Inputs for electric guitars, 6.3 mm jack.
MIC 1, MIC 2: Inputs for dynamic wired microphones, 6.3mm jack.
- 17- **INPUT DC12 V**: Input terminal for external 12VDC power supply.
- 18- **Power indicator**.
- 19- **TREBLE**: Adjust the treble for music.
- 20- **BASS**: Adjust the bass for music.
- 21- **GT. VOL**: Volume control for the guitar.
- 22- **MIC VOL**: Volume control for the microphone.
- 23- **MIC TREBLE**: Adjust microphone treble.
- 24- **MIC BASS**: Adjust microphone bass.