

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the audio cable (not included) to connect from the device's "Line Out" to the "Aux In" of this device to enjoy playing music.

Under any playing mode, When you use the audio cable to connect the device, it will auto switch to the AUX mode.

Under AUX mode, all functions can be controlled by external device.

Battery Charging:

1. Power off the unit, put the provided adapter into the charge slot of unit, the red charging indicator keep lighting.
2. Charge time should be 5-6 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Note:

1. The playtime depends on how hard the unit is working. Heavy, loud, bass music will use more energy.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Recording function:

1. Make sure the unit is switched on, and there is a USB memory stick or TF card inserted in the slot.
2. Plug and test the microphone upon plugging. The device is ready to record once your voice is audible from the speaker.
3. Press the button 'REC' on the remote controller to start/stop recording, you are freely to rec what you want.

Playing music from USB disk and Micro SD card:

1. Turn the Power button to "ON".
2. Insert USB flash disk or Micro SD card into slot, the music stored will be played automatically.
3. Under playing mode, short press Previous or Next button to select songs you like, Or press the VOL-/ VOL+ button to adjust volume down and up. PLAY/PAUSE to play or pause.
4. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert USB disk or Micro SD card will disconnect the Bluetooth and switch to play the USB disk or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

How to Use FM Radio:

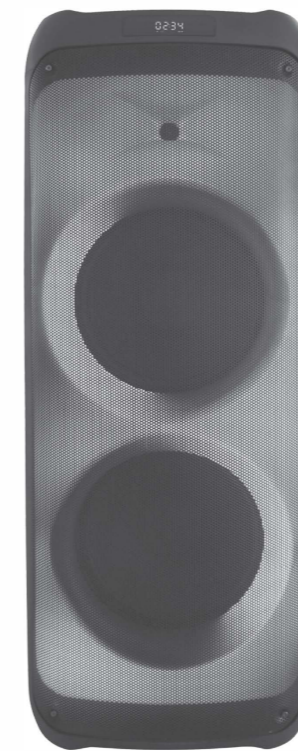 
1. Turn the power button to "ON", press the "MODE" button to FM radio mode.
2. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
3. Press Previous or Next button to change the stored FM channel.

Under FM radio state, to get a better FM signal, please insert a audio cable (not included) as antenna.

3



SINGTRONIC Bluetooth Speaker F-1215Pro



INSTRUCTION MANUAL

For correctly operating, please read this manual carefully before using. We are not responsible for consequence caused by fault or oversight of this manual.

FEATURES :

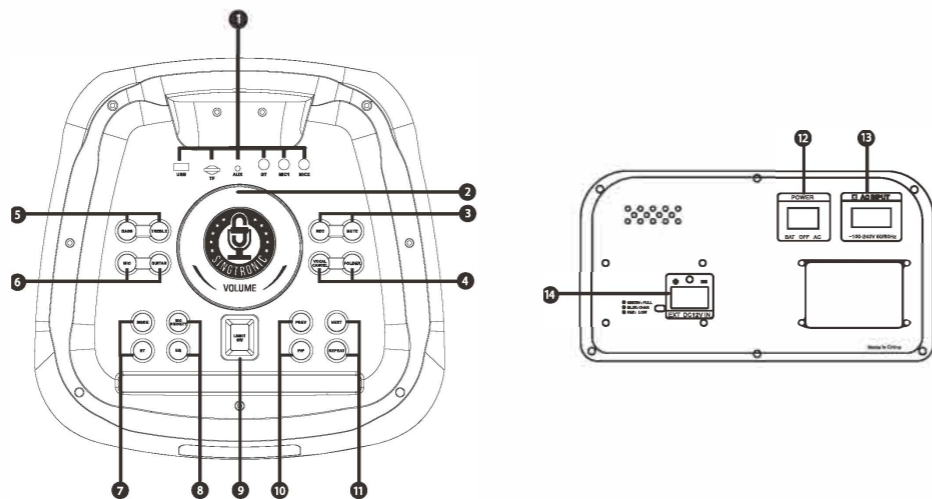 
- Outdoor HIFI Bluetooth Radio
- Output very clear sound and dynamic sound effect
- With A2DP/AVRCP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- Secure simple pairing for user-friendly operating
- 10 meters operating range
- With USB and Micro TF supporting
- With Line-in function, suitable for PC/MID/TV and other audio device
- Built-in lead-acid rechargeable battery 12V 14AH
- With FM Radio

ACCESSORIES:

- Wireless microphone * 2pc
- Power cable * 1pc
- User manual * 1pc
- Remote controller * 1pc

SPECIFICATION:

Bluetooth range	up to 10 meters
Speaker:	Woofer Size: 12inch*2
Connections:	USB disk, Micro SD card reader, Microphone input jack Aux-in 3.5mm jack connection, Guitar input jack
Power supply:	Built-in rechargeable lead-acid battery 12V 14AH
Play time:	5hrs with 50% volume
Product size:	420(L) * 420(W) * 1040(H) mm
Charge time:	5-6 hours

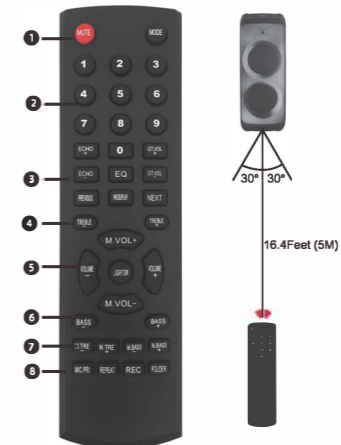 
INSTRUCTION FOR APPEARANCE AND KEY :

1

1. USB / TF/AUX INPUT
2. GUITAR/MICROPHONE1/MICROPHONE2 INPUT JACK
3. MAIN VOLUME/GUITAR VOLUME/ MICROPHONE VOLUME/ECHO VOLUME
4. REC:RECORD SOUND OF MIC INTO TO USB DISK
5. MUTE:MUTE FUNCTION
6. VOCAL CANCEL:ACCOMPANIMENT
7. FOLDER: DIFFERENT FOLDER FROM USB DISK
8. TREBLE/BASS
9. MIC:MICROPHONE VOLUME/ECHO/BASS/TREBLE
10. GUITAR: VOLUME OF GUITAR
11. MODE: BLUETOOTH /LINE IN/ REDIO MODE
12. BT:BLUETOOTH MODE
13. WHEN CHOOSE MIC PRIORITY, WHEN USING MIC, THE SOUND OFBACKGROUND MUSIC WILL TURN DOWN AUTOMATICALLY
14. EQ: DIFFERENT TYPE OF MUSIC
15. CONTROL DIFFERENT MODE OF LED LIGHT
16. PAUSE/PLAY, PREVIOUS SONG
17. NEXT SONG// TWS FUNCTION BUTTON
18. REPEAT ONE SONG OR REPEAT ALL
19. POWER ON/OFF
20. AC INPUT
21. EXT DC 12V INPUT

REMOTE FUNCTION DECLARATION:

1. MUTE/MODE(LINE IN/USB/TF/AUX/BLUETOOTH/FM)
2. 0-9
3. ECHO+/ECHO-/ EQ/ GUITAR VOLUME+/GUITAR VOLUME-
PREVIOUS SONG/CHANNEL
PAUSE/PLAY
NEXT SONG/CHANNEL
4. TREBLE+/TREBLE-
5. VOLUME+/VOLUME-/MIC VOLUME+/ MIC VOLUME-/LIGHT SW
6. BASS+/BASS-
7. MIC TREBLE+/TREBLE-
MIC BASS+/BASS-
8. MIC PRIORITY/REPEAT/REC/FOLDER

**Bluetooth connection:**

1. Turn the power button to "ON". In the front panel, press the mode button to launch the Bluetooth application. The system voice of the device will say "Bluetooth mode".
2. Activate Bluetooth of mobile phone and search for device name "F-1215Pro" then connect it. The system voice says "Bluetooth connected" once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press Previous or Next button on the device or on Mobile phone to select songs you like.
5. Press Play/pause button on the device or on Mobile phone to play/pause the music.
6. Use the Bluetooth device to adjust volume up and down. Or press the VOL-/ VOL+ button to adjust volume down and up

TWS FUNCTION :

1. Turn on two identical speakers you want to pair, please noted they must be the same BT pairing name, both under BT mode. Only need to set one of the two units;
2. Long press "NEXT" button until you hear the system voice "bluetooth connected", then successfully paired;
3. Make Bluetooth connection with your mobile phone, play music and enjoy true wireless stereo sound effect.

2