

Quickly User Guide

Realtek1295 series
Octa core

Preface

Thanks very much for choosing our Android TV BOX . In order to make it more convenient for you to use proficiently, we provide you with a user guide. Please read it carefully before using and properly keep it for reference.

Statements

We have made every effort to provide the most current information about the product.

We do not grant any guarantees as to the contents of the present instruction manual and disclaim contained here is an instruction intended to enable the correct usage and maintenance of the device.

We reserve itself the right to introduce amendments, changes or translations of the user manual without prior notification thereof. For this reason, we recommend you regularly visit our website in order to obtain the latest information.

Specification

- ★ All new aluminum housing for best cooling
- ★ Powered by Android 6.0.1
- ★ Realtek 1295 chipset ARM Cortex-A53 X4,Mali-T820 MP3 L2 Cache 1MB
- ★ DDR3 2GBytes and Storage eMMC 8GBytes(R9mini)/16GBytes(R9 and R9Plus)
- ★ Video Decode: HDR,10-bit HEVC/H.265 up to 4K@60fps, VP9 up to 4K@60fps, H.264 up to 4K@24 fps, automatic frame rate switching
- ★ Audio Decode: HD audio(7.1ch) decode and passthrough Redesigned native player, Blu-ray better compatibility, Powerful subtitles, Support MVC ISO, MVC MKV
- ★ Picture formats: JPEG ,BMP, PNG, GIF, TIFF, Webp(Android)
- ★ HDMI 2.0 input, support PIP, HDMI IN stream recode and stream output via UDP tc
- ★ HDMI 2.0 output: HDMI 2.0a output, support 4K@60fps, HD audio(7.1CH) and 23.976,29.94 supported
- ★ Ethernet 10/100/1000Mbps RJ45 port and internal 2.4GHz/5.8GHz Dual Band WiFi.
- ★ Composite Audio/Video output, support all television
- ★ USB3.0 x 1 host +USB2.0 x 3 host connectors, and SD/MMC card reader

Package Contents

 
NO.	Picture	Name	Piece
1		Media Player	1
2		IR Remote Control	1
3		Power Adaptor	1
4		HDMI cable	1
5		SATA cable(R9)	1
6		User Guide	1

Remote control



	Power on/off		Mute on/off
	Eject key		Information
	Zoom in/out		HDMI IN
0 9	0-9	Alphanumeric key	
	Record		Delete
	Last channel		Volume Up
	Next channel		Volume Down
	Stop		Play/Pause
	Home menu		Return
	Menu		Cursor/IR
		Arrow keys: up/down/left/right operation	
	Kodi shortcuts		3D switch during video playback
	Settings shortcuts		Playback shortcuts
	Rewind		Forward
	Previous		Next
	Repeat	16:9	Screen Ratio
	Subtitle		Audio track

Connection Diagram

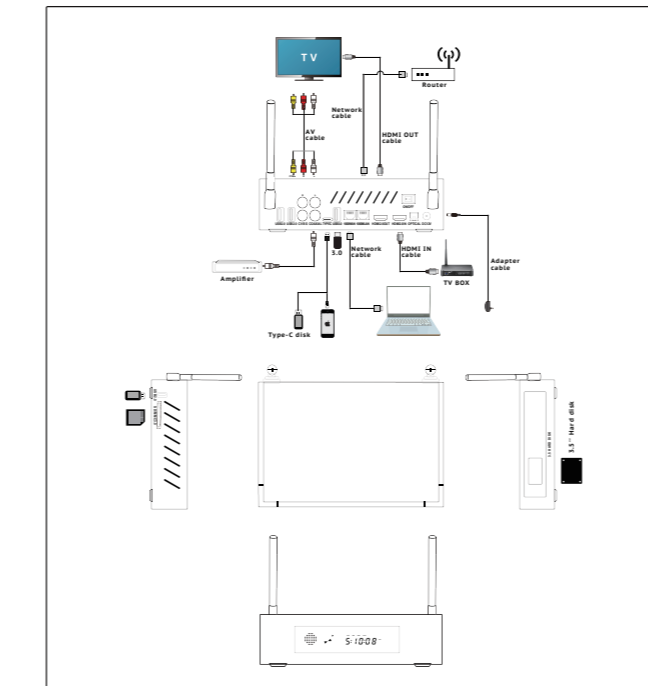

User can select corresponding connectors to connect with TV according their different requirement.

HDMI connection


- Connect with TV via HDMI output: Use the HDMI cable to connect between player HDMI port and TV HDMI port. At same time, set TV input mode to HDMI.
- Set the TV Output display settings to 720P or 1080P and then transferred to the corresponding TV HDMI Component Video status.

A/V connection

Connect with TV via AV cable: Use the AV cable to connect between player AV port and TV AV port. At same time, set TV input mode to AV.


Settings

Move to "Settings" icon; press ok to enter into system settings. Or press on the remote control. You will see the menu on the following picture.

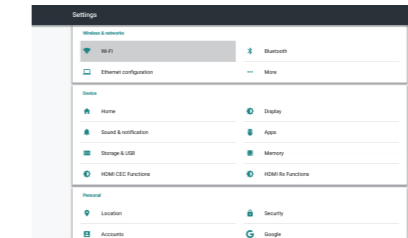


Wi-Fi

With Wi-Fi enabled, you will need to click on your network' s name and enter the password. An on screen keyboard should appear if you' re using the standard infrared remote control.

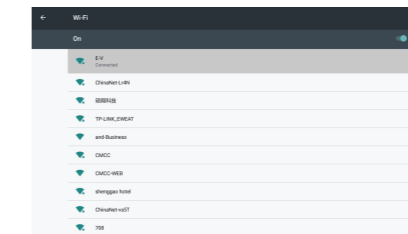

Ethernet

If you will use a network cable instead of Wi-Fi, please select this option instead.

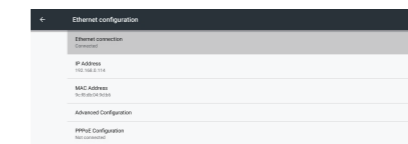

Troubleshooting

Warning

Under any circumstances, never try to repair the box by yourself, this will invalidate warranty. Do not open the box due to electric shock risk. If any fault occurs, first check the following instruction before taking the box for repairing. If you are unable to remedy a problem by following hits, consult your dealer for help .

Problem	Solution
No signal on the TV	1) Check if the HDMI or AV cable is securely connected. 2) Check if you have selected the correct input source on the TV.
Cannot turn on your media player	1) Check if the power connector is completely plugged into the DC socket of your media player. 2) Check if the power supply is stable.
Cannot connect to network	1) Make sure that the network cable is securely connected and the Ethernet works well. 2) Make sure that WiFi network is connected and the security key for the encrypted network is correct. 3) Make sure that you select the correct IP address settings.
Remote control does not respond	1) Make sure that the batteries are good. 2) Make sure that the distance between the remote control and your media player is no longer than 12 meters.
Some TV cannot display entire screen	Setup the screen display position of your media player.Used the zoom key on the remote control to select it.

Smart your TV, enjoy the life!