

## Ignition Switch Module Installation

### Instructions Tools Required:

- Screwdrivers (Phillips and flat-head)
- Socket set
- Trim removal tool

### Installation Steps

1. Ensure the vehicle is in park and the ignition is off.
2. Disconnect the negative battery terminal to prevent electrical issues.
3. Locate the Ignition Switch Module, usually behind the dashboard near the steering column.
4. Carefully remove the trim panel using a trim removal tool.
5. Unscrew or unclip the old Ignition Switch Module and disconnect all wiring harnesses.
6. Connect the wiring to the new Ignition Switch Module, ensuring a secure connection.
7. Position the module and secure it using the removed screws or clips.
8. Reattach the trim panel securely.
9. Reconnect the negative battery terminal.
10. Insert a FOB/IK key into the ignition and start the vehicle.
11. Test both keys for functionality, including lock/unlock and remote start (if applicable).
12. Check for any warning lights and clear faults if necessary.

---

Following these steps ensures proper installation and functionality of your Ignition Switch Module. If you encounter issues, please contact our support team for assistance at:

**[allcomputerresources.com/support.html](http://allcomputerresources.com/support.html)**