

## MAZDA TCM REMOVAL

1. Remove the battery duct and battery cover
2. Disconnect battery cables
3. Remove battery, battery box and battery tray
4. Locate TCM
5. Carefully remove TCM connector
6. Remove 3 bolts holding TCM

