

## RF Hub Module Installation

### Tools Required:

- Screwdrivers (Phillips and flat-head)
- Socket set
- Trim removal tool

### Installation Steps

- 1. Disconnect the Battery**
  - Use a 10mm socket to disconnect the negative battery cable.
  - Wait at least 5 minutes before proceeding to avoid electrical shorts.
- 2. Locate the RF Hub Module**
  - The RF Hub is typically mounted behind the rear seat or under the driver-side seat.
- 3. Remove Trim Panels or Seat (if needed)**
  - Use a trim removal tool or screwdriver to carefully remove any panels.
  - Fold or remove rear seat (if necessary) to access the module.
- 4. Unplug the RF Hub**
  - Carefully disconnect the electrical connectors from the RF Hub.
  - Note the wiring for re-installation.
- 5. Unscrew and Remove the RF Hub**
  - Remove the mounting screws or bolts.
  - Take out the RF Hub module.
- 6. Install the New RF Hub**
  - Mount the new RF Hub and secure it with screws.
  - Reconnect all electrical connectors firmly.
- 7. Reinstall Trim / Seat**
  - Replace all panels and seats that were removed.
- 8. Reconnect Battery**
  - Reconnect the negative battery cable.

---

Following these steps ensures proper installation and functionality of your RF Hub Module. If you encounter issues, please contact our support team for assistance at:  
**[allcomputerresources.com/support.html](http://allcomputerresources.com/support.html)**