


## Vista-20P / FA168C Family

### RRS Mod & 2-wire Smokes

To prevent these panels from sending repeat fire signals to the central station when using the RRS Module, you can program a trigger to activate upon “Any Fire Alarm” and hold the positive side of the zone low. This will eliminate the repeat signals. See below for the complete programming and wiring diagram.

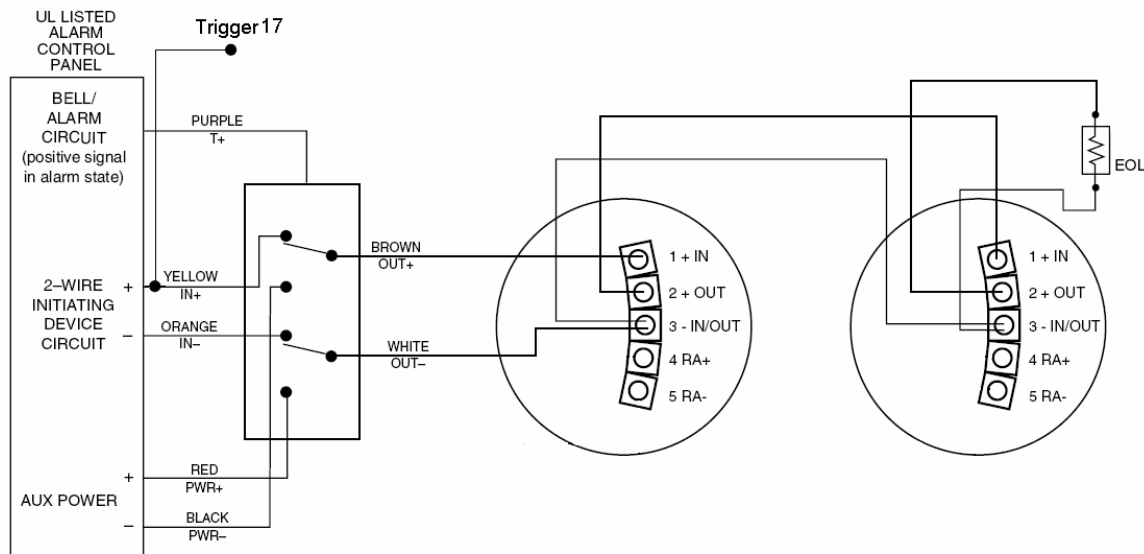

## \*79 Output Device Programming

- **Output #17**
- Output Normally Low? **NO**

## \*80 Output Function Programming

- **Output Function #01**
  - Activated by – **2 Zone Type**
  - Zone Type – **39 Any Fire Alarm**
  - Action – **2 Stay Closed**
  - Output # – **17**
- 
- **Output Function #02**
  - Activated by – **2 Zone Type**
  - Zone Type – **22 Disarming**
  - Action – **0 OFF**
  - Output # – **17**