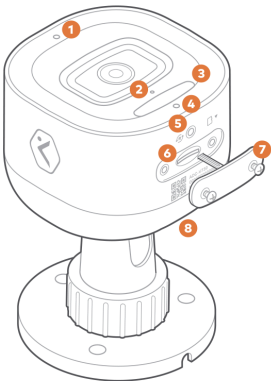


Factory reset an ADC-V730/VC730P to its default settings

Resetting a video device to its factory defaults removes all programming and memory from the device.

Important: Wait at least 2 minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset procedure	Reset button location	Reset button image
<ol style="list-style-type: none"> 1. Press and hold the WPS/Reset button until the LED is flashing green and red (about 12 seconds), then release the button. 2. The camera will reboot to factory default. 	<p>In front of the SD card door on the bottom of the device.</p>	 <ol style="list-style-type: none"> 1. Ambient Light Sensor 2. Microphone 3. Spotlight 4. Status LED 5. WPS/Reset Button 6. SD Card Slot 7. SD Card Door 8. Speaker

Important: Once a video device has been reset, it is normal for the LED to turn off momentarily. It is best to leave the video device plugged into power and undisturbed for 2 minutes after performing the factory reset.