

## What do the LEDs on the 4MP Outdoor Spotlight Camera (ADC-V730/VC730P) mean?

**Important:** This page contains data sheet information for 2 different models of the ADC-V730 camera:

- 4MP Outdoor Wi-Fi Spotlight Camera (ADC-V730)
- 4MP Outdoor PoE Spotlight Camera (ADC-VC730P)

While these cameras are similar, there are variations between models. Make sure to select the tab relevant to the camera model you are using. The camera model can be found on the box.

### LED reference guide

[ADC-V730](#) [ADC-VC730P](#)

#### ADC-V730

##### LED pattern

##### Description

Off

Power off



Solid green

Connected to Alarm.com



Blinking green

Local network connection



## LED pattern

## Description

Blinking red



Power on, camera booting

Solid red



No local or internet connection

Blinking white



Bluetooth and Wi-Fi Access Point modes (press and hold the button for 3-6 seconds)

Blinking blue



WPS mode (press and hold button for 6-9 seconds)

Blinking yellow



Power cycling (press and hold button for 9-12 seconds)

Blinking red and green



Reverting to factory default settings (press and hold the button for 12-15 seconds)

Blinking green and blue



Firmware updating

## ADC-VC730P

### LED pattern

### Description

Off

Power off



Solid green

Connected to Alarm.com



Blinking green

Local network connection



Blinking red

Power on, camera booting



Solid red

No local or internet connection



Blinking yellow

Power cycling (press and hold button for 9-12 seconds)



## LED pattern

## Description

Blinking red and green



Reverting to factory default settings (press and hold the button for 12-15 seconds)

Blinking green and blue



Firmware updating