

Adjust the call volume for the ADC-VDB770

Configure the loudness of an active doorbell call.

To adjust the call volume using the Customer Website:

1. Log into the Customer Website.
2. Click **Video**.
3. Click **Settings**.
4. Using the *Video Device* dropdown menu, select the desired video device.
5. Click **Video Device Info**.
6. Use the *Call Volume* slider to adjust the doorbell call volume.
7. Click **Save**.

To adjust the call volume using the Customer app:

1. Log into the Customer app.
2. Tap ☰.
3. Tap **Doorbell Camera**.
4. Tap ⚙.
5. Use the *Call Volume* slider to adjust the doorbell call volume.
6. Tap ✓.

