

Adjust the wedge type for the ADC-VDB770

Configure the ADC-VDB770 wedge type (i.e., type of mounting bracket) for optimal motion detection.

To adjust the wedge type using the Customer Website:

1. Log into the Customer Website.
2. Click **Video**.
3. Click **Settings**.
4. Using the *Video Device* dropdown menu, select the desired video device.
5. Click **Video Device Info**.
6. Using the *Wedge Type* dropdown menu, select the appropriate mounting bracket. Each mounting bracket has a letter printed on its back that corresponds with its type.
7. Click **Save**.

To adjust the wedge type using the Customer app:

1. Log into the Customer app.
2. Tap ☰.
3. Tap **Doorbell Camera**.
4. Tap ⚙.
5. Using the *Wedge Type* dropdown menu, select the appropriate mounting bracket. Each mounting bracket has a letter printed on its back that corresponds with its type.
6. Tap ✓.

