

Lyric™

Life in tune.

Honeywell

Quick Start Guide



Compatibility

Works with common 24-volt systems such as forced air, hydronic, heat pump, oil, gas and electric. Does not work with electric baseboard heat (120/240V).

For help, contact:

WEB lyric.honeywell.com

EMAIL MyLyric@honeywell.com


PHONE 1-800-633-3991

SOCIAL Twitter, Facebook, Google+

Included in your box:



Thermostat

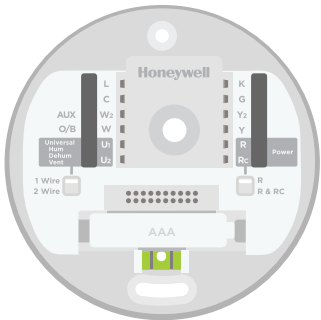


Wall plate



Optional wall cover



 Screws



Anchors

Tools you will need:



Phillips screwdriver




Small flat head screwdriver



Ballpoint pen



Needle-nose pliers*

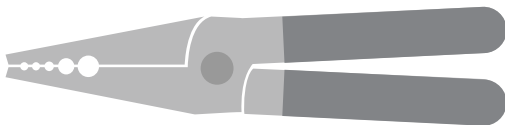

Wire stripper*

*Tools you might need




Home Wi-Fi password



Honeywell Lyric app

*To configure your system
and connect to your phone*

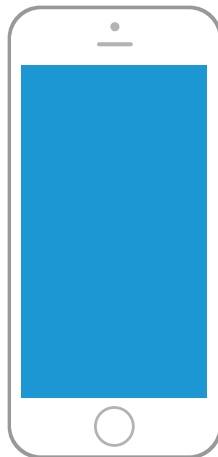

Smartphone

*To photograph your existing wiring
and access the thermostat app*



BEFORE YOU BEGIN


Download the **Honeywell Lyric** app
on your smartphone.

**This document is not a stand-alone guide.
It is best used as a reference with the app.**

1 Turn power OFF



To protect yourself and your equipment, turn off the power at the breaker box or switch that controls your heating/cooling system.

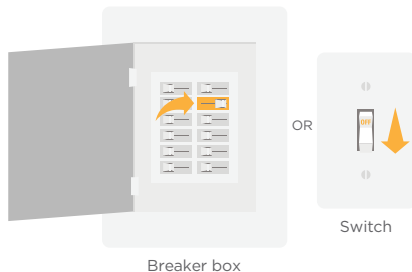


2 Check that your system is off.

Change the temperature on your old thermostat. If you don't hear the system turn on in 5 minutes, the power is off.

3 Remove the old thermostat's faceplate

On most thermostats, you can take off the faceplate by grasping and gently pulling or popping it off. Some thermostats may have screws, buttons, or clasps.

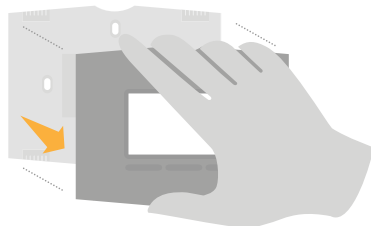


4 Make sure there are no 120/240V wires



Do you have thick black wires with wire nuts? Is your thermostat 120V or higher?


If you answered yes to either of these questions, you have a line voltage system and the Lyric thermostat will not work.

If you are unsure, visit lyric.honeywell.com/support

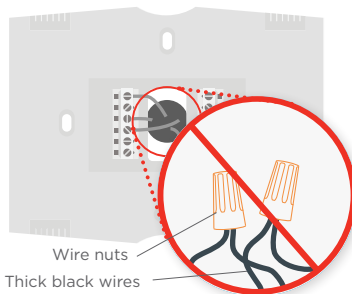


5 Take a picture of the old wiring

Be sure to include the letters next to the terminals where the wires are inserted. This will be a helpful reference when wiring your Lyric thermostat.

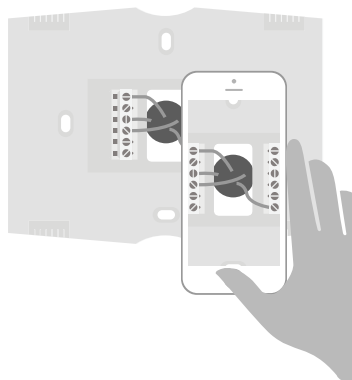

6 Remove any jumpers

A jumper may look like a wire or a staple connecting two terminals and should be removed. The Lyric thermostat does not work with jumpers.

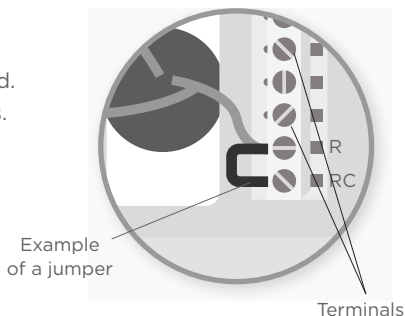

7 Record the number of your R, RC, and RH wires

You will need to refer to this information later.

A ☐ I have **one** R, RC, or RH wire

B ☐ I have **two** R, RC, or RH wires

8 Record the existing wire configuration

Note the color of the wires that are plugged into your old thermostat's terminals. You will need this information to correctly wire your Lyric thermostat.

Terminal	Color of wire	Terminal	Color of wire
<input type="checkbox"/> L	_____	<input type="checkbox"/> K	_____
<input type="checkbox"/> C	_____	<input type="checkbox"/> G	_____
<input type="checkbox"/> W2	_____	<input type="checkbox"/> Y2	_____
<input type="checkbox"/> W	_____	<input type="checkbox"/> Y	_____
<input type="checkbox"/> U1	_____	<input type="checkbox"/> R	_____
<input type="checkbox"/> U2	_____	<input type="checkbox"/> RC	_____




If the wires are in terminals that are not listed, you will need additional wiring support. Visit lyric.honeywell.com/support/installation to find out if the Lyric thermostat will work for you.

9 Disconnect the wires

Use a screwdriver or a ballpoint pen to release wires from terminals.


10 Remove the old thermostat from the wall

Wrap the wires around your ballpoint pen to prevent them from falling back into the wall.

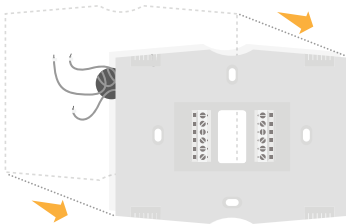


11 Insert the recommended wall anchors

 It is recommended that you use the provided anchors when mounting your thermostat.




12 Check for any paint gaps or screw holes left by the old thermostat

If you choose to use the optional wall cover to hide these blemishes, snap the wall plate to the optional wall cover before continuing.

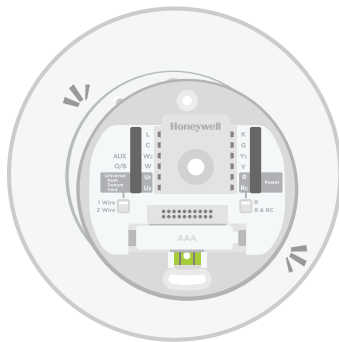

13 Bundle and insert wires through the clear rubber holder


Guide the wires through the clear rubber holder on the back of the wall plate. Make sure at least 3/8-inch of each wire is exposed for easy insertion into the wire terminals.

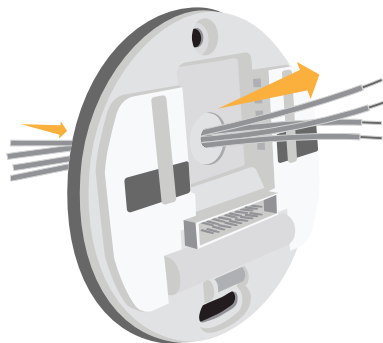

14 Review your answer from Step 7

If you checked **A**:

1. Keep the switch up in the R position.
2. Insert your R, RC, or RH wire into the R terminal until it is firmly in place.
3. Gently tug on the wire to verify it is secure.

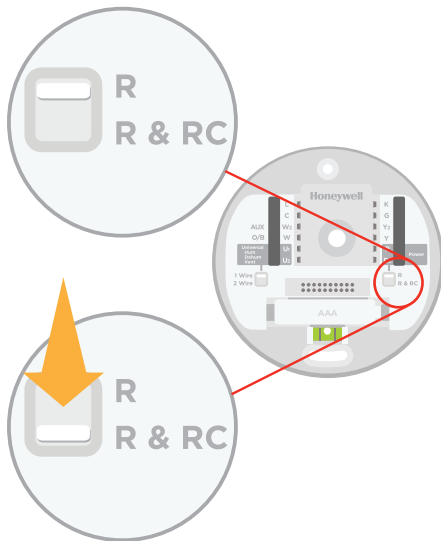

If you checked **B**:

1. Move the switch down to the R & RC position.
2. Insert your R or RH wire into the R terminal until it is firmly in place.
3. Insert your RC wire into the RC terminal until it is firmly in place.
4. Gently tug on the wires to verify they are secure.

15 Firmly connect remaining wires as recorded in Step 8

Push each remaining wire into its corresponding terminal until it is firmly in place.


If you misplace a wire, use a ballpoint pen to push down on the terminals and release the wire.



Gently tug on wires to verify they are secure.

16 Use the provided screws to mount the wall plate

Make sure the wall plate is even by keeping the bubble in the level between the two lines.

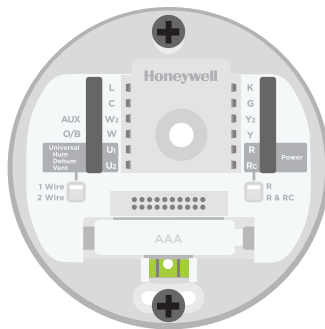


17 Firmly snap the thermostat into place

The thermostat will glow and display the Lyric screen for up to three minutes while it starts up.



18 Turn your power ON

Turn on the power at the breaker box or switch that controls your heating/cooling system.

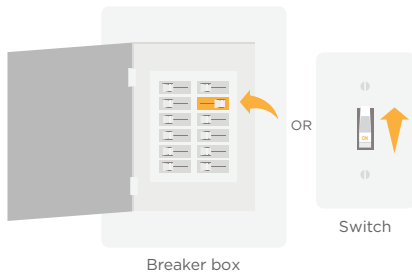

19 Log in to configure and connect



Your Lyric thermostat is not yet configured to control your heating/cooling system.

To complete your setup, download and log in to the **Honeywell Lyric** app.


Android

Search Google Play for **Honeywell Lyric**. Create an account and log in to configure and connect.




iOS

Search the App store for **Honeywell Lyric**. Create an account and log in to configure and connect.

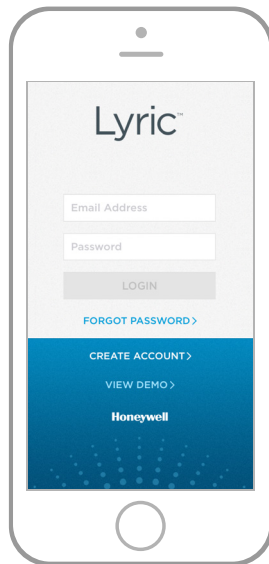


How to use your Lyric™ thermostat

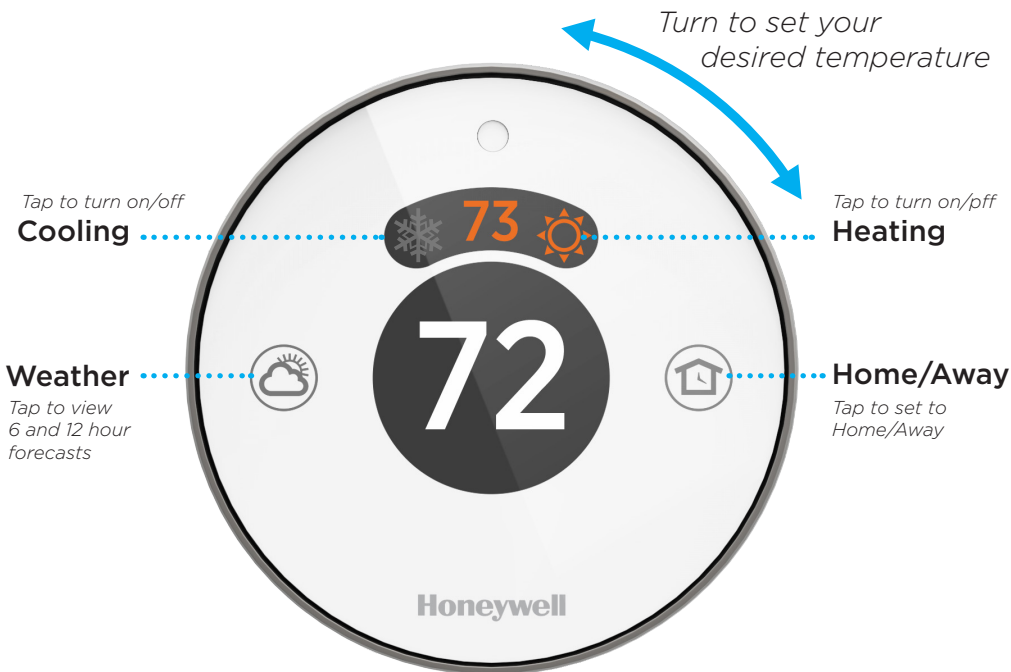

How to use your Lyric™ app

Once your thermostat is configured and connected to your smartphone, you can take advantage of the following features:

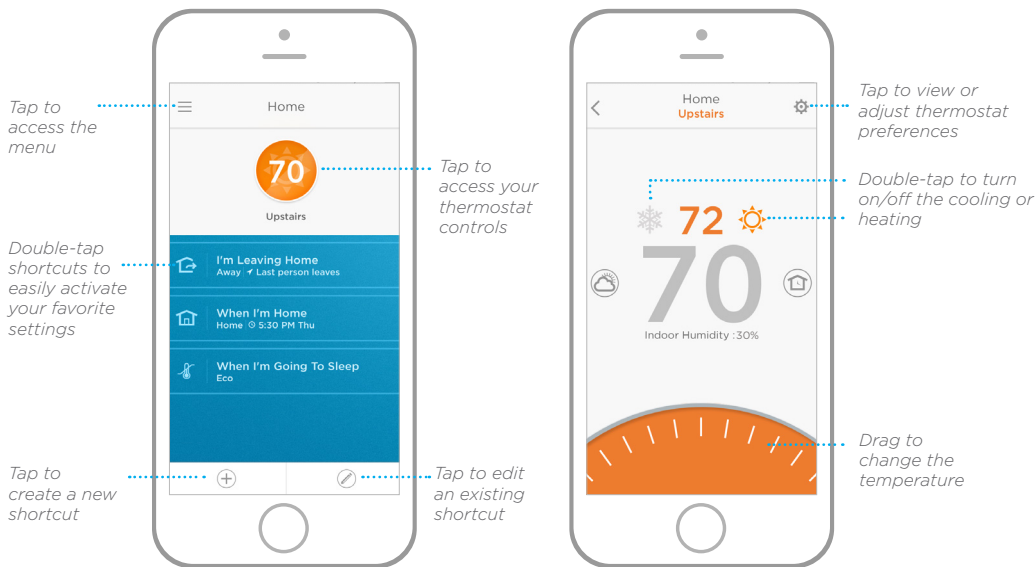

Get the most from Lyric™



Geofence

Enable geofencing and the Lyric thermostat will automatically adjust based on your smartphone's location.

You can also manually override your current setting when you'll be out for a few hours by tapping the Away button on the thermostat or in the app.



Shortcuts

Tailor your comfort to any situation at the touch of a button.

Create unique shortcuts for unique situations or save the shortcuts you really like and they'll be available on your app any time you want. Customizable comfort has never been so simple.



Fine Tune

Comfort is about more than just the temperature.

To make sure you are always comfortable, the Lyric thermostat considers indoor temperature, humidity and outdoor weather to make subtle adjustments, so 72° really feels like 72°.



Smart Cues

Receive maintenance notifications and extreme conditions alerts to help you manage your heating/cooling system.

Lyric™

Life in tune.

Honeywell

Wi-Fi® is a registered trademark of Wi-Fi Alliance®

Automation and Control Solutions

Honeywell International Inc.

1985 Douglas Drive North

Golden Valley, MN 55422

lyric.honeywell.com

* U.S. Registered Trademark.

© 2015 Honeywell International Inc.

05-15 Printed in U.S.A.



33-00075-01