

## Configure the local display password for the ADC-CSVR2000P/2008P/2016P

Set the ADC-CSVR2000P/2008P/2016P's local display password using the Customer Website.

### To configure the local display password:

1. Log into the Customer Website.
2. Click **Video**.
3. Click **Settings**.
4. Using the *Video Device* dropdown menu, select the desired SVR.
5. Click **Local Display**.
6. Enter the desired password.
7. Click **Save**.

