
Factory reset a ADC-CSVR2000P/2008P/2016P to its default settings

Resetting a video device to its factory defaults removes all programming from the device.

Important: Wait at least two minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset procedure	Reset button location
<ol style="list-style-type: none">1. Press and hold the [Reset] button until the status LEDs starts blinking red, about 15 seconds.2. Wait for the device to reboot. <p>Important: Verify that the device is on OS version 002.004.004.034.014.025 +. For more information about upgrading the firmware, see Update the firmware of a video device.</p>	<p>The [Reset] button on the back of the device.</p>

