







What do the LEDs on the ADC-C5VR2000P/2008P/2016P mean?

Network LED





LED pattern	Description
Blinking green 	Client uplink active
Not illuminated 	Client uplink inactive

Power LED

LED pattern	Description
Solid green 	Powered on
Not illuminated 	Booting or powered off



Status LED

LED pattern	Description
Solid green 	Connected to Alarm.com
Blinking green 	Local network connection
Solid red 	No connection
Not illuminated 	Booting or powered off

