

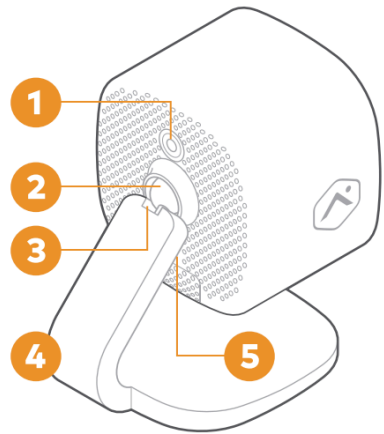


## Factory reset an ADC-V515 to its default settings

Resetting a video device to its factory defaults removes all programming and memory from the device.

**Important:** Wait at least two minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset procedure	Reset button location	Reset button image
<p>Press and hold the <i>Reset / WPS</i> button</p>  <p>located on the back of the camera until the LED is flashing Green and Red (about 15 seconds), then release the button.</p> <p>The camera will reboot with factory default settings.</p>	<p>The <i>Reset / WPS</i> button</p>  <p>is on the back of the camera.</p>	 <ol style="list-style-type: none"> <li>1. DC power connector</li> <li>2. Friction ball joint</li> <li>3. Friction hinge joint</li> <li>4. Base</li> <li>5. <b>Reset / WPS button</b></li> </ol>

**Important:** Once a video device has been reset, it is normal for the LED to turn off momentarily. It is best to leave the video device plugged into power and undisturbed for two minutes after performing the factory reset.

