



Slim Line Doorbell Camera

Visit alarm.com/doorbell for installation instructions.

Push Notifications

Use the Alarm.com app to set up instant alerts:



Button Pushed

Be notified when the doorbell button is pushed.



Motion

Be notified when the Doorbell Camera detects motion.

Tap on a doorbell notification to open the call screen so you can see and speak with your visitors.

QUICK TIP

To respond to doorbell notifications even faster, check "Keep me logged in" on the Alarm.com app login screen.

Video Recording Rules

Use the Alarm.com app to choose which events trigger your Doorbell Camera video clip recordings:



Button Pushed

Record when the doorbell button is pushed.



Motion

Record when the Doorbell Camera detects motion.



Event Triggered

Record when a sensor in your Alarm.com system is activated or an alarm is triggered.

QUICK TIP

You can view recorded clips on the Alarm.com app and Customer Website.

LED REFERENCE GUIDE

Normal Operation

Green | Solid



Ready and working normally

Use the Alarm.com app or Customer Website to choose a custom color in place of default green.

White | Solid



In Call mode

A call has been initiated or is occurring.

Requires Attention

Orange | Rapid double flash



No Wi-Fi connectivity

Check your Internet connection.

Blue | Rapid double flash



Power supply issue

Contact your installer.

Troubleshooting

Red | Green | Alternating flash



Push & hold ~60 sec until flashing

Wi-Fi Access Point Mode

Connect to the camera's temporary network and use the app to update Wi-Fi settings.

Blue | Flashing



Push & hold ~70 sec until flashing

Power cycle

Reboots the camera.

Yellow | Flashing



Push & hold ~80 sec until flashing

Factory Reset

Use to factory reset the camera.

Deletes all Wi-Fi and configuration information.

QUESTIONS?

Contact your installer or visit www.alarm.com/doorbell for helpful videos and a full LED Reference Guide.

If you are a professional installer, visit www.alarm.com/supportcenter.