







What do the LEDs on the ADC-VDB750 mean?







Note: The ADC-VDB750 does not give an indication when it detects motion or a button press.

If the indoor chime is enabled for the device, holding down the button will trigger a single indoor chime immediately after being pressed. If desired, the indoor chime can be disabled through the Customer Website before pressing the button to initiate one of the modes below.

Status light guide

LED pattern	Description
Off 	Power off
Blinking yellow 	Camera power cycling (press and hold button for 40-45 seconds)
Solid red 	No local or Internet connection
Blinking red 	Power on, camera booting



LED pattern	Description
<p>Alternating red and green</p> 	<p>Camera resetting to factory default (press and hold button for 45-50 seconds)</p>
<p>Solid green</p> 	<p>Connected to Alarm.com</p>
<p>Blinking green</p> 	<p>Local network connection</p>
<p>Blinking blue</p> 	<p>WPS mode (press and hold button for 30-35 seconds)</p>
<p>Blinking white</p> 	<p>Wi-Fi Access Point mode (press and hold button for 35-40 seconds)</p>
<p>Alternating blue and green</p> 	<p>Firmware update</p>

