

# IQ FLOOD QUICK INSTALL GUIDE



**STEP**  
**1**

CHOOSE  
INSTALLATION  
LOCATION



Water heater  
Basements  
Laundry rooms  
Sump pumps



Kitchen sinks  
Bathroom sinks



Bathrooms

## SPECIFICATIONS

Sensor: 2.5"H x 1"W x .5"D

Wireless signal range: 600ft (200M), open air.  
Code outputs: tamper, tamper restore, alarm, alarm restore, low battery.

Transmitter frequency: 319.5 MHz

Unique code ID

Supervisory keep-alive interval: 70 minutes.

RF Peak field strength: typical 36000 uV/m at 3m

Operating Temperature: -10C-50C

Relative Humidity: 5-95% Non-Condensing


Storage Temperature: -40-80C

Replace battery with exact replacement every 5 years with 3V Lithium (x2).

- (2) -Panasonic CR2032
- Energizer CR2032
- Duracell DL2032

This is a quick guide for experienced installers only. For a detailed installation manual refer to the documentation found on the "Documentation" tab on <http://dealers.qolsys.com> (login required, request access at [PortalAccess@Qolsys.com](mailto:PortalAccess@Qolsys.com))


**STEP 2** REMOVE BATTERY TABS

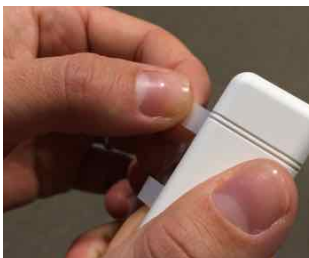

**STEP 3** APPLY ADHESIVE



**STEP 4** MOUNT SENSOR

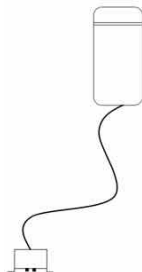

Mount the sensor above the floor level to prevent water damage.

Water detection unit rests or mounts to the floor or can be mounted to a wall or baseboard. Trim or tie off extra cord as needed or desired.

**STEP 5** LEARN INTO PANEL



Touch "Settings"



Touch "Installation"



Touch "Security Sensors"



Touch "AutoLearn Sensor"



Tamper sensor by opening casing until you hear the panel chime



Select "Water" as your sensor type. Then select "Sensor Sub-Type 1" (default) and customize settings as desired, then touch Add



Test sensor to ensure proper function

Document#: IQFLOOD-QG-04-15  
Revision#: 6/2/15  
Qolsys Product #: QS5516-840

Qolsys Inc. proprietary.  
Reproduction without permission is not permitted.

**GOT QUESTIONS?**  
CONTACT TECH SUPPORT  
[TechSupport@Qolsys.com](mailto:TechSupport@Qolsys.com)