
## IQ MINI DW QUICK INSTALL GUIDE

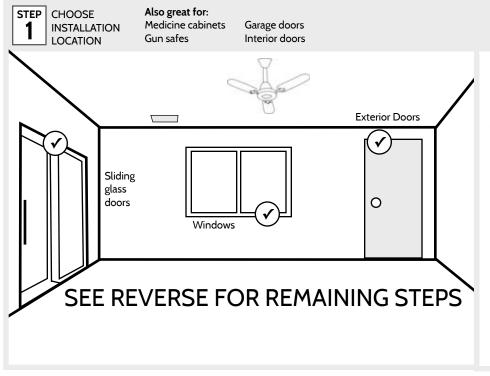



## **SPECIFICATIONS**

Sensor: 2.25"H x 1"W x .5"D

Wireless signal range: 600ft (200M), open air. Code outputs: tamper, tamper restore, alarm, alarm restore, low battery.

Transmitter frequency: 319.5 MHz

Unique code ID

Supervisory keep-alive interval: 70 minutes. RF Peak field strength: typical 36000 uV/m at 3m

Operating Temperature: -10C~50C

Relative Humidity: 5-95% Non-Condensing

Storage Temperature: -40-80C

Replace battery with exact replacement every 5 years with 3V Lithium (x2).

Note: Battery Safety

(2) -Panasonic CR2O32

- -Energizer CR2O32
- -Duracell DL2032

Observe polarity when inserting replacement batteries to avoid damaging the sensor.

Risk of fire, burns and explosion. Do not recharge, disassemble, burn or expose batteries to temperatures above 100C (212F)

Dispose of used batteries properly and in accordance with all local laws Keep batteries away from children

This is a quick guide for experienced installers only. For a detailed installation manual refer to the documentation found on the "Documentation" tab on http://dealers.qolsys.com (login required, request access at PortalAccess@Qolsys.com)


STEP REMOVE BATTERY TABS




3 APPLY ADHESIVE



STEP LINE UP SENSOR & MAGNET

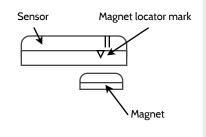

STEP SECURE SENSOR & MAGNET

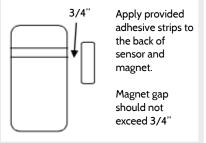

STEP 6

LEARN INTO PANEL



Touch "Settings"



Touch "Installation"



Touch "Security Sensors"



Touch "AutoLearn Sensor"



Tamper sensor by opening casing until you hear the panel chime



Select "Door/Window" as your sensor type and customize settings as desired, then touch Add



Test sensor to ensure proper function

Document#: IQMDW-QG-04-15

Revision#: 5/7/15

Qolsys Product #: QS1115-840

Qolsys Inc. proprietary.

Reproduction without permission is not permitted.

**GOT QUESTIONS?** 

CONTACT TECH SUPPORT TechSupport@Qolsys.com