




ALKALINE BATTERIES ONLY
The siren must be positioned downwards.

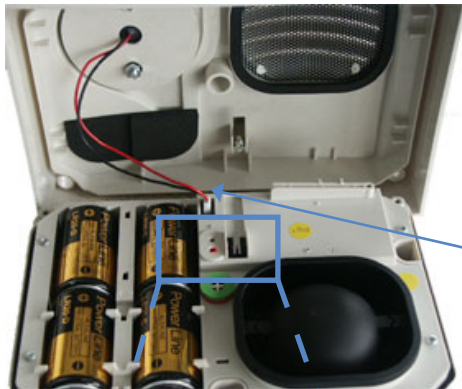


Recording of the exterior siren

The alarm panel must be put in "Recording device mode", and the keypad must display "**PRESS PROGRAM BUTTON OF DEVICE**".

- 1 Insert the 4 batteries **Alkaline LR20**.
- 2 Press **carefully** the PROGRAM Button of the siren, release as soon as the indicator flashes.
- 3 To the question **REMOTE CONTROLLED**, answer : **[ESC/NO]**.

-> Possibility of testing the RF range.

Do not forget to connect the strobe's cable !!!

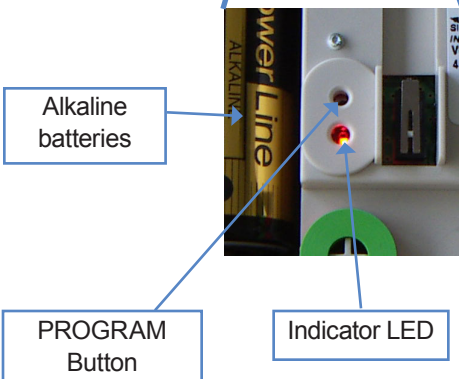

Reminder : Outdoor siren : waterproof : IP432.

SE means SE650 for USA/Canada, SE750 for Australia/Singapore and SE250 for Europe and rest of the world.

