

# TALKING TRAIN™

 
BATTERY OPERATED RIDE ON  
FOR AGES 12 - 36 MONTHS  
MAX 44 LBS.  
Item No: 0236/0238/0246/0248/0256/0258



## WARNING

To reduce the risk of injury, adult supervision is required, never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than one rider

## USER'S MANUAL

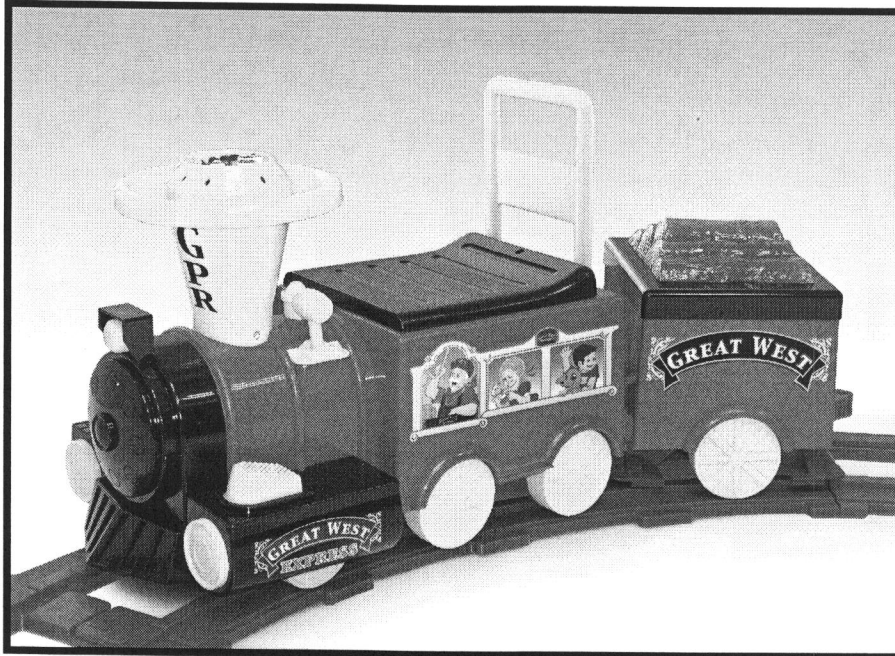

IMPORTANT:  
PLEASE READ THIS USER MANUAL BEFORE ASSEMBLY AND USE


**⚠ WARNING: ADULT ASSEMBLY REQUIRED!**

 CARE SHOULD BE TAKEN IN UNPACKING AND ASSEMBLY OF THE VEHICLE. CHILDREN SHOULD NOT HANDLE PARTS OR BATTERIES, NOR HELP IN ASSEMBLY. CHILDREN CAN BE HARMED BY SMALL PARTS AND SHARP EDGES.

## TABLE OF CONTENT

	Page
1. Table of content .....	2
2. Assembled RailRoad Talking Train .....	3
3. Assemble Instruction .....	4
4. Modes of play .....	4
5. Buttons & Sounds .....	5
6. Loading Limit .....	5
7. Warning .....	6
8. Battery charging .....	6
9. Battery Life .....	7
10. Battery disposal .....	7
11. Trouble shooting guide .....	8


## Assembled Talking Train

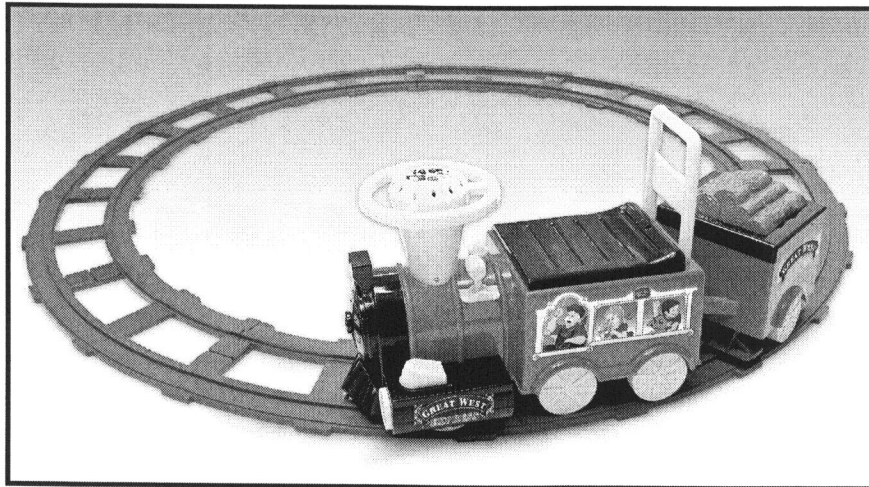

### Assembly Instruction


#### To attach the steering wheel

 Join the connector at the base of the steering wheel with the connector at the top of the boiler until they are secured. Feed the wire into the collar of the boiler until the steering wheel is locked securely in place.

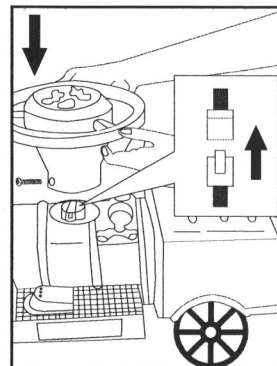



#### To insert the handle

Insert the back handle into the holes as shown.

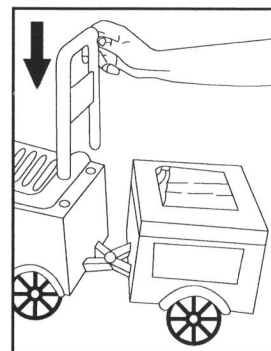

To link up the caboose


Insert the peg from the caboose into the hole at the rear axle of the train.

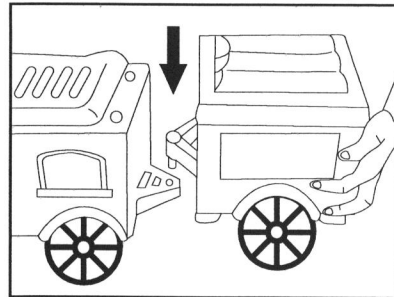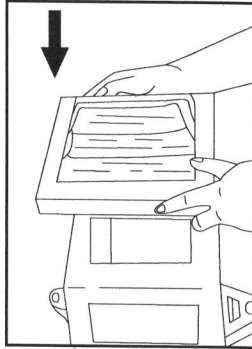

To assemble the track

Place track sections in a circle. Take two track section, one on each hand. Place two tracks together so that the pin of one section fits into the hole of the other and locks in place. Take a third section and attach to the section you just assembled.

Repeat until you assemble all sections and form a circle.

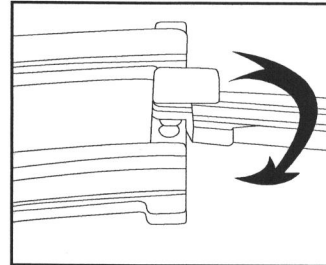

Modes of play

**a. To play on track**


Turn the train upside down and switch to "on track" mode before playing.

Place the train on the track. Make sure that the wheels rest against the rim of the track.

Let the child sit safely on the seat and use both hands to grasp on the steering wheel.

To start, simply step on the right foot pedal and the train will run on the track.

To stop, release foot from right foot pedal.

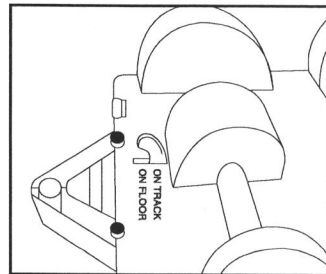


**b. To use as a walker**

Turn the train upside down and switch to “on floor” mode before playing.

Place the train on a flat surface and let the child push the handle at the back.

The child must use both hands to grasp the handle while pushing.

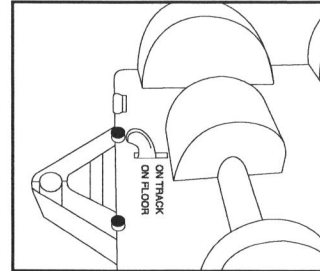


**c. To use as foot-to-floor ride-on**

Turn the train upside down and switch to “on floor” mode before playing.

Let the child sit and push with feet.

The child must use both hands to grasp the steering wheel while pushing.

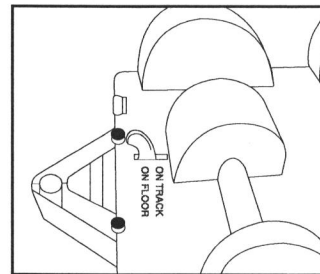

**Buttons & Sounds**

By pressing the following buttons on the steering wheel, you will hear:



All aboard

Engine sound

Whistle sound

Railroad crossing sound "ding-ding-ding"

Stop!

**Loading Limit**

- The maximum load is one child.
- The maximum weight of the passenger is 44 lbs (20 kgs.)
- This train cannot take any extra weight from towing. Do not attempt to tie or pull anything other than the caboose.
- Do not allow another child to sit on the caboose.

## Warning

- An adult should supervise the child's play at all times.
- This car is not suitable for children under 12 months of age.
- Never operate the train on or near roadways, streets, nearby moving vehicles, swimming pools, creek, sloped driveways, alleys or steps.
- Never drive in the dark.
- Never drive in rainy or snowy conditions.
- Never drive in excessive heat and humid conditions.
- Never allow more than one child to ride.
- Never allow your child to stand on the train.
- Never spill liquids on the control panel as it will damage the electronics.
- Your child's hands, feet or any part of his or her body or clothing should stay clear of moving parts of this car while driving.
- Shoes must be worn while driving. Feet must remain on the floor of the train when used as a ride-on and should remain so during driving.
- Operating in the following suggested safe driving areas will enhance play value and safety:
  - Flat, leveled, dry areas.
  - Suitable surface; carpets, hardwood floors or tile floors or hard surfaces (concrete, asphalt, etc.)
  - Keep away from drop-offs, stairs, obstructions and flammable vapors.
- Only use the battery(ies) specified by the manufacturer.
- Only use the charger(s) specified by the manufacturer.

## MAINTENANCE OF THE TALKING TRAIN

1. You should inspect the talking train to make sure it is in good working condition.
2. Clean the talking train with a soft, dry cloth.
3. Do not allow the buttons to get wet.
4. Store the talking train indoors during rainy or snowing weather.

## Battery


### Battery Charging

#### IMPORTANT

1. Battery charging must be done by an adult. Never allow your child to charge the battery.
2. While the battery is charging, the charger may feel warm to the touch. This is a normal condition.

Before using the train for the first time, please follow these steps for battery charging:

1. To gain access to the battery compartment, simply remove the screw at the back of the seat with a screwdriver.

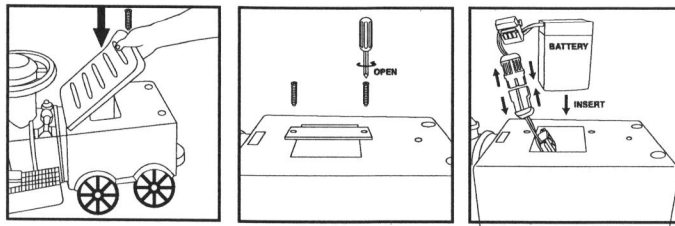

2. Charge new battery for 18 hours before first use.
3. Charge the battery after each use. Do not allow the battery to run down completely.
4. Charge the battery for 18 hours before storing the train.
5. Charge the battery for 18 hours once a month even if it is not being used.
6. Examine the charger and battery from time to time. If you found any damage, the battery and charger should not be used and must be replaced.
7. Carry the battery by the case. Do not carry the battery by the wires.
8. Do not store the battery in extreme hot or cold conditions. The ideal temperature is between 14F to 104F (-10C to 40C)
9. Supply terminals are not to be short-circuited.
10. Rechargeable battery are to be removed from the toy before being charged.

### Battery Life

The running time of the train between battery recharges depends on the following conditions:

- The weight of the passenger
- The driving surface.
- The charge in the battery itself.
- How the train is used. (Has it been used continuously or intermittently)

You should recharge the battery after each use or whether the train begins to slow down.

After a 18-hour charge, the average battery life is approximately 45 minutes. This will vary depending on the use of the product.

### Battery disposal

This battery is designed to be maintenance free and has been sealed by the factory for this purpose. If a leak develops, follow these steps:

1. Carefully remove the battery from the train immediately, avoid contact with the leaking acid.
2. Place the damaged battery in a plastic bag.
3. Dispose of the battery properly and in accordance with local requirements. Check with your local waste disposal department for proper handling.

If you are exposed to acid, follow these instructions:

External contact:

- Flush cloth, skin or eyes with cold water for at least 15 minutes.
- Call a physician.


Internal Contact:

- Use tap water, milk or egg white immediately.
- Do not induce vomiting.
- Call a physician immediately.



### Trouble shooting guide

- Check to see if the cable connections to the battery are secured.
- Charge the battery.
- Check the fuse. Replace with 15A fuse only. Use of other type of fuse can cause fire and will void your warranty.
- The battery needs to be recharged.
- The battery needs to be replaced.

Please keep this manual for future reference.

 <b>WARNING:</b> <b>RISK OF FIRE. Do not bypass.</b> <b>Replace only with the same type and rating of fuse. (Auto fuse 15A)</b>
--

# 10-Piece Expansion Set for Figure Eight Train Track

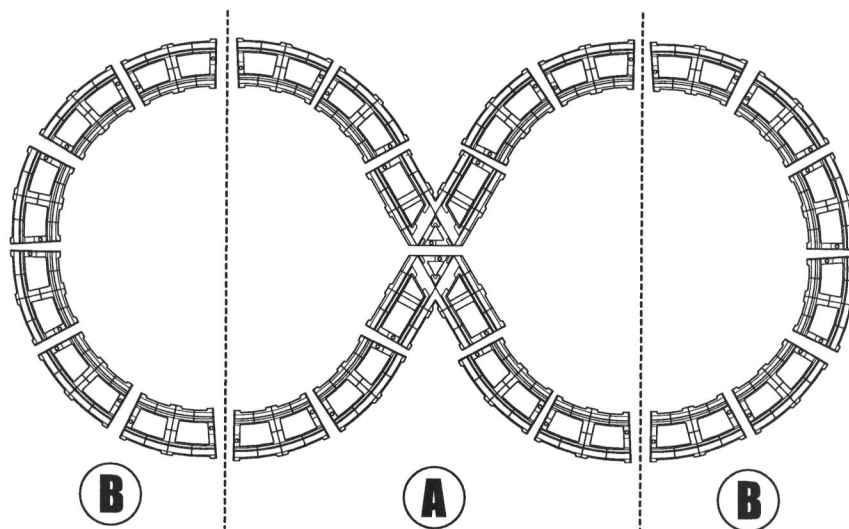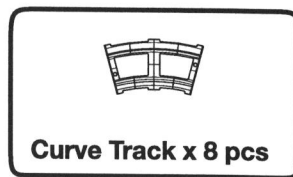

To form a complete Figure "8" Track, you need:-----

A)-----2 x "V" Track + 8 x Curve Track. These are the Track contained in this expansion box set.

B)-----12 x Curve Track (IN TOTAL). These are the Track contained in the original train set.