




# LASER CLEAN HEATING SYSTEM/VENTED HEATER INSTALLATION AND OPERATION INSTRUCTIONS

## LASER CLEAN VENTED

MODEL **Laser 72**  
(TYPE E, F, G)

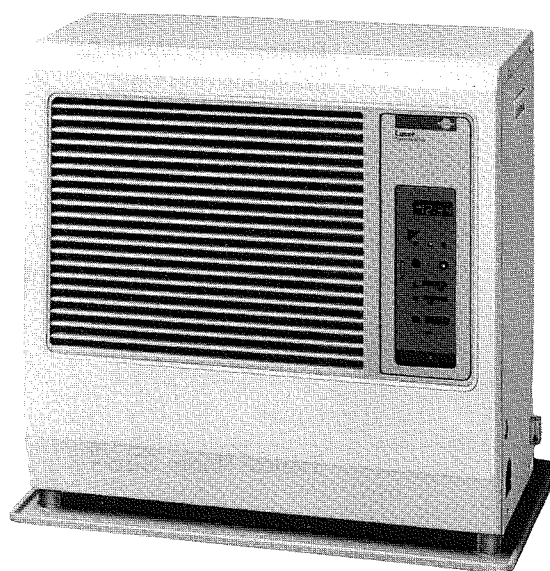

### IMPORTANT

READ AND UNDERSTAND INSTRUCTIONS BEFORE INSTALLING OR USING HEATER.  
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE. CHECK AND LOCAL CODES FOR PERMITTED USE.

### CONTENTS

SECTION A:		SECTION F:	
Specifications .....	2	Routine Maintenance .....	12
Safety Features .....	3	SECTION G:	
SECTION B:		Troubleshooting .....	14
Safety Tips for Operation .....	4	SECTION H:	
SECTION C:		Long Term Storage .....	15
Fuel Guide .....	5	SECTION I:	
SECTION D:		Installation:	
Operating Controls and Part Names .....	6	Tools Needed for Installation .....	16
SECTION E:		Standard Installation Parts .....	16
Operation		Accessory Parts .....	18
Before Ignition .....	9	Tips for Safe Installation .....	21
Ignition .....	9	Installation of Heater and Flue Pipe .....	22
Adjusting Room Temperature .....	10	Permanent Wiring Installation .....	29
Turning Heater Off .....	10	SECTION J:	
Programming for Automatic Operation .....	11	Fueling .....	30

## SECTION A: SPECIFICATIONS


---

Model:	Laser 72
Heater Efficiency:	92% (1)
Heat Rating:	High — 40,000 BTU/h Low — 20,000 BTU/h
Fuel Consumption:	High — 0.3038 gal/h Low — 0.1453 gal/h
Fuel System:	External tank <sup>(3)</sup>
Fuel Type:	Water Clear No. 1-K Kerosene Only
Dimensions (W×H×D): (Includes drip tray)	30" x 27-1/2" x 16-3/4"
Weight:	88 lbs. Empty
Vent Pipe Hole:	3-1/8" — 3-1/2" diameter
Maximum Length of Vent Pipe System:	10 ft., 3 bends or less
Electrical Rating:	120 Volts AC, 60Hz Preheat — 285W Burning — 80W
Typical Room Size <sup>(2)</sup> :	1500 square feet (0°F) 2300 square feet (20°F)

- (1) Heat and vaporized water are produced by the combustion process of this kerosene heater. This rating does not take into account heat loss due to condensation of water vapor.
- (2) Room size for which this heater is suitable will vary depending on outside temperature, house insulation, window size, and other factors.
- (3) External tank to be purchased from local suppliers.

## SAFETY FEATURES

Your Laser 72 is equipped with the following safety features. Please familiarize yourself with these features. When your heater is extinguished due to a safety mechanism, be sure to identify and correct the problem.

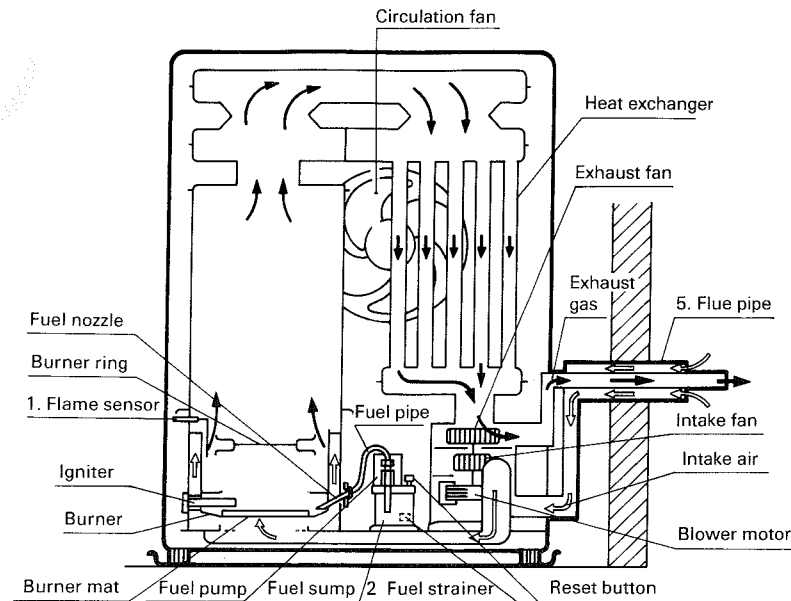

### 1. Flame Sensor

Heater will automatically stop all operations if ignition fails or if flame fails during combustion, in order to prevent fuel overflow. Warning lamp turns on.

### 2. Fuel Strainer

Special strainer catches any dust or impurities present in the fuel before it is sent to the burner.

### 3. Overheat Protector

Automatically stops all operations if heater cabinet reaches abnormally high temperatures due to motor malfunction or abnormal combustion, in order to prevent fire. Warning lamp turns on.

### 4. Power Failure Recovery System

If power fails during heater operation, heater will turn off. When power resumes, heater will automatically reignite to maintain the selected room temperature.

### 5. Fully Vented System

Flue pipe system provides outside air for combustion and vents all combustion products to the outdoors.


### 6. Fusible Link Valve

If a household fire should occur, bringing the fuel line or heater to extremely high temperatures, the fusible link valve will stop the fuel supply to the burner. This will prevent the fuel supply from the external tank continuing to flow into the house.


## SECTION B: SAFETY TIPS FOR OPERATION

**CAUTION:** Heater and vent pipe system must be properly installed before operation. Please follow instructions under "Installation", Section I.

1. Never use any fuel other than water-clear kerosene (ASTM No.1-K Kerosene). **NEVER USE GASOLINE.** Use of gasoline can lead to uncontrollable flames, resulting in destructive fire.

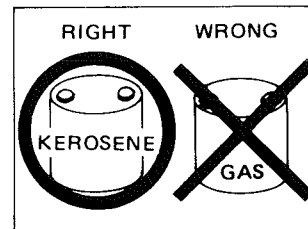


2. Due to high surface temperatures, keep heater away from children, furniture and clothing while in operation (See Page 22).

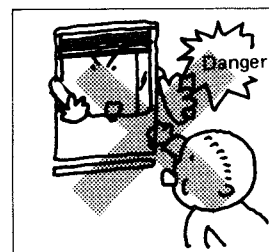

3. To prevent abnormal operation and prolong heater life, be sure to perform routine maintenance (See Pages 12—13).



4. Never store or transport kerosene in other than a metal or plastic container that is (1) acceptable for kerosene, (2) non-red in color, and (3) clearly marked, "KEROSENE". Never store kerosene in the living space.

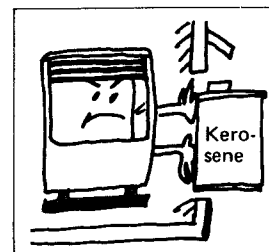

## SECTION C: FUEL GUIDE

The Toyostove Laser 72 is designed for use with water clear No. 1-K kerosene only. Use of low-quality kerosene will cause burner performance to drop, leading to abnormal combustion and reduced heater life.

Purchase only 1-K kerosene in non-red cans reserved exclusively for kerosene and marked accordingly with the word "KEROSENE". Always store your kerosene in a separate area from where you store gasoline for your power equipment to avoid accidental use of gasoline in your heater.

### What to Buy . . .

- ALWAYS : Crystal clear, colorless, high-quality KEROSENE, ASTM No.1-K.
- ALWAYS : Kerosene free of contaminants, water or cloudiness.
- NEVER : Gasoline, alcohol, white gas, camp stove fuel or additives.
- NEVER : Yellow or sour-smelling fuel.

### How to Use It . . . (when optional removable fuel tank is used)

- ALWAYS : Fill heater away from living quarters when heater is cool; use siphon.
- ALWAYS : Watch fuel gauge to avoid overfilling heater.

### How to Store It . . .






- ALWAYS : Store in a clean container, non-red in color, clearly marked KEROSENE.
- ALWAYS : Store away from direct sunlight, heat sources or extreme temperature changes.
- NEVER : In a glass container, or one that has been used for other fuels.
- NEVER : For longer than six months. Begin each heating season with fresh kerosene; discard at the end of season.
- NEVER : In the living space.

### Why It is Important . . .

Pure, clean kerosene is essential for safe and efficient heater operation. Poor quality or contaminated kerosene can cause:


- Excess tar deposits on burner and flue pipe
- Incomplete combustion
- Reduced heater life

Use of a highly volatile flammable fuel such as gasoline can produce uncontrollable flames, creating a severe fire hazard.

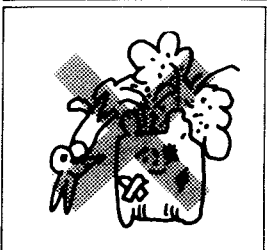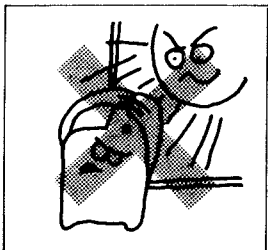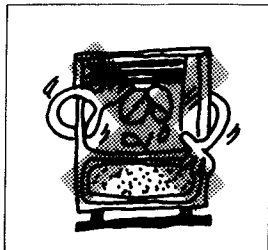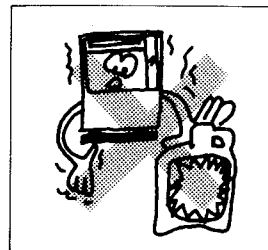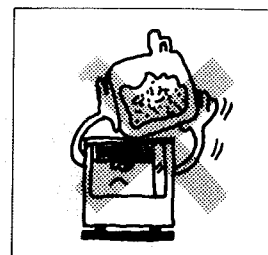

## SECTION D: OPERATING CONTROLS AND PART NAMES




Before using heater, familiarize yourself with the following operating controls and part names.

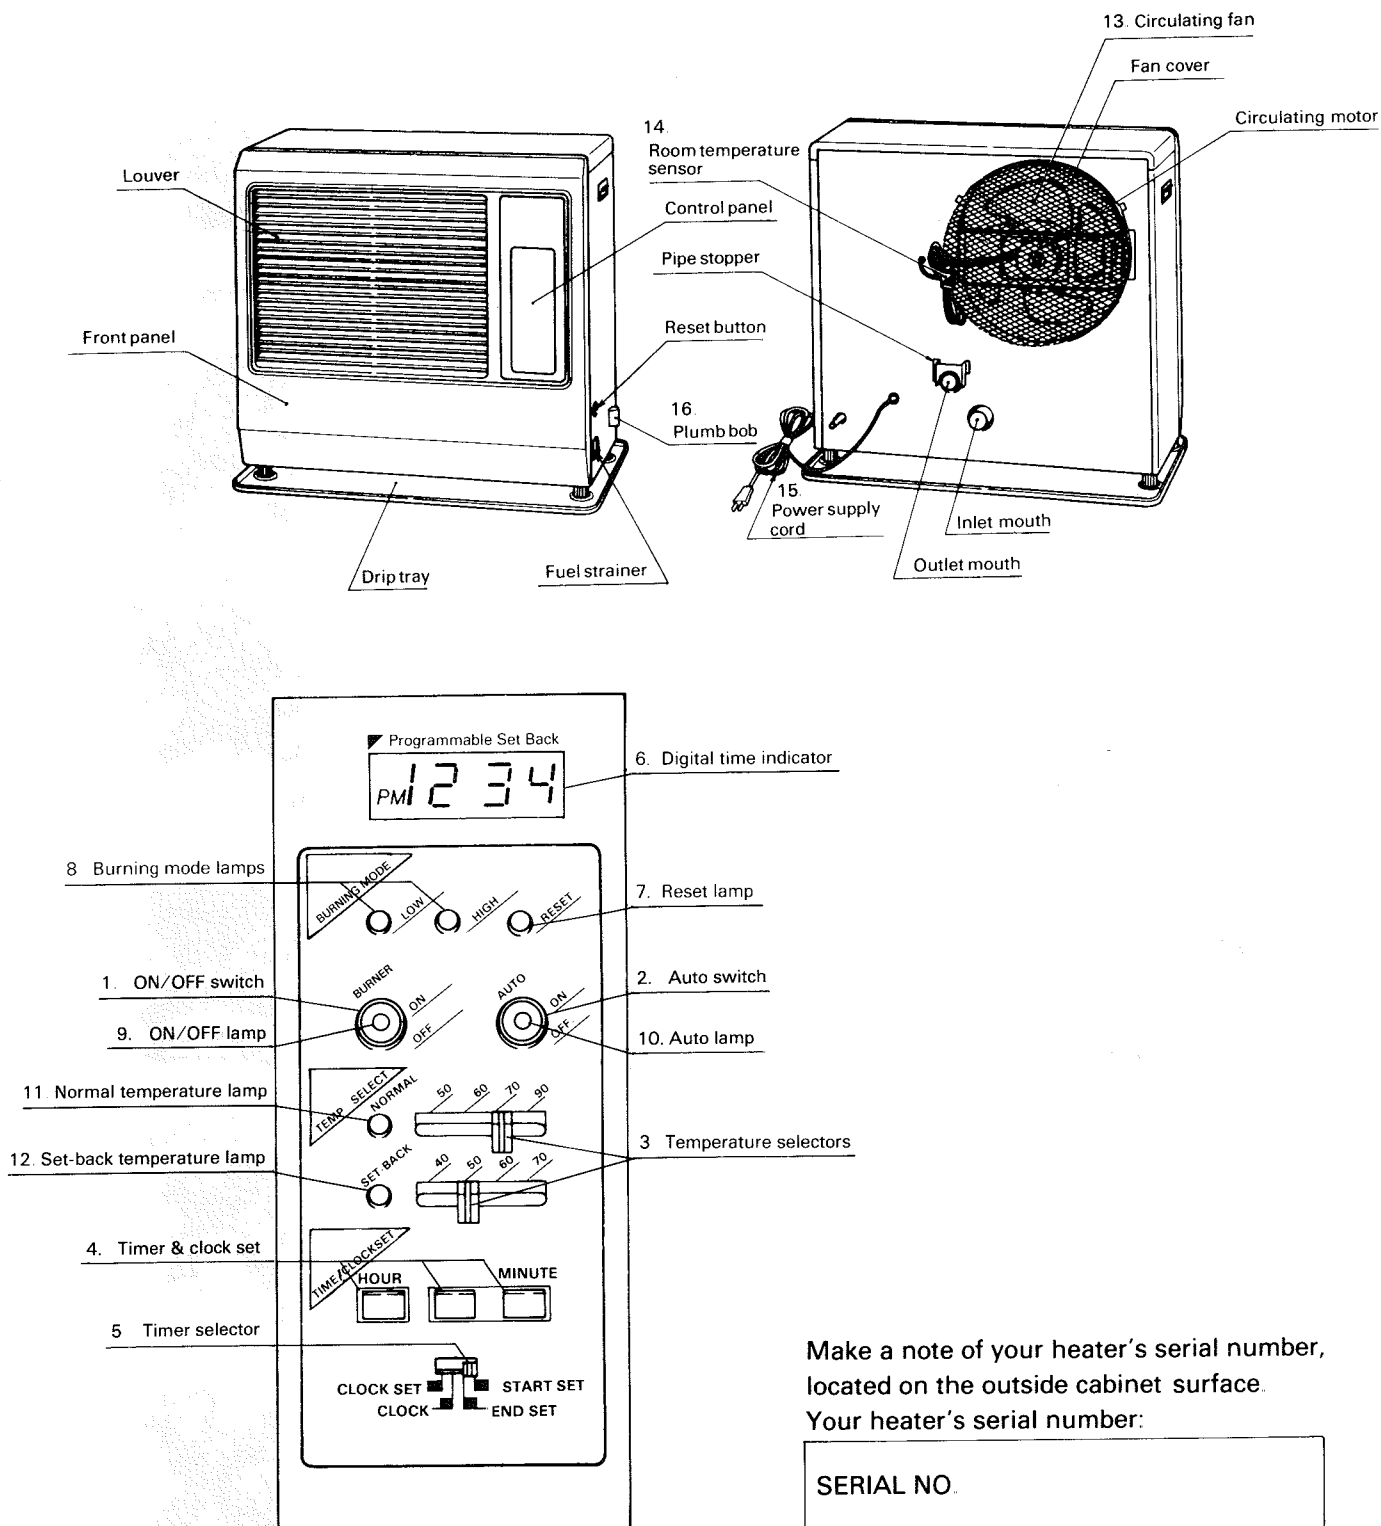

1. ON/OFF switch: Main switch turns heater burner on and off. When switched on, heater begins operation and combustion starts after a 220-second preheat period.
2. Auto switch: The switch turns automatic operation modes on and off which have been programmed into timer.
3. Temperature selectors: "Normal" and "Set-Back" temperature selectors allow user to select desired temperature during manual or automatic operation.
4. Timer & clock set: Timer and clock set modes can be set by pressing hour or minute buttons.
5. Timer selector: Clock, clock set, "Set-back" mode, start time set or end time set can be selected by this switch.
6. Digital time indicator: Continuous display on digital clock.
7. Reset lamp: Lights when safety devices activate due to heater malfunction. Flame will be extinguished automatically. Heater may be reignited after problem is corrected (See Page 3).
8. Burning mode lamps: Indicates whether heater is operating at high or low combustion.
9. ON/OFF lamp: Lights when heater is in operation.
10. Auto lamp: Lights when automatic operation is in use.
11. Normal temperature lamp: Lights when heater runs with manual or "Normal" mode of automatic operation.
12. Set-back temperature lamp: Lights When heater runs with "Set-back" mode of automatic operation.
13. Circulating fan: Two-speed motor supplies high-capacity warm air flow during high combustion for heating room up quickly, and low-capacity warm air flow during low combustion for maintaining comfortable room temperature.
14. Room Temperature sensor: Constantly senses room temperature and supplies information to heater so that desired room temperature can be maintained.
15. Power supply cord: For use in 120V,AC electrical outlets.
16. Plumb bob: Allows user to check if heater is positioned evenly.

REF #	PART #	PART NAME
1	20478146	Front panel assembly
2	20475804	Carrying handle
3	20450007	Plumb bob
4	20475170	Adjustable leg
5	20475841	Fuel pipe assembly (Type E)
6	20478141	Fuel pipe assembly (Type F, G)
7	20478129	Drip tray
8	20475842	Burner assembly (Type E)
9	20478142	Burner assembly (Type F, G)
10	20475813	Burner mat
11	20475843	Burner ring
12	20475834	Fuel nozzle (Type E)
13	20478026	Fuel nozzle (Type F, G)
14	20475194	Burner gasket
15	20475893	Radiant chamber gasket
16	20475881	Peep window gasket
17	20474992	Joint packing
18	20474080	Igniter gasket
19	20475808	Radiant chamber assembly
20	20475831	Mica Window
21	20475847	Blower motor assembly with case (Type E, F)
22	20478147	Blower motor assembly with case (Type G)
23	20475819	Fuel pump
24	20475534	Fuel sump
25	20475890	Resistor A
26	20475891	Resistor B
27	20479469	Circulation fan motor
28	20474506	High limit switch
29	20475811	Primary flame rod
30	20475535	Power supply cord
31	20475518	Igniter
32	20475773	Thermistor
33	20474579	Fuse
34	20475712	Main circuit board
35	20475817	Transformer
36	20479876	Indicator lamp circuit
37	20475701	Knob for temperature selector
38	20479801	Standard flue pipe
39	20474045	Syringe
40	20474039	Insulator A
41	20474014	Spacer A
42	20474050	Screw C
43	20474051	Screw D
44	20475553	Screw 1P
45	20474055	Screw O
46	20478156	Screw 1S
47	20474057	Flange nut
48	20474272	Screw M
49	20474925	Oil catch
50	20474059	Holder A
51	20450120	Screw for igniter unit
52	10005597	Fusible link valve
53	20478162	Top plate
54	20478163	Right side panel
55	20478164	Left side panel
56	20475844	Heat exchanger
57	20475877	O-ring (φ75)
58	20475875	Blower motor case gasket
59	20475878	Rubber mat
60	20475871	Blower motor exhaust fan
61	20475874	Washer for blower motor
62	20475883	Blower motor intake fan
63	20475837	Blower motor assembly
64	20475872	Motor mount (Type E, F)
65	20478090	Screw 1T
66	20478091	Screw 1U
67	20475172	Fan cover
68	20474920	Igniter cover
69	20478187	Air pressure switch (Type G)
70	20479895	Instruction manual
71	20479499	Carton

## Laser 72 (Type E, F, G)

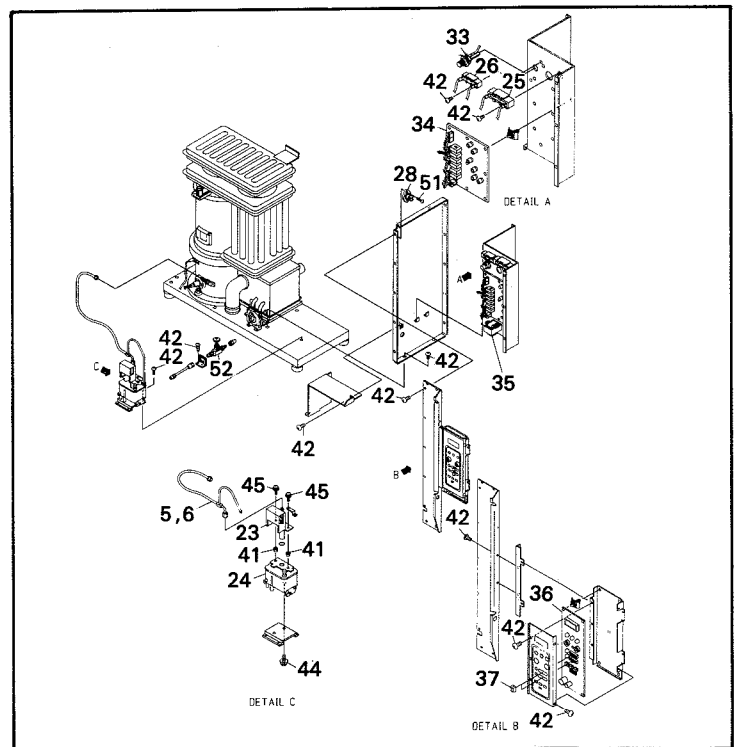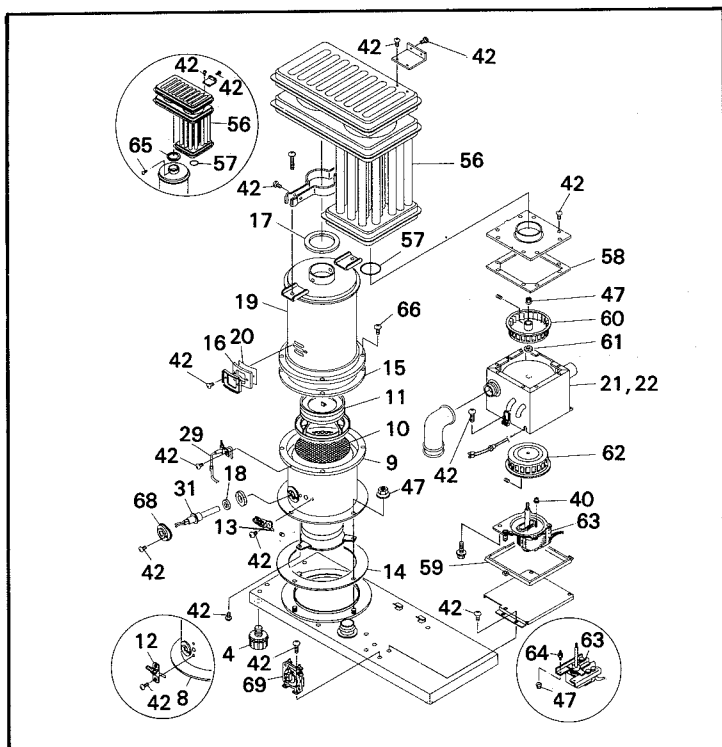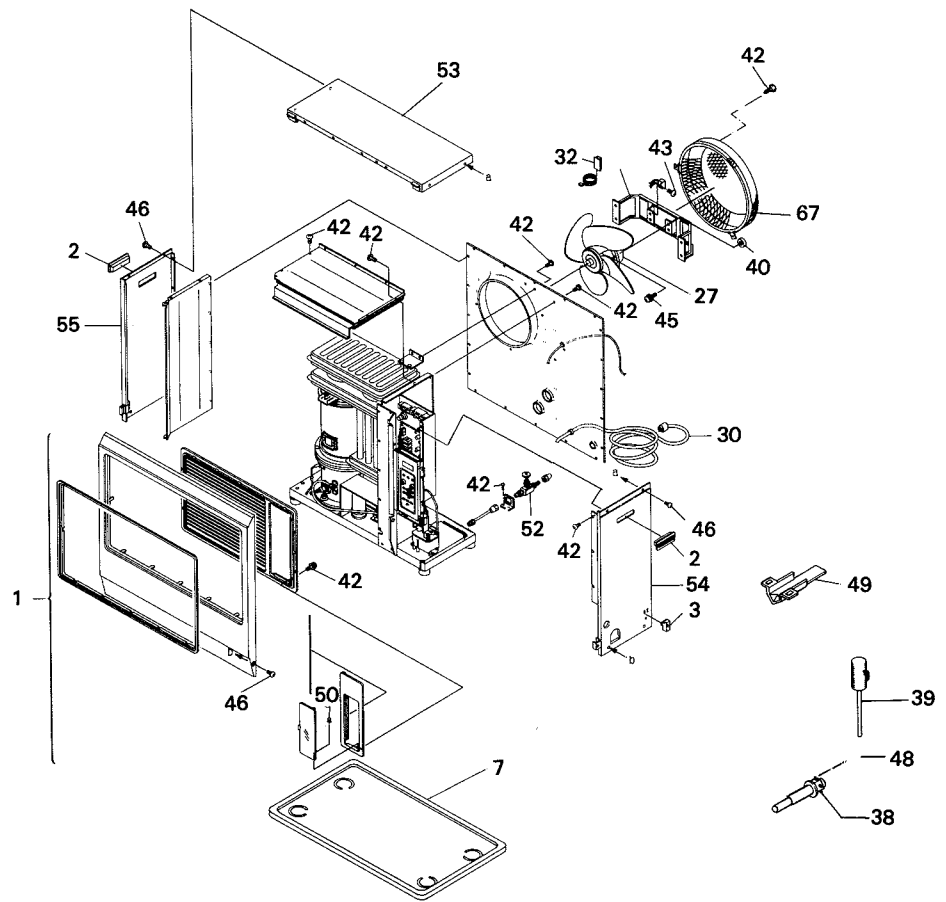




## SECTION E: OPERATION

---

### BEFORE IGNITION




1. Open the valve(s) of the separate fuel tank.
2. If using heater for the first time, or after heater has been out of fuel, press the red reset button once for a period of one second in order to send fuel to the fuel regulator.

Note: Make sure there is no fuel leakage from the fuel line or joints.

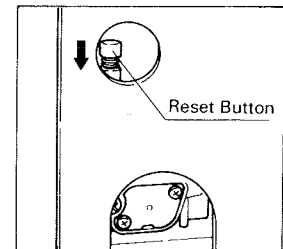

### IGNITION



1. Plug heater into a 120V, AC electric outlet.
2. Slide "NORMAL" thermostat all the way to the right side.
3. Push in ON/OFF switch to the "ON" position. ON/OFF lamp will light. Burning mode lamp "LOW" will light and ignition will start after approximately 4 minutes. Circulation fan will come on after approximately 3 more minutes.
4. Heater operates at low combustion for 5 — 6 minutes after ignition, regardless of temperature control setting. After this period, output may be adjusted as desired using the "NORMAL" temperature selector as directed the following instructions.

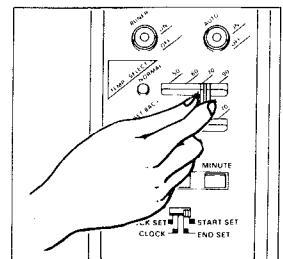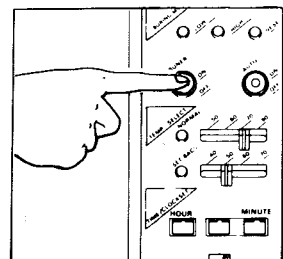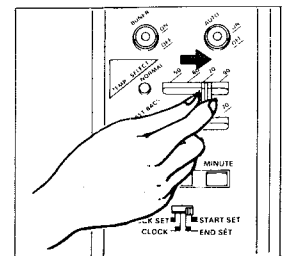

## ADJUSTING ROOM TEMPERATURE

1. The temperature control should be set at the position you find most comfortable. Heat output will be regulated automatically in accordance with the room temperature registered by the room temperature sensor.
2. Heater will burn at high combustion until room temperature reaches the selected temperature level. When room temperature reaches the selected setting, heater will automatically shift to low combustion to maintain the desired temperature. When the room temperature exceeds the selected setting, heater will automatically shut off. As room temperature drops, heater will automatically re-start to maintain desired settings.

Note: Burning mode lamps indicate at which output level the heater is operating at any given time. The heater shifts automatically between low and high output levels to maintain the desired temperature.

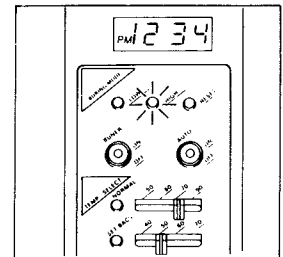
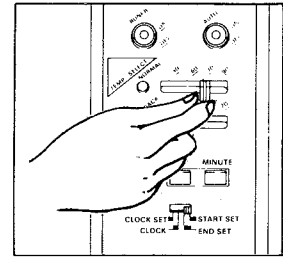


## TURNING HEATER OFF

Press ON/OFF switch to "OFF" position. (Auto lamp, temperature lamp and burning mode lamp will go out.) Circulation fan and combustion fan motors continue to operate for approximately three minutes to cool heater down. Make sure ON/OFF lamp (green lamp) goes out when fans stop.

Note: If ON/OFF switch is pressed to "ON" position during the cool down period, heater will automatically re-start at the end of cool down period.


Note: Disconnect heater plug from electrical outlet after power lamp has turned off if heater will be out of use for any period. Plug should also be disconnected during electrical storms.

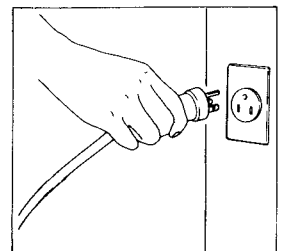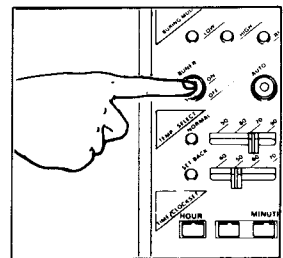

## PROGRAMING FOR AUTOMATIC OPERATION

1. SET CLOCK — Position Timer Selector to "Clock Set". Press hour or minute buttons of Timer & Clock Set to correct time. Position Timer Selector to "Clock" after clock setting is completed. Clock will be shown on Digital Time Indicator.

Note: In case of power failure for over 30 seconds, all clock & timer settings are cancelled. If Digital Time Indicator is flashing "PM 12:00", this indicates a power loss of more than 30 seconds. At this point, you need to reset all timer and set-back functions.

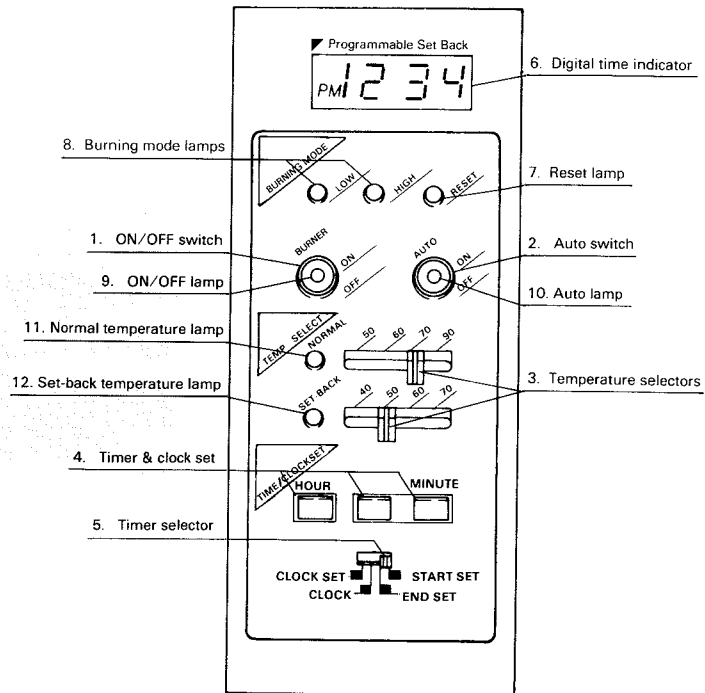

2. SET START TIME OF "SET-BACK" MODE — Position Timer Selector to "Start Set". Press hour or minute buttons of Timer & Clock Set to desired time. Start time of "Set-Back" mode will be shown on Digital Time Indicator. (Ex. PM 10:00)

3. SET END TIME OF "SET-BACK" MODE — Position Timer Selector to "End Set". Press hour or minute buttons of Timer & Clock Set to desired time. End time of "Set-Back" mode operation will be shown on Digital Time Indicator. (Ex. AM 06:00)


Note: Always return Timer Selector to "Clock" position for time indication.

4. TURN POWER ON — Press both ON/OFF switch and auto switch to the "ON" position.
5. SET ROOM TEMPERATURE - Slide temperature selector knobs on "NORMAL" mode operation and "SET-BACK" to desired settings. (Ex. "NORMAL" -75°F, "SET-BACK" -60°F)

Note: Set-back function operates only when "AUTO" switch is on.

Note: "Set-Back" mode operation is designed for energy saving lower temperature and setting. One "Set-Back" mode operation can be programmed in 24 hours period.

Ex.

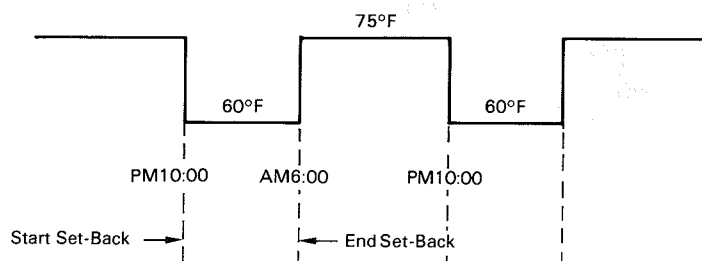


## SECTION F: ROUTINE MAINTENANCE

---

**CAUTION:** Be sure to unplug heater before performing any checks or cleaning.


**CAUTION:** Allow heater to cool completely before cleaning or maintenance.

FOR OPTIMUM HEATER PERFORMANCE, THE PARTS SHOWN BELOW SHOULD BE CLEANED REGULARLY:

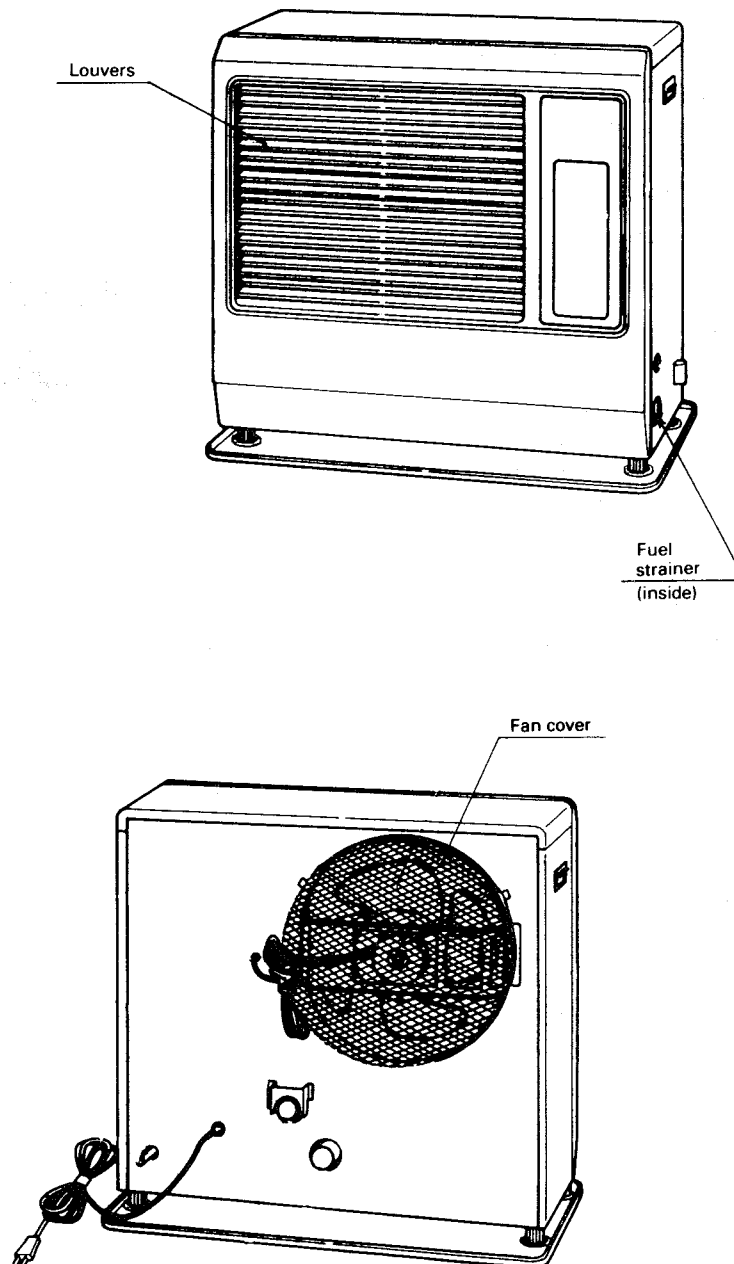


1. Clean Louvers (ONCE A WEEK)

Dust and stains should be wiped off louvers with a damp cloth.

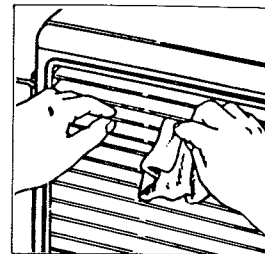


2. Clean Circulation Fan Cover (ONCE A WEEK)

Remove any dust or pet hair from the fan cover on the back of the heater.

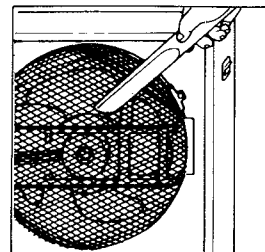


3. Check for Kerosene Leaks (REGULARLY)

Make it a habit to check for any sign of kerosene leakage along the fuel line and at all joints. Kerosene leaks may lead to risk of fire.

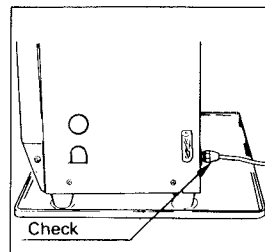

4. Check Flue Pipe Area (ONCE A WEEK)


Check the flue pipe joint to make sure connection is firm. Use a vacuum cleaner to remove any dust or pet hair.

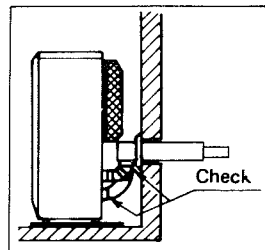

5. Clean Fuel Strainer (ONCE A MONTH)

The strainer of the fuel sump should be cleaned once a month and before storing heater at the end of each season.

- (a) Close the valve(s) of the separate fuel tank.
- (b) To catch the fuel which will drain out, set the oil catch below the strainer cover, with a small container under it.
- (c) Loosen the two screws from the strainer cover and remove.
- (d) Remove the strainer and wash with kerosene.
- (e) Return the strainer to its original position. Replace strainer cover and screw to secure.
- (f) Wipe away any spilled kerosene.
- (g) Open the valve (s) of separate fuel tank. Check for kerosene leakage.

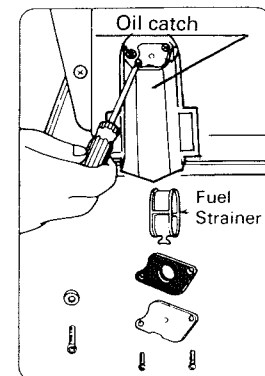

**Note:** Be sure to unscrew the drain screw to remove all remaining kerosene from the fuel sump at the end of each season.

## SECTION G: TROUBLESHOOTING

Should problems arise during operation or ignition, use this chart to determine the cause and the proper steps to take. Be sure to unplug heater and allow to cool completely before taking corrective measures.

PROBLEM	CAUSE	SOLUTION
POWER LAMP FAILS TO TURN ON	Disconnected power plug Circuit board malfunction	Plug into 120V AC outlet. Consult your dealer.
NO IGNITION	Out of fuel Fuel tank valve closed Air pocket in fuel line  Clogged fuel strainer Igniter, circuit board or fuel pump malfunction	Check fuel gauge on fuel tank; refuel. Open valve by turning counterclockwise. Push reset button on the fuel sump, located inside side door, once. Clean fuel strainer (see page 13). Consult your dealer
EXTINGUISHED AFTER IGNITION	Air pocket in fuel line  Out of fuel High limit switch activated  Flame sensor malfunction	Push reset button on the fuel sump, located inside side door, once. Check fuel gauge on fuel tank; refuel. Clean circulation fan cover, remove any obstructions. Consult your dealer.
POOR COMBUSTION/NOISY COMBUSTION	Soot buildup on flue pipe line Burner ring not properly seated Altitude too high	Clean out any soot. Consult your dealer. Consult your dealer.
ODOR	Leaking flue pipe Kerosene leakage  Faulty packing or gasket in combustion area	Tighten all flue pipe connections. Tighten all fuel line joints. Wipe away any kerosene drippage. Consult your dealer

If the corrective measures outlined above do not solve the problem, please consult your TOYOSTOVE dealer.



## SECTION H: LONG TERM STORAGE

---

At the close of each heating season, or when you do not plan to use your heater for an extended period, the following procedures are recommended.

1. As the end of the season approaches, calculate your kerosene purchases so that you can use up all the kerosene you have on hand. When kerosene is stored for over six months, its quality may deteriorate. The use of such kerosene will have an unfavorable effect on heater operation.
2. If your heater needs any service or repair, now is the time to call your dealer and get it done before storage. That way your heater will be ready for immediate use when the next heating season begins.
3. If you plan to store your heater in place,

- (a) Unplug heater.
- (b) Close the main tank valve.
- (c) Remove all kerosene from the fuel sump and clean the fuel strainer (see page 13).
- (d) Wipe off any stains or dust on heater with a damp cloth, then wipe once again using a dry cloth.
- (e) Cover heater completely with a large plastic bag to protect from dust.

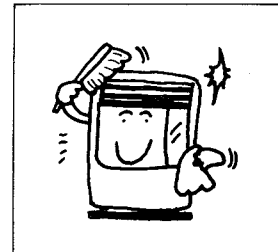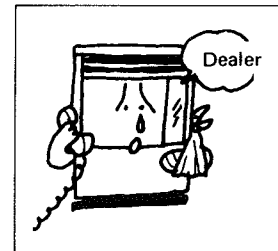


4. To store heater in another location,

- (a) Unplug heater.
- (b) Close the main tank valve.
- (c) Remove all kerosene from the fuel sump and clean the fuel strainer (see page 13).
- (d) Disconnect fuel line and flue pipe from the heater.

**Note:** Kerosene remaining in the fuel line may flow out when fuel line is disconnected. Have a container ready to catch drainage.

- (e) Remove any soot accumulated in the flue pipe using a brush and/or vacuum cleaner.
- (f) Wipe off any stains or dust on heater with a damp cloth, then wipe once again using a dry cloth.
- (g) Put the heater and flue pipe in the original shipping box, and store in a dry place. If original shipping box is not available, cover the heater completely with a large plastic bag to protect from dust during storage.
- (h) Plug inner and outer sleeve openings using the two rubber caps provided for this purpose.

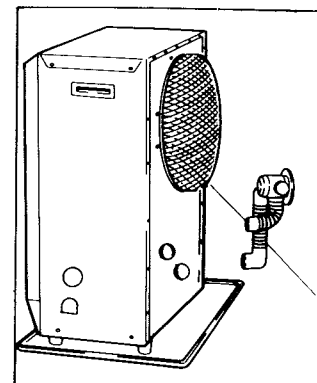

**SECTION I:  
INSTALLATION**





---

**TOOLS NEEDED FOR INSTALLATION**


Tool	Use
Phillips Head Screwdriver	Installation of flue pipe, etc.
Electric Drill	Drilling hole in wall for flue pipe
Hole Saw, 3 1/2" diameter	Making hole in wall for flue pipe
Hacksaw (with a 32 teeth/inch blade)	Cutting wall sleeve

**STANDARD INSTALLATION PARTS**


The following standard installation parts are enclosed with heater. For alternate installation methods, you may need to purchase additional accessories which are available from your TOYOSTOVE dealer. See "Accessory Parts", page 18.

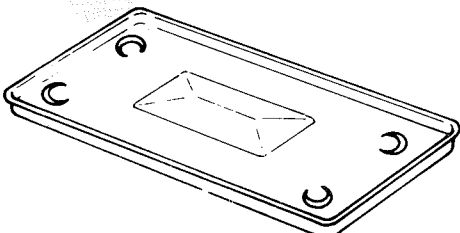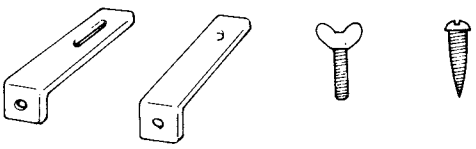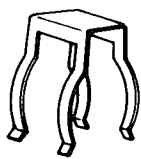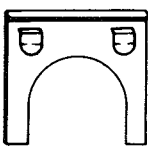 Drip tray (1) (PART #20478129)	 Wall Brackets (2 sets) (PART #20474962)
 Pipe holder (1) (PART #20474963)	 Pipe stopper (1) (PART #20474964)




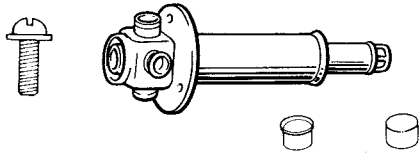


Standard Flue Pipe (1) (PART #20479801)  
Exhaust Air Cap (PART #20474945)  
Intake Air Cap (PART #20474949)

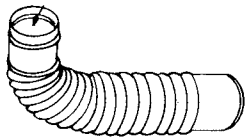


Bent Joint (1) (PART #20474984)

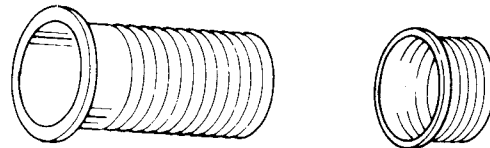


Wall Sleeve and Sleeve Nut (1 ea.)  
(PART #20479867)

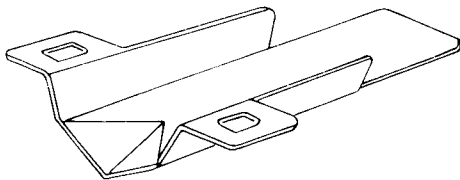


Oil Catch (1) (PART #20474925)

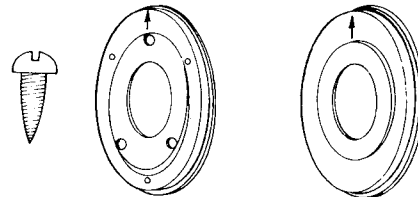


(PART #20474968) (PART #20474969)  
Inner and Outer Sleeve Flange (1 ea.) w/screws

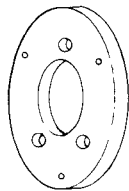


Flange Gasket (2) (PART #20474971)

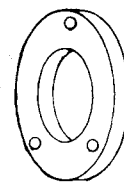


Flue Pipe Gasket (1) (PART #20474974)




Sleeve Cap (2) (PART #20474978)

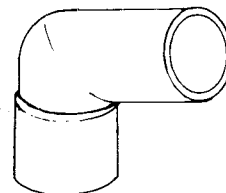

L-Shaped Hose (2) (PART #20474975)



Inlet Hose (1) (PART #20474951)

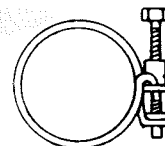



Hose Band (2) (PART #20474977)

## ACCESSORY PARTS

The following accessory parts are available for use in non-standard installation of the Laser 72. After giving careful consideration to your desired heater and flue pipe locations and fueling system, consult your TOYOSTOVE dealer to purchase the necessary accessory parts.


Accessory	Part No.	Application
Extension pipes (L)*	22744998	Extends pipe system by 61-3/4 to 78-3/4"
Extension pipes (M)*	22744997	Extends pipe system by 22-1/2 to 39-3/8"
Extension pipes (S)*	22744996	Extends pipe system by 12-5/8 to 19-5/8"
L-Shaped exhaust joint*	22744961	For 90 degree bend in exhaust pipe
Electric Kerosene Lifter Model OL-A-2	22744992	Used to lift fuel to heater when fuel tank is located underground or outdoors in a position lower than the heater. With automatic recovery.
Window Kit (L)	20475589	For installation of flue pipe in windows from 31 to 50 inches wide.
Window Kit (S)	20475588	For installation of flue pipe in windows from 20 to 32 inches wide.
Long flue pipe	20479857	For installation in wall thicknesses 18 inches.
External Fuel Supply Installation Kit	10005098	For installation of external tank system

\* Total length of extension pipe between heater and flue pipe must be no greater than 10 ft. No more than three bends may be used in extension pipe.

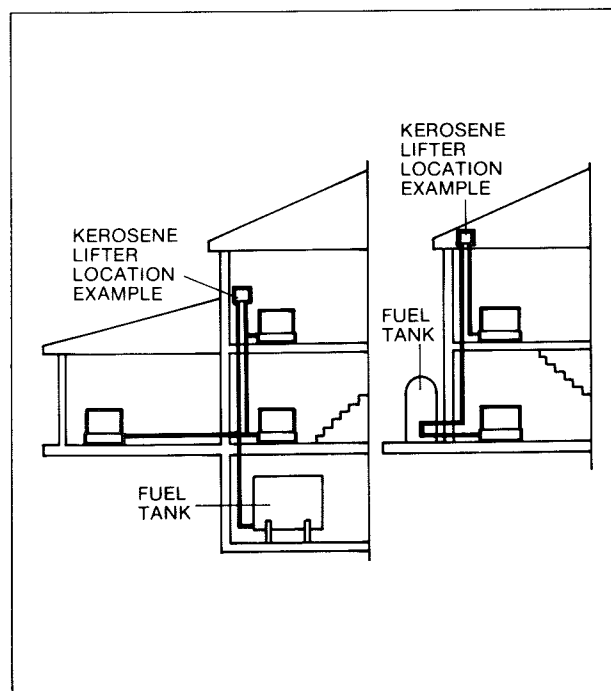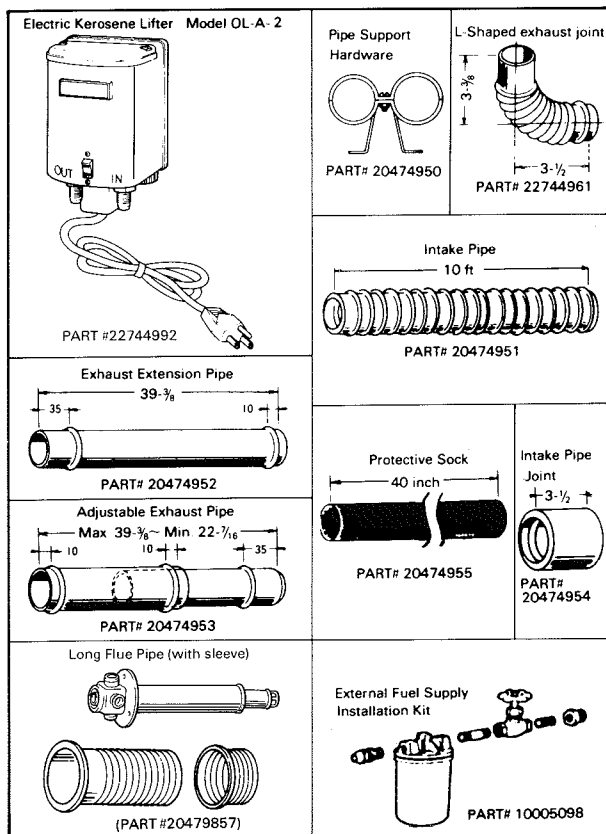


## EXTENSION KIT

### Extension Pipes (L) PART #22744998

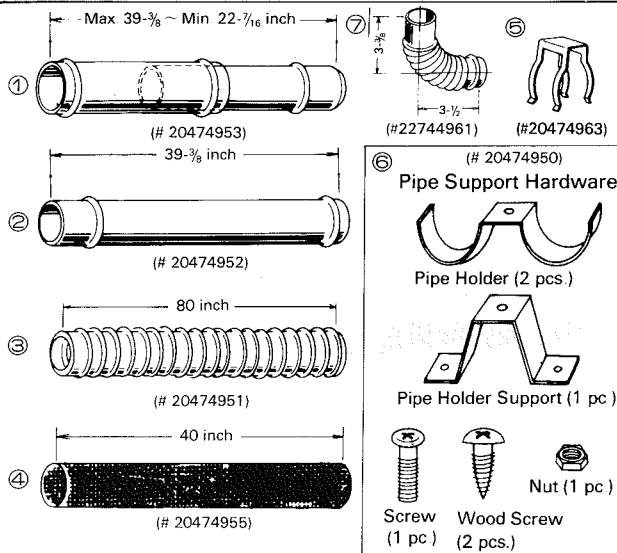


No.	Name of Part	Qty.
①	Adjustable Exhaust Pipe Max. 39- $\frac{3}{8}$ ~ 22- $\frac{7}{16}$ inch	1
②	Exhaust Extension Pipe (long, 39- $\frac{3}{8}$ inch)	1
③	Intake Pipe 80 inch	1
④	Insulating cloth cover (40 inch)	2
⑤	Pipe Holder	2
⑥	Pipe Support Hardware	3 sets
⑦	L-Shaped Exhaust Joint	1

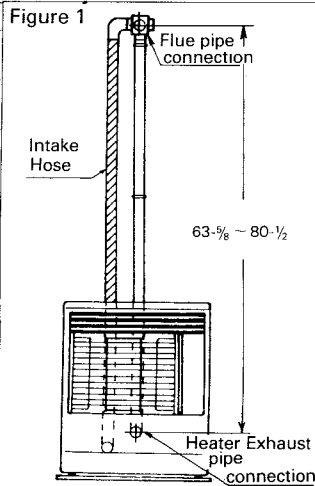


When using the "Extension pipes (L)" extension kit, the distance between the heater exhaust pipe connection and the flue pipe connection must be at least 63- $\frac{5}{8}$  inch but no more than 80- $\frac{1}{2}$  inch. (see Figure 1 for reference)

### INSTALLATION WITH EXTENSION PIPES (L)

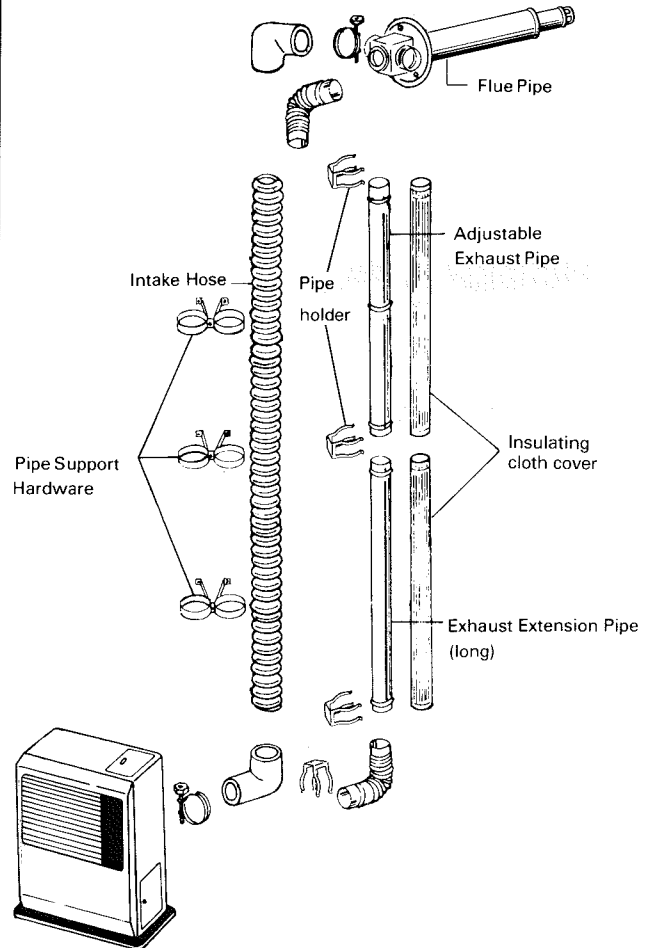


NOTE: Use "L"-shaped Exhaust Joint if necessary.

### Extension Pipes (M) PART #22744997

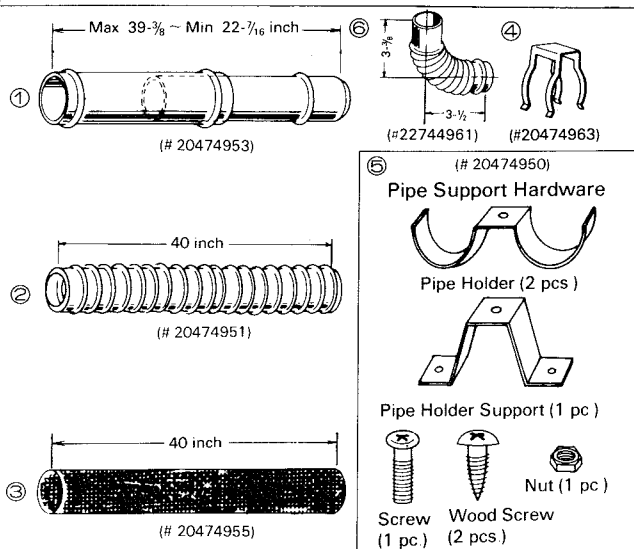


No.	Name of Part	Qty.
①	Adjustable Exhaust Pipe Max. 39- <sup>3</sup> / <sub>8</sub> ~ 22- <sup>7</sup> / <sub>16</sub> inch	1
②	Intake Pipe 40 inch	1
③	Protective Sock 40 inch	1
④	Pipe Holder	2
⑤	Pipe Support Hardware	2 sets
⑥	L-Shaped Exhaust Joint	1

Figure 1

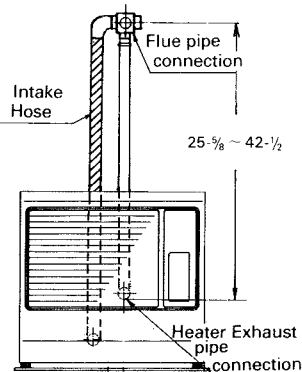


When using the "Extension pipes (M)" extension kit, the distance between the heater exhaust pipe connection and the flue pipe connection must be at least 25-<sup>5</sup>/<sub>8</sub> inch but no more than 42-<sup>1</sup>/<sub>2</sub> inch. (see Figure 1 for reference)

### Extension Pipes (S) PART #22744996

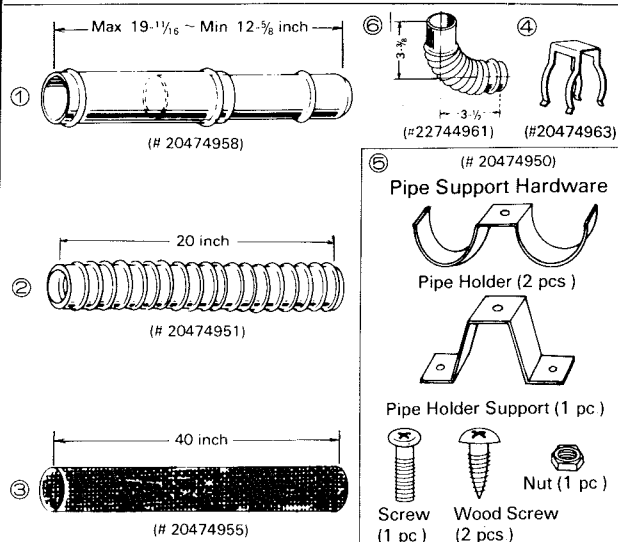

No.	Name of Part	Qty.
①	Adjustable Exhaust Pipe Max. 19- <sup>11</sup> / <sub>16</sub> ~ 12- <sup>5</sup> / <sub>8</sub> inch	1
②	Intake Pipe 20 inch	1
③	Protective Sock 40 inch	1
④	Pipe Holder	2
⑤	Pipe Support Hardware	1 set
⑥	L-Shaped Exhaust Joint	1


Figure 1

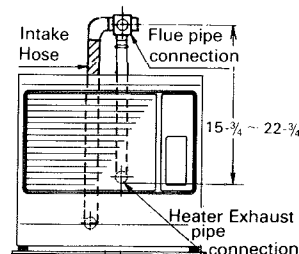


When using the "Extension pipes (S)" extension kit, the distance between the heater exhaust pipe connection and the flue pipe connection must be at least 15-<sup>3</sup>/<sub>4</sub> inch but no more than 22-<sup>3</sup>/<sub>4</sub> inch. (see Figure 1 for reference)

## WINDOW KIT

### Window Kit (L) PART #20475589 (31 - 50 inches) Window Kit (S) PART #20475588 (20 - 32 inches)

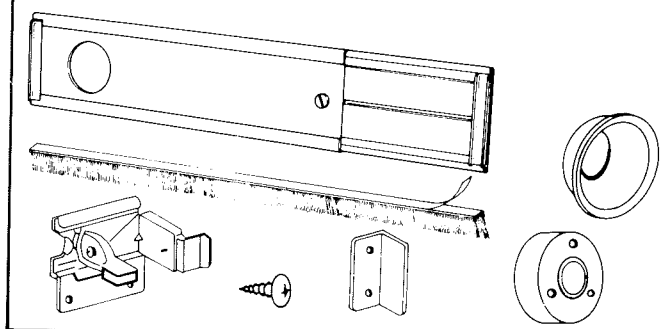






### Ex. Window Kit

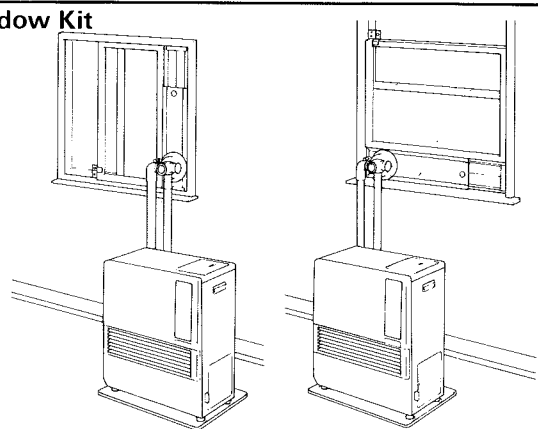

## TIPS FOR SAFE INSTALLATION

Follow the safety tips below when planning the installation of your Laser 72.

1. Intake and exhaust flue pipe openings must be fully exposed to outside air. Do not vent into garage, basement under the floor, or into any enclosed area.
2. Do not install flue pipe in close proximity to other objects or materials (see page 22.)
3. Before making a hole in your wall for the flue pipe, make sure the area is free of electrical wires, gas pipes and other obstacles.
4. Do not install flue pipe where it will be exposed to heavy snow or strong drafts.
5. Total length of extension pipe between heater and flue pipe must be no greater than 10 ft., and no more than 3 bends may be used.

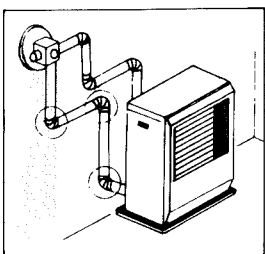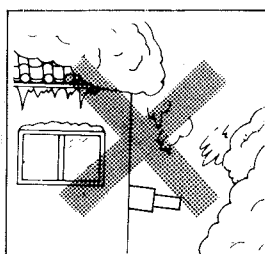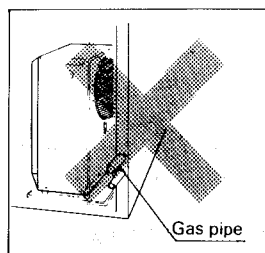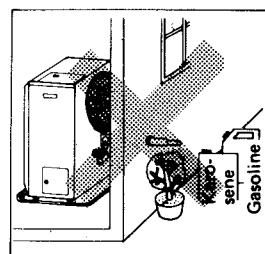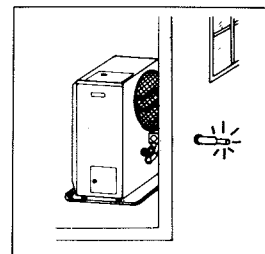

## INSTALLATION OF HEATER AND FLUE PIPE

NOTE: Check and comply with all state and local codes that may apply to vented heaters before beginning installation.

NOTE: This heater is designed to be used no more than 3000 FT. above sea level.  
ASK your local dealer for using at altitudes higher than 3000 FT. above sea level.

1. Select heater location. Allow clearances as indicated below between heater and all other materials.  
(See Fig. 1)

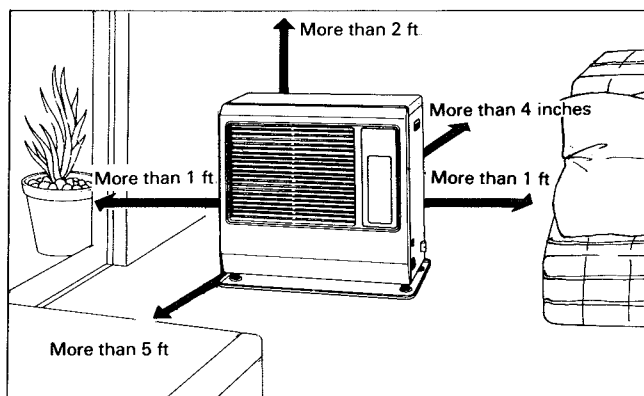


Fig. 1

2. Make sure that the outside area to where the standard flue pipe will be reach is clear of any objects.  
(See Fig. 2 & 3)

NOTE: Make sure wall thickness is not greater than 10 inches. If it is more than 10 inches, consult with your local dealer. A longer flue pipe will be available through your dealer or distributor.

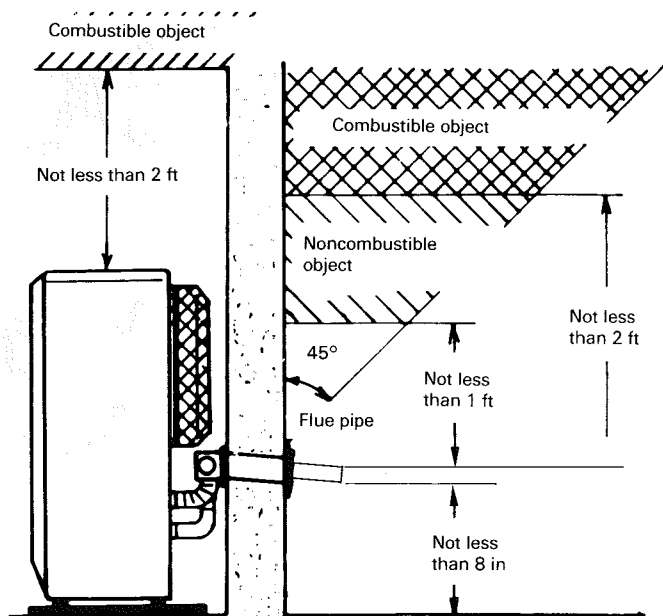


Fig. 2


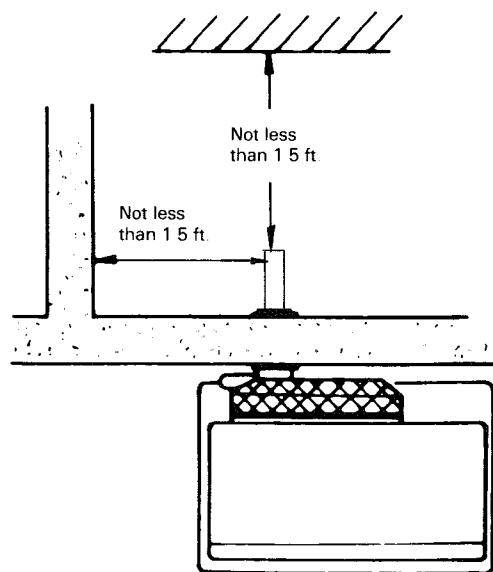


Fig. 3



3. For standard installation, use the template enclosed with the heater to position the hole for the standard flue pipe. Tack or tape template to the wall at the desired position (See Fig. 4).

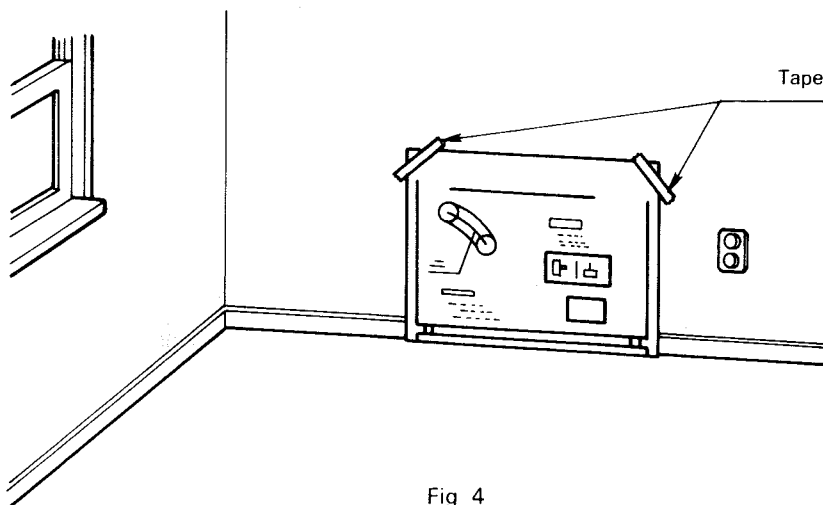

NOTE: Heater should be installed on a sturdy floor. Should be level and flat.


NOTE: The template can be adjusted for use of non-standard installations such as the installation of the extension pipe kits.

4. Cut the hole for the standard flue pipe from inside the room. Use a 3-1/2" diameter hole saw attached to an electric drill (See Fig. 5). The opening on the inside wall should be slightly higher than the outside opening (approximately 1/2") so that the wall sleeve and the standard flue pipe will slope slightly downward (approximately 3 degrees) after it is installed (See Fig. 6). This will enable the draining of condensed moisture from the standard flue pipe to the outside and prevent rain or snow entering from outside after installation.

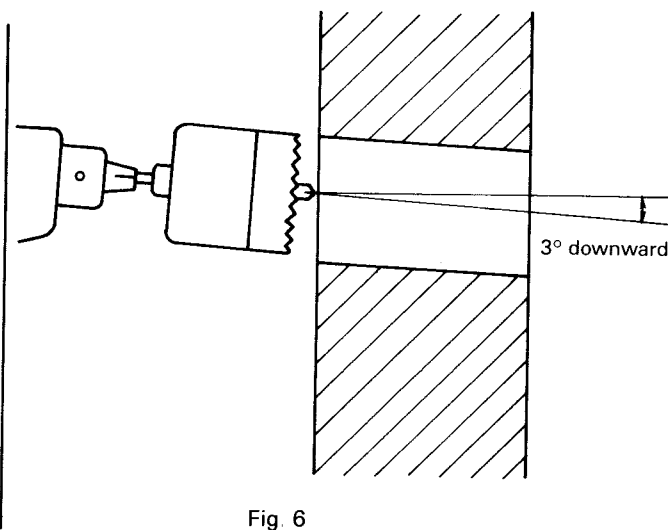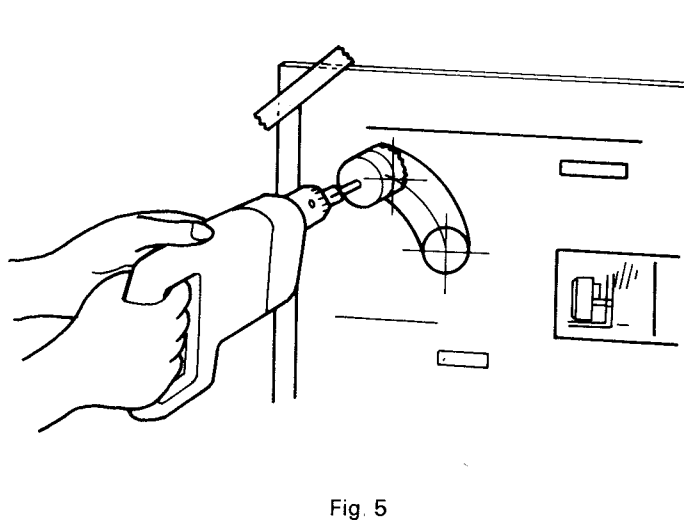


NOTE: After the cutting of the hole is completed, remove the template from the wall.

5. a. Install the inner sleeve flange and the flange gasket to the wall sleeve and insert the wall sleeve through the wall hole from inside the room. Make sure the arrow on the inner sleeve flange is pointing up. Secure the inner sleeve flange to the wall with the three wood screws provided with the heater (See Fig. 7).

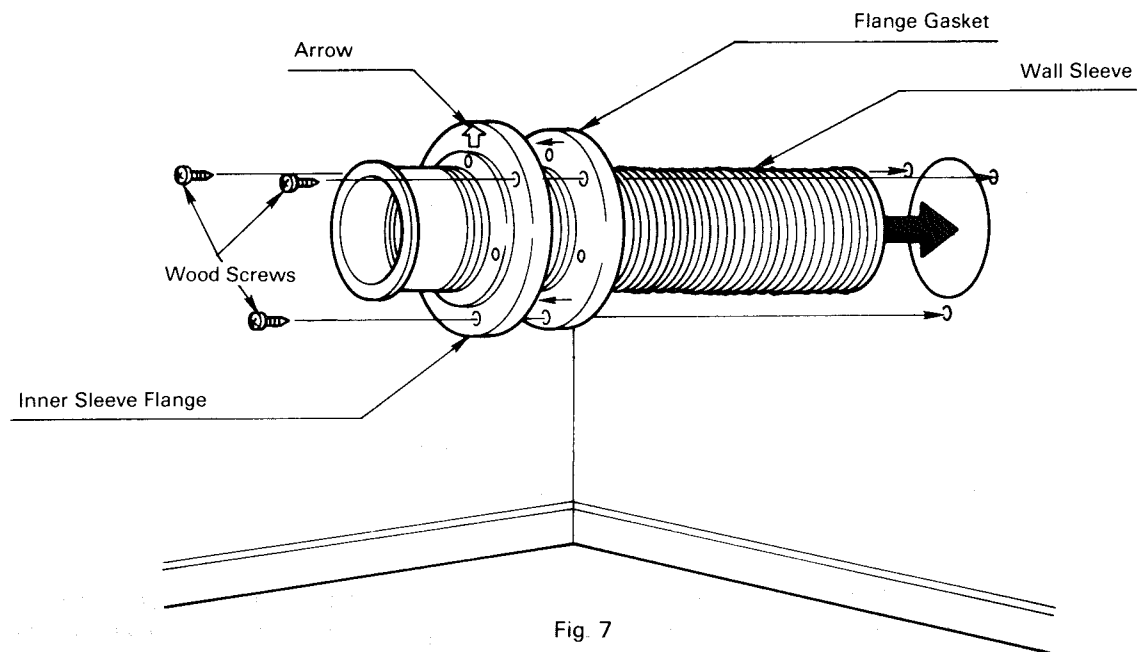

- b. From outside, install the outer sleeve flange and the flange gasket to the wall sleeve. Secure the wall sleeve and the outer sleeve flange tightly with the sleeve nut. Make sure arrow on the outer sleeve flange is pointing up (See Fig. 8).

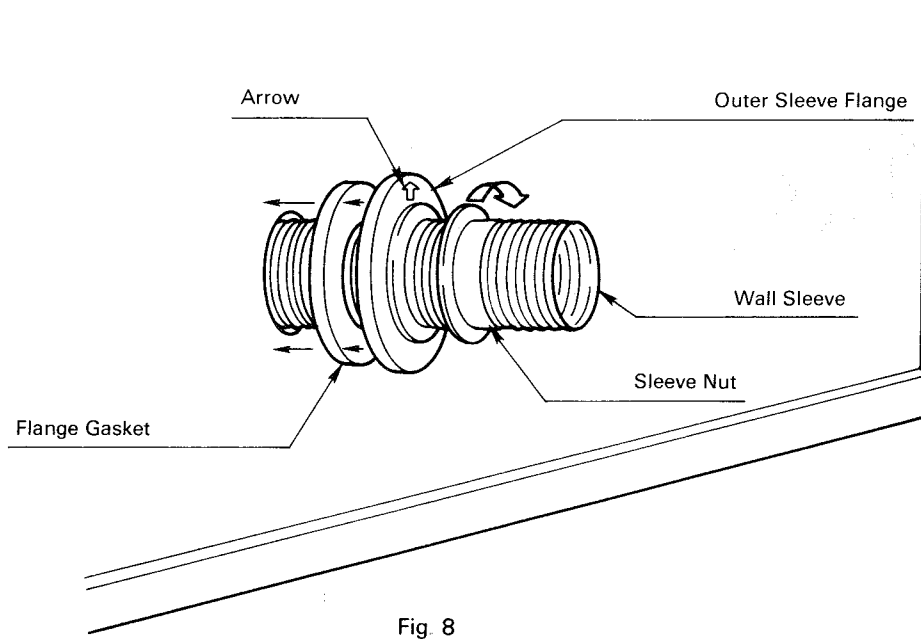



6. From inside the room, insert the standard flue pipe with gasket attached through the wall sleeve. Secure the standard flue pipe to the inner sleeve flange with the three machine screws provided with the heater (See Fig. 9).

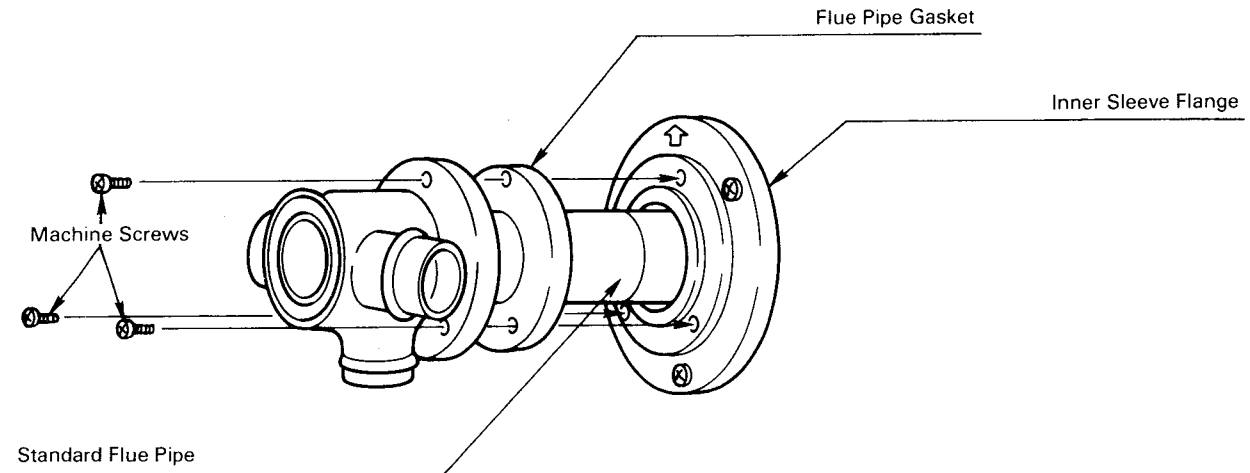


Fig. 9

**NOTE:** Make sure the standard flue pipe slopes slightly downward after it is installed. This will enable the draining of condensed moisture from the standard flue pipe to the outside and prevent rain or snow entering from outside after installation.

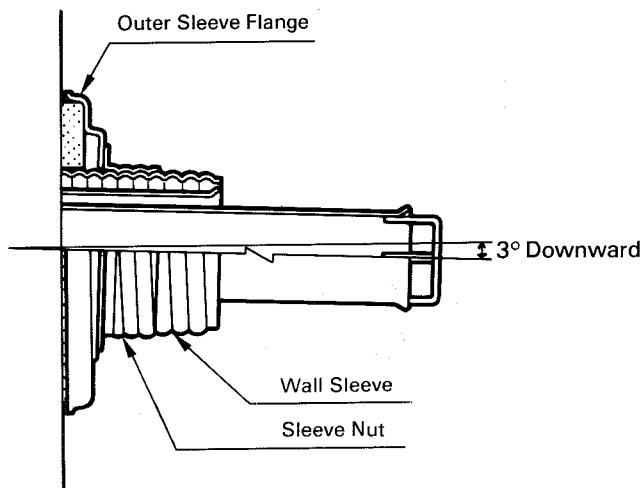


Fig. 10

7. Insert the bent joint to the exhaust mouth of the standard flue pipe. Cut the inlet hose for desired length if necessary. Attach the L-shaped hose to each end of the inlet hose and attach the L-shaped hose to the intake mouth of the standard flue pipe. Secure the L-shaped hose to the intake mouth with the hose band. Plug the unused exhaust and intake mouth with the caps provided with the heater. Make sure the caps fit tightly onto the mouth (See Fig. 11).

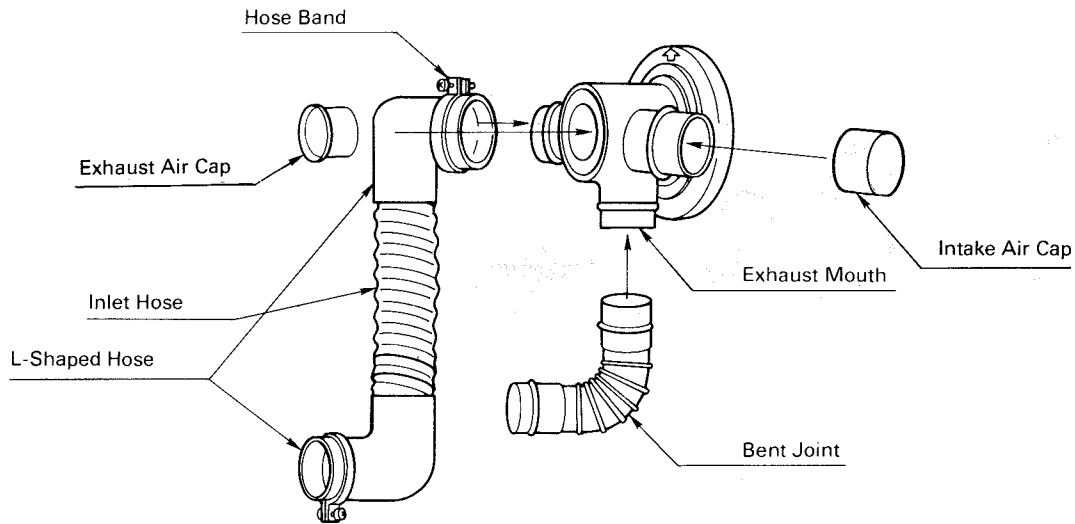


Fig. 11

**NOTE:** If the inlet hose is not smoothly inserted into the L-shaped hose, apply water or soap suds to the inlet hose.

8. Move the heater into position. Connect the bent joint to the exhaust outlet mouth (upper opening) and attach the L-shaped hose to the intake inlet mouth. Make sure all connections are tight (See Fig. 12).

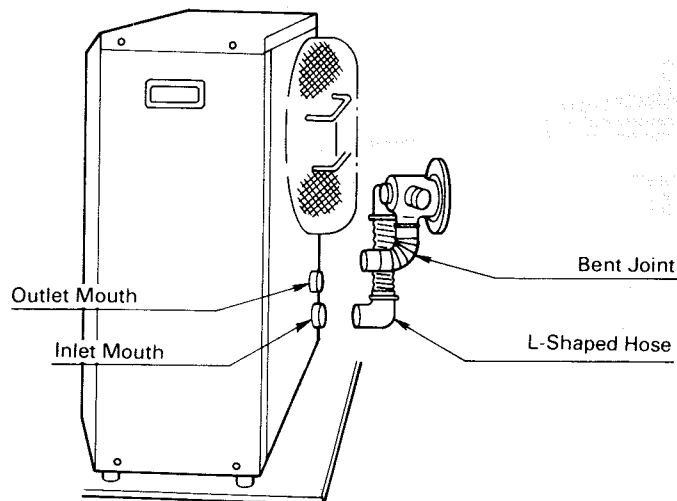


Fig. 12

9. Secure the L-shaped hose to the intake inlet mouth with the hose band. Secure the bent joint to the standard flue pipe with the pipe holder (If the extension pipe is used, also attach the pipe holder to the connection of the bent joint and the extension pipe). Secure the bent joint (or the extension pipe) to the exhaust outlet mouth by sliding the pipe stopper in the exhaust mouth bracket (See Fig. 13).


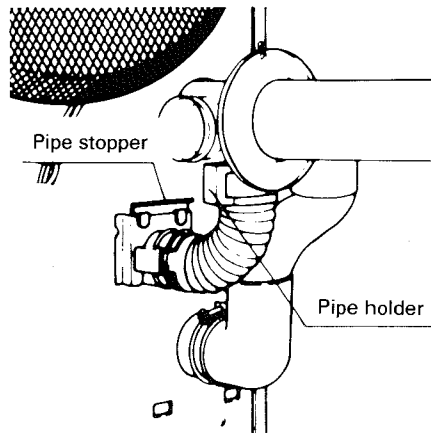


Fig 13

10. Make sure the position of the heater is level by using the plumb bob located at the right side of the heater. The plumb bob weight should be within the red circle. If the plumb bob weight is not within the red circle, adjust the heater legs until the plumb bob weight is within the red circle (See Fig. 14 & 15).

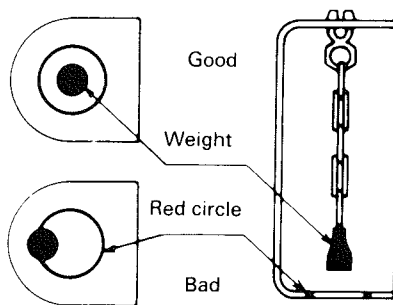

Plumb bob as viewed from above

Fig 14

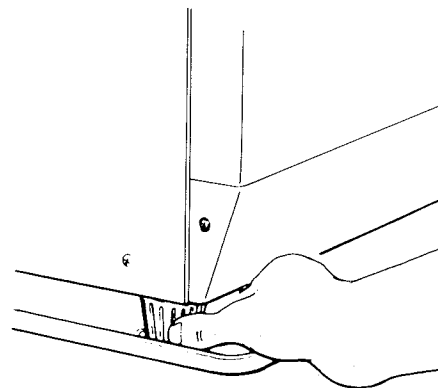



Fig 15

11. A room temperature sensor is provided with approximately 8 feet long extension wire. It is located on the rear of the cabinet. Make sure that the extension wire is not touching the exhaust pipe. The room temperature sensor can be installed either with the self adhesive tape on the back or with a wood screw provided with the sensor depending on the type of surface chosen for installation.

Note: Choose a location for the sensor that is not in the path of direct sunlight, drafts or the flow of warm air from the heater.


(a) Self Adhesive Tape

Peel off the protective tape on the back of the sensor and expose the adhesives. Place the sensor on the desired location on the wall and press down.

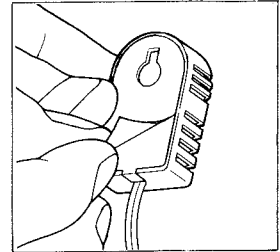

(b) Wood Screw

Screw down the wood screw provided with the heater into the desired location on the wall. Hook the back of the room temperature sensor.

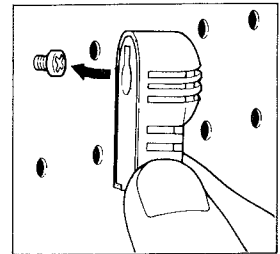

12. After installation is completed, secure heater to the wall with the wall brackets provided with the heater. Make sure the heater is parallel to the wall (See Fig. 16).

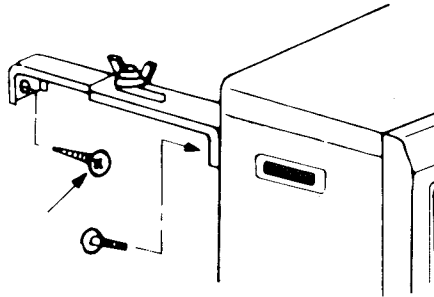



Fig. 16

13. Before ignition, recheck the following:
- All connections are tight and firm.
  - The heater and the standard flue pipe areas are free of any materials.
  - The heater is level and parallel to the wall.
  - The exhaust and the intake holes of the standard flue pipe are fully exposed to outdoor air, but not protruded too far from the wall sleeve.


## PERMANENT WIRING INSTALLATION

**WARNING:** MAKE SURE POWER SUPPLY CORD IS DISCONNECTED TO AVOID ANY ELECTRIC SHOCK BEFORE SERVICING. ELECTRIC SHOCK MAY CAUSE SERIOUS INJURY. INSTALLATION SHOULD BE CONDUCTED BY A LICENCED ELECTICIAN.


Step 1. Disconnect power supply cord from power source. Remove two screws from the front panel at lower edges and lift and remove the front panel.

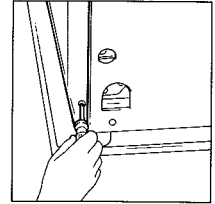


Step 2. Remove four screws from both sides of the top plate and five screws from the back of the top plate and five screws from the front of the top plate. Lift and remove the top plate.

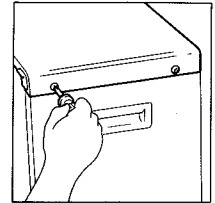


Step 3. Remove screw for ground wire (green wire).

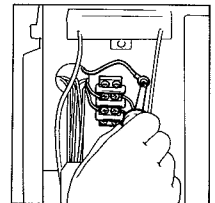


Step 4. Disconnect two power supply wires from left row of the terminal.

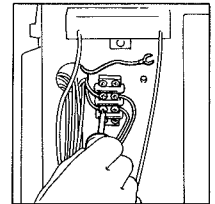


Step 5. Squeeze strain relief with the adjustable pliers to remove plastic bushing from the back panel. Remove the power supply cord.

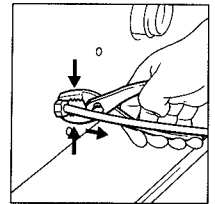

Step 6. Insert the power supply cable from junction box and connect ground wire and power wires to the terminal.

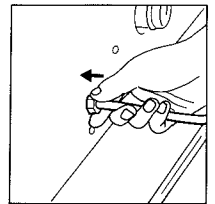

Step 7. Reassemble the top plate and the front panel.

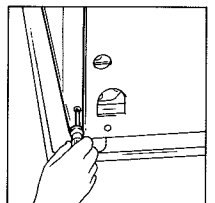

## SECTION J: FUELING

**WARNING:** Use only water-clear No. 1-K kerosene. NEVER USE GASOLINE. Use of gasoline can lead to uncontrollable flames resulting in destructive fire.

### Laser 72 FUEL SYSTEM OPTIONS

#### ● Large Capacity External Tank


Where bulk delivery of kerosene is available, an outdoor or underground fuel tank may be used. Tank must be purchased separately and installed by a qualified fuel supply technician.

### EXTERNAL TANK INSTALLATION

**NOTE:** External tank installation must comply with National Fire Protection Association Code NFPA 31 or locally applicable codes. Check with local building officials.

The following instructions should be followed for installation of a large capacity, gravity-fed external fuel tank.

- Installation height of tank's fuel outlet should be at least 16 in. above floor surface upon which heater rests.
- To avoid excess fuel pressure to heater, top of fuel tank should be no more than 8½ ft. above floor surface upon which heater rests.
- Fuel tank should be located at least 6 ft. away from all heat sources.
- 3/8" OD copper tubing should be used for fuel line.
- To prevent air locks in fuel line, fuel line should be smooth with no U-shaped or sharp bends.
- Use of a fuel filter in fuel line adjacent to tank is recommended. A shut-off valve should also be connected to the tank.

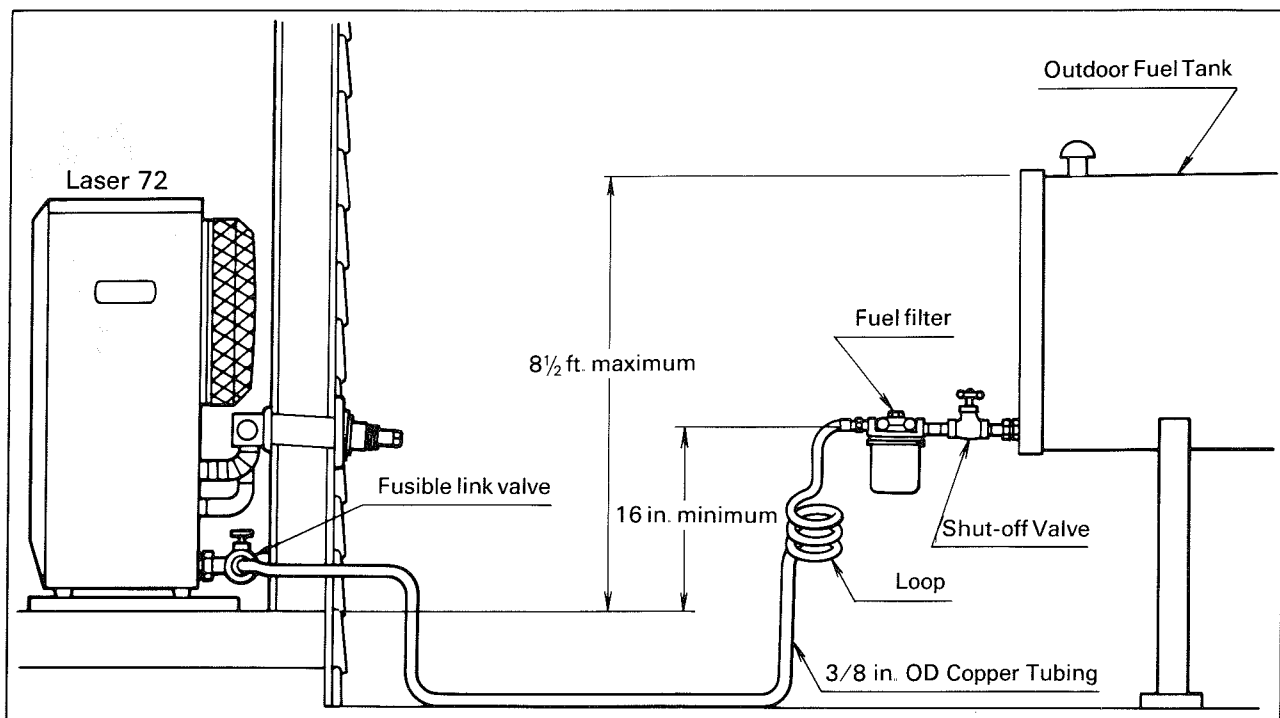

# LIMITED WARRANTY

TOYOTOMI U.S.A., INC. ("TOYOTOMI") warrants each product and any parts thereof sold by it to be free from defects in materials or workmanship under normal use and service for TWELVE (12) MONTHS from the date of delivery to the original purchaser at retail subject to the following terms and conditions:

**WHAT IS COVERED:** Product or any parts thereof which are defective in materials or workmanship

**WHAT IS NOT COVERED:**

(1) This warranty does not extend to any defect due to the negligence of others; failure to install, operate or maintain unit in accordance with installation instructions (operating and maintenance instructions are furnished with each new unit); unreasonable use; accidents; alteration; use of unauthorized or non-standardized Toyotomi parts and accessories; electrical malfunction, i.e., as resulting from power surges, short circuit, etc.; incorrect installation; use of any fuel other than that specified in owners manuals; or repair by anyone other than a service facility specified by Toyotomi

(2) Normal wear and tear of parts, including wicks, batteries, igniter coils and siphons, cutting blades, hoses, cables, burner mats and accessories.

(3) This warranty does not cover shipping costs

**WHO IS COVERED:** The original purchaser at retail

**WHAT WE WILL DO:** TOYOTOMI will either repair or replace, at its option, all defective parts free of charge that are covered by this limited warranty on a carry-in basis, to your nearest authorized dealer or distributor of TOYOTOMI

**WHAT YOU MUST DO FOR WARRANTY SERVICE:** You must return the defective Product or part to any authorized dealer or distributor of TOYOTOMI with this LIMITED WARRANTY and a copy of your bill of sale or credit card charge receipt or other document evidencing the date of the Product's delivery. If service is not available locally, please contact our CUSTOMER RELATIONS DEPARTMENT at:

TOYOTOMI U.S.A., INC.  
604 Federal Road, Brookfield, CT 06804  
(203) 775-1909

THE FOREGOING EXPRESSES ALL OF TOYOTOMI'S OBLIGATIONS AND LIABILITIES WITH RESPECT TO THE QUALITY OF PRODUCT FURNISHED BY IT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. TOYOTOMI SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL ARISING OUT OF THE USE OF, OR INABILITY TO USE, THE PRODUCT OR DAMAGES RESULTING FROM OR ATTRIBUTABLE TO DEFECTS IN THE PRODUCT.

No one other than TOYOTOMI has authority to extend or modify the terms of this Limited Warranty in any manner whatsoever.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**NOTE:** An extended warranty period of 36 months is offered for vented heaters only. This coverage is limited to the combustion assembly, specifically the burner pot, radiant chamber and heat exchanger. The remainder of vented heater is subject to 12 months.

2441002060



**TOYOTOMI U.S.A., INC.**  
P.O. Box 176, Brookfield, CT 06804-0176