


Y9493 - 24/7 Rated Fabric Multi-Function Chair Assembly Instructions

www.modernofficefurniture.com

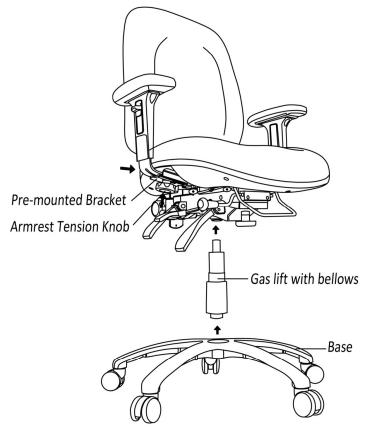

CONTENTS	
Parts	Qty
Backrest	1
Armrests	2
Seat Cushion w/mechanism attached	1
Gas Lift & Bellows	1
Chair Base	1
Armrests Tension Knob	2
Backrest Tension Knob	1
Backrest Stopper	1
Casters	5

- Step 1: Insert the 5 Casters into the Chair Base by hand. Casters will 'pop' once locked in place.
- Step 2 : Insert Gas Lift into Chair Base, then place Telescoping Bellows over the Gas Lift.
- Step 3: Turn the Seat Cushion upside down on a clean surface. Attach the two Armrests by sliding the armrests into the pre-mounted brackets and inserting the two tension knobs.
- Step 4: Insert backrest into slot of mechanism, then insert plastic stopper into hole. Then, insert tension knob.
- Step 5: Hold the upper half of the chair over the lower half, aligning the hole in the mechanism over the top of the gas lift. Insert the top of the gas lift into the hole and press down. Then, carefully sit in the chair to pressure fit them together.



Questions? Call Customer Service at 1-800-443-5117 Monday - Friday 8:30 AM to 5:00 PM Central Time