

#29098 -- 3" CVA Instructions

EDUC LIT CVA300

Grande Skimmer Application:

- Cut a 6.5" length of 3" pipe.
- Glue this into the 3" MPT fitting and Check Valve.

Snorkel

- Since the snorkel does not have 3" hosetails it is recommended that you cut 2' off the snorkel and use the 2' snorkel extension (The snorkel is in 6" sections, The extension is in 12" sections).
- If you use the full 4' height just glue the 24" piece of pipe to the 3" MPT fitting and check valve
- If the snorkel is cut down to the lowest hosetail (Figure 1) the pipe would be cut to 4" (the CVA will be flush with the 3" MPT fitting)
- In the highest possible position (Figure 2 - the snorkel + the extension) a 48" piece of 3" pipe will have to be cut
- For every section you cut off the snorkel, reduce the standpipe by 6"
- You should dry fit the piece before gluing it in place.

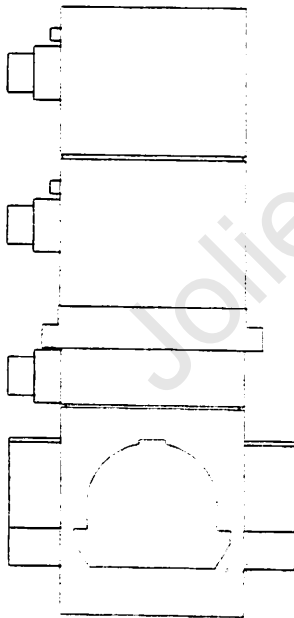


Figure 1 - Snorkel Extension in lowest position

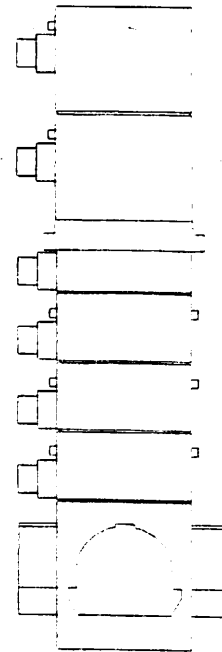


Figure 2 - Snorkel Extension in Uppermost position