


Aquascape®

IONGEN PROBE HOLDER


(ITEM #95077)

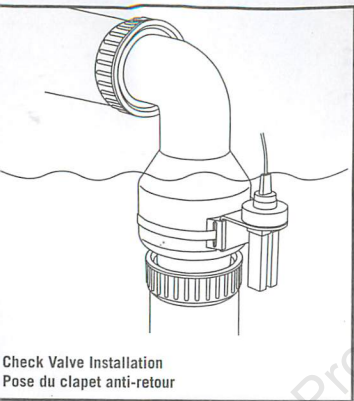

Check Valve Installation
Pose du clapet anti-retour

1. Position the probe holder bracket in the desired location on check valve or plumbing
2. Pull the buckle securely fastening the probe holder in place
3. Trim away remaining or excess strap if necessary
4. Position the IONGEN Probe into the probe holder

Please note: The IONGEN Probe must be fully submerged in water at all times to function properly (see diagram)

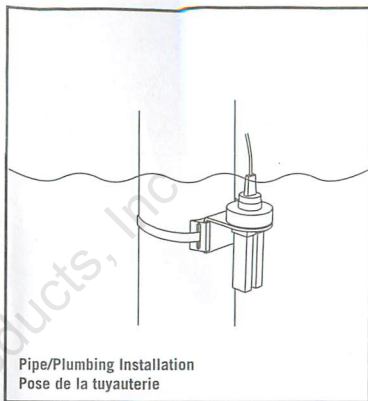

Pipe/Plumbing Installation
Pose de la tuyauterie

1. Placer le porte-sonde à l'endroit voulu sur le clapet anti-retour ou la tuyauterie
2. Tirer la boucle pour attacher solidement le porte-sonde en place.
3. Au besoin, couper la longueur de collier restante ou en trop
4. Placer la sonde IONGEN dans le porte-sonde

À noter : La sonde IONGEN doit être en permanence complètement immergée dans l'eau pour fonctionner correctement (voir le schéma)

Jolie Products, Inc