




Slash 4X4 / Stampede 4X4 Voltage Sensor Installation

Covers Part Number(s):
6541, 6521

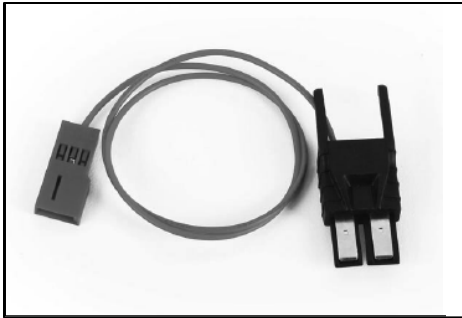

Tools Needed:

- 2.0mm hex wrench


Required:

- Temp loop 6521
- Power tap 6541

Installation Steps:

1. Using a 2.0mm hex wrench, remove wire cover and upper receiver box cover (A).
2. Route the red female plug from temp sensor (6521) out of receiver box (required for installation).
3. Plug the red female voltage sensor connector into the male temperature connector (B).
4. Reinstall wire cover and upper receiver box cover (add grease to foam pads on receiver box to ensure watertight seal).
5. Connect voltage sensor to battery cable (C).
6. Secure voltage sensor wire to the positive (red) battery cable with wire tie (included)(D). Cut off excess wire tie.

Vehicle pictured is a Slash 4X4. Your model may vary slightly.

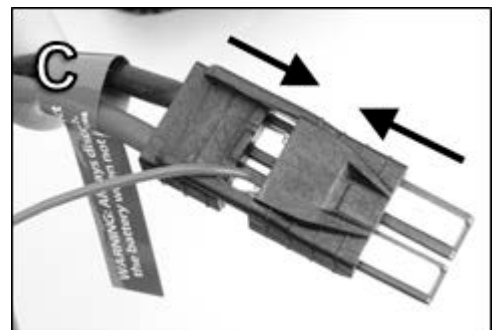

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM