



## INSTALLATION INSTRUCTIONS FOR PART 88-00-9000

### APPLICATIONS

See application list inside

## 88-00-9000

## AW-900PKUV, CF-900PKUV, IBR-900PKUV


### KIT FEATURES

- Pocket provision for ISO DIN radio installations
- Holds (3) CD jewel cases



### KIT COMPONENTS

- A) Face plate #1 • B) Face plate #2 • C) Face plate #3 • D) Pocket • E) Brackets set #1
- F) Brackets set #2 • G) (4) #8 x 1/4" Phillips screws • H) (6) #6 x 1/4" Phillips flat head screws

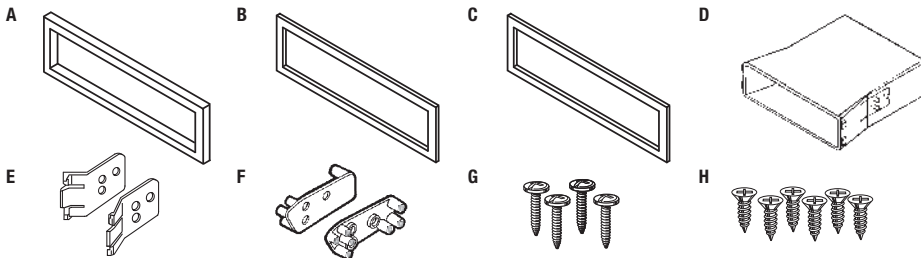

### WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness:

- Not applicable

Antenna Adapter:

- Not applicable

### TOOLS REQUIRED

- Cutting tool • Phillips screwdriver

**CAUTION:** Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

**NOTE:** Refer to the instructions included with the aftermarket radio.

## Applications

**Note:** For universal pocket installations into a standard size DIN opening refer to the Ford/Mazda/Mercury installation instructions.

### Ford

Mustang ..... 1994-2000

### Infiniti

G20 ..... 1999-2002

G20 ..... 1991-1996

J30 ..... 1993-1997

M30 ..... 1990-1992

Q45 ..... 1990-2001

### Lexus

ES250 ..... 1990-1991

### Mazda

626 ..... 1993-2000

929 ..... 1992-1995

MX3 ..... 1992-1996

MX6 ..... 1993-1997

Protege ..... 1995-2000

RX-7 ..... 1993-1995

### Nissan

\*All models equipped  
with stack systems except  
the Quest.

### Saab

9-5 ..... 1999-2009

9-3 ..... 1999-2002

### Toyota

4-Runner ..... 1984-2002

Avalon ..... 1995-1999

Camry ..... 1983-2001

Celica ..... 1982-1999

Corolla ..... 1984-1997

Cressida ..... 1981-1992

Landcruiser ..... 1988-2002

MR2 ..... 1985-1995

Paseo ..... 1992-1997

Pickup ..... 1984-1995

Previa ..... 1991-1997

Rav 4 ..... 1996-2000

Sequoia ..... 2001-2002

Sienna ..... 1996-2003

Solara ..... 1999-2003

Supra ..... 1983-1998

Supra ..... 1994-1998

T100 ..... 1993-1998

### Toyota (continued)

Tacoma ..... 1995-2004

Tercel ..... 1983-1998

Tundra ..... 2000-2002

Van ..... 1984-1990

### Volvo

850 ..... 1993-1997

940/960 ..... 1995-1997

C70 ..... 1998-2004

S40 ..... 2000-2004

S70 ..... 1998-2000

S90/V90 ..... 1997-1998

V40 ..... 2000-2004

V70 ..... 1998-2000

## Ford/Mazda


1. Snap face plate #1 onto the front of the pocket.

Locate Bracket Set #1 and mount the "L" Bracket to the "L" side of the pocket with (3) #6 x 1/4" Phillips flat head screws and the "R" bracket to the "R" side of the pocket with (3) #6 x 1/4" Phillips flat head screws.  
(Figure A)


**Caution: DO NOT OVER TIGHTEN SCREWS.**

2. Slide the pocket assembly into the dash opening until the side clips engage. (Figure B)

*Continue to kit assembly*

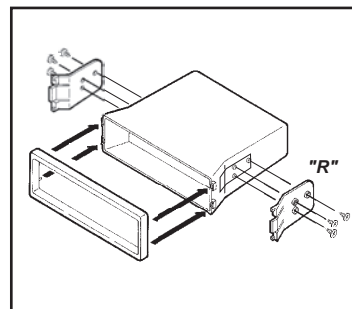

(Figure A)

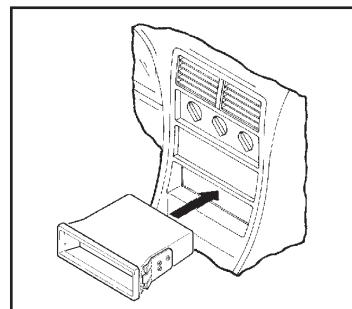

(Figure B)


## Nissan/Infiniti

1. Snap face plate #3 onto the front of the pocket.


Locate bracket set #2 and mount the "L" bracket to the "L" side of the pocket with (3) #6 x 1/4" Phillips flat head screws and the "R" bracket to the "R" side of the pocket with (3) #6 x 1/4" Phillips flat head screws. (Figure A)

**Caution: DO NOT OVER TIGHTEN SCREWS.**

2. Mount the factory brackets to the shaded bosses (Figure A) with (4) #8 x 1/4" Phillips screws supplied and mount the entire assembly to the sub-dash. (Figure B)

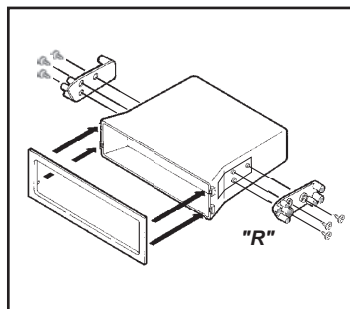

(Figure A)

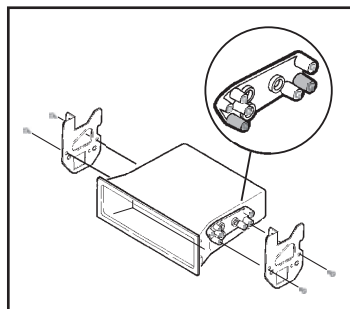

(Figure B)


## Toyota/Lexus

1. Snap face plate #2 onto the front of the pocket.


Locate bracket set #2 and mount the "L" bracket to the "L" side of the pocket with (3) #6 x 1/4" Phillips flat head screws and the "R" bracket to the "R" side of the pocket with (3) #6 x 1/4" Phillips flat head screws. (Figure A)

**Caution: DO NOT OVER TIGHTEN SCREWS.**

2. Mount the pocket assembly to the factory brackets with (4) #8 x 1/4" Phillips screws supplied and mount the entire assembly to the sub-dash. (Figure B)

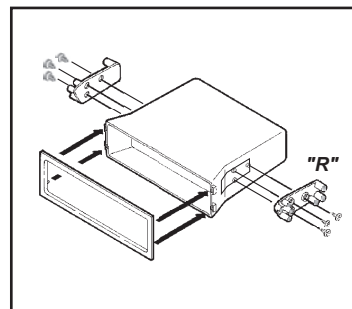

(Figure A)

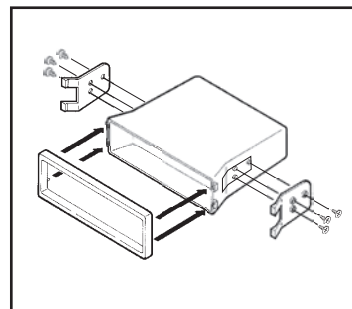

(Figure B)

Volvo/Saab info on back page



## INSTALLATION INSTRUCTIONS FOR PART 88-00-9000




### Volvo/Saab


1. Cut and remove the shaded portions of Bracket Set #1. (Figure A)
2. Snap Face Plate #1 onto the front of the Pocket. Mount the "L" Bracket to the "L" side of the Pocket with (3) #6 x 1/4" Phillips Flat Head Screws and the "R" Bracket to the "R" side of the Pocket with (3) #6 x 1/4" Phillips Flat Head Screws. (Figure B)

**Caution: DO NOT OVER TIGHTEN SCREWS.**


3. Slide the pocket assembly into the dash opening until the side clips engage. (Figure C)

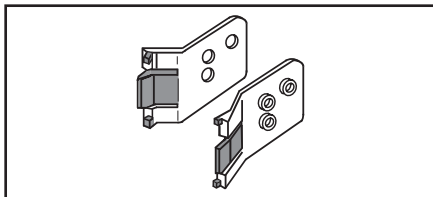

(Figure A)

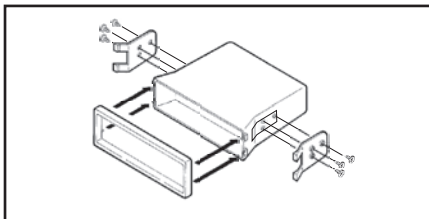

(Figure B)

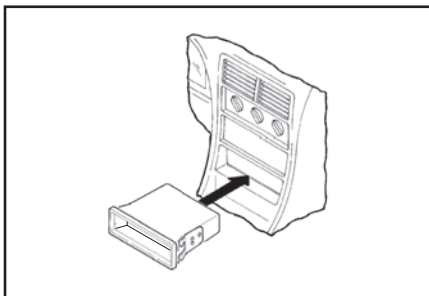

(Figure C)



#### KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP  
certified technicians**