



INSTALLATION INSTRUCTIONS FOR PART 98-8999

Mitsubishi/Subaru/Volkswagen 98-8999


KIT FEATURES

- Holds (3) CD jewel cases



KIT COMPONENTS

- A) VW pocket trim plate • B) Subaru pocket trim plate • C) Mitsubishi trim plate
- D) Pocket • E) (2) VW brackets • F) (2) Left brackets • G) (2) Right brackets
- H) (4) #8 x 1/4" Phillips pan head screws • I) (6) #6 x 1/4" Phillips flat head screws

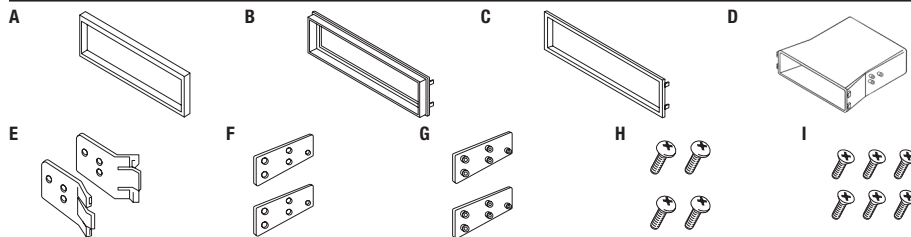

TOOLS REQUIRED

- Phillips screwdriver

APPLICATIONS

Mitsubishi

3000 GT	1991-1999
Diamante	1997-2004
Eclipse	1995-2005
Galant	1994-1998
Mirage	1997-2002
Montero	1997-2006
Montero Sport	2000-2004

Subaru

Baja	2003-2006
Forester	1998-2008
Impreza	1993-2007
Legacy	1995-2004
Outback	2000-2004

Volkswagen


Golf	1998-2006
Jetta (before redesign)	2005
Jetta	1998-2004
Passat	2000-2005

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

Mitsubishi

1. Snap pocket trimplate MIT onto the front of the pocket. Locate one of the left brackets and mount it to the "L" side of the pocket with (2) #6 x 1/4" Phillips flat head screws. (Figure A)
2. Next locate one of the right brackets and mount it to the "R" side of the pocket with (2) #6 x 1/4" Phillips flat head screws. (Figure A)
3. Mount the factory brackets to the shaded bosses (see B2) with (4) #8 x 1/4" Phillips pan head screws supplied and mount the entire assembly to the sub-dash. (Figure B)

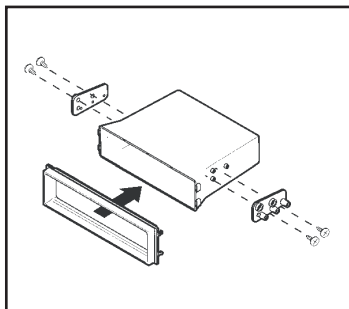


(Figure A)

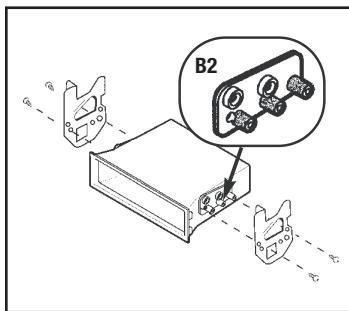


(Figure B)

Subaru

1. Snap pocket trimplate SUB onto the front of the pocket. Locate one of the left brackets and mount it to the "L" side of the pocket with (2) #6 x 1/4" Phillips flat head screws. (Figure A)
2. Next locate one of the right brackets and mount it to the "R" side of the pocket with (2) #6 x 1/4" Phillips flat head screws. (Figure A)
3. Mount the factory brackets to the shaded bosses (see B2) with (4) #8 x 1/4" Phillips pan head screws supplied and mount the entire assembly to the sub-dash. (Figure B)

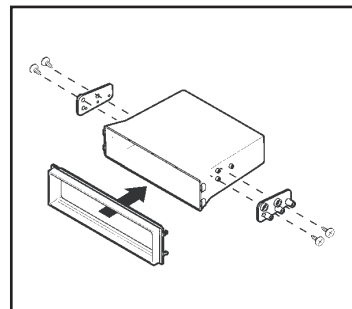

(Figure A)

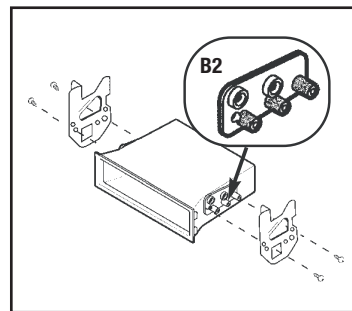


(Figure B)


Volkswagen

Notes

1. Snap pocket trimplate VW (labeled TP-9008) onto the front of the pocket. Locate the X-5599L bracket and mount it to the “L” side of the pocket with (3) #6 x 1/4” Phillips flat head screws. (Figure A)
2. Next locate the X-5599R bracket and mount it to the “R” side of the pocket with (3) #6 x 1/4” Phillips flat head screws. (Figure A)
3. Pull out on the plastic tray separating the dash cavity and remove the tray (“A”). Position the pocket so each bracket is configured with (2) screws on the top and (1) screw on bottom (“B”). Slide the pocket into the dash opening until the side clips engage. (Figure B)

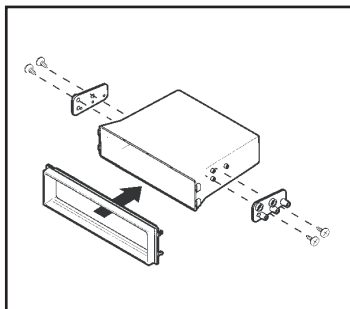

(Figure A)

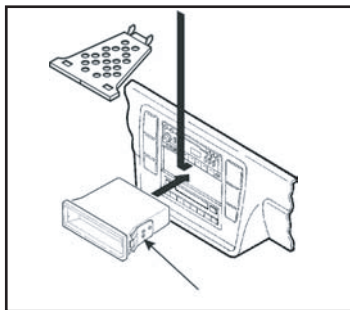

(Figure B)

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.



INSTALLATION INSTRUCTIONS FOR PART 98-8999



REV. 7/11/2013 INST98-8999



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**