



INSTALLATION INSTRUCTIONS FOR PART 99-3014G

Chevrolet Silverado 1500/GMC Sierra 1500 2014-up Chevrolet Silverado 2500/3500 2015-up GMC Sierra 2500/3500 2015-up 99-3014G


KIT FEATURES

- ISO DIN radio provision with pocket
- Double DIN radio provision
- *Painted gunmetal gray*



KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (8) #8 x 3/8" truss-head Phillips screws

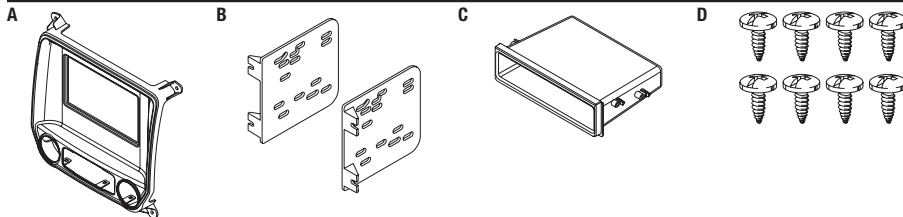

WIRING & ANTENNA CONNECTIONS (sold separately)

- Wiring Harness: • GMOS-LAN-09 • GMOS-MOST-01 • LC-GMRC-LAN-09 • AX-LCD
Antenna Adapter: • 40-EU55

Table of Contents

Dash Disassembly	2
Kit Assembly	
– ISO DIN radio provision with pocket.....	3
– Double DIN radio provision	4

TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
• Socket wrench • Cutting tools (like a Dremel)

CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.


NOTE: Refer to the instructions included with the aftermarket radio.

Dash Disassembly


1. Unclip and remove the trim panel surrounding the radio/climate control panel. (Figure A)
2. Remove (4) 9/32" screws securing the radio/climate control panel. (Figure B)
3. Unclip and remove the factory climate controls
4. Remove (2) 9/32" screws securing the CD player then unplug and remove the player. (Figure C)
5. Unclip and slide out the Onstar module and the tuner box then unplug and remove them.

Note: The Onstar module will need to be returned to the sub dash in a lower position from factory. (Figure C)


Continue to kit assembly

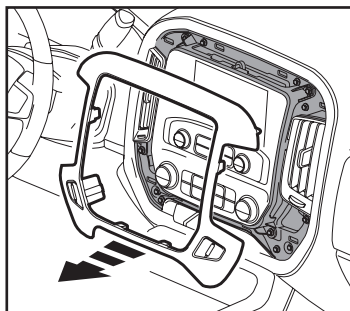

(Figure A)

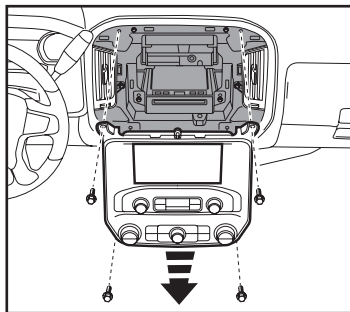

(Figure B)

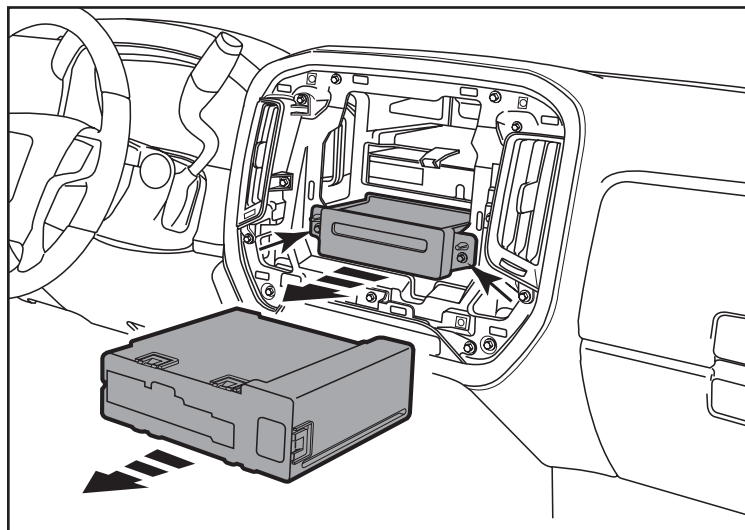


(Figure C)


Kit Assembly

1. Cut and remove the specified areas in the sub dash.
(Figures A, B)

Continued on next page

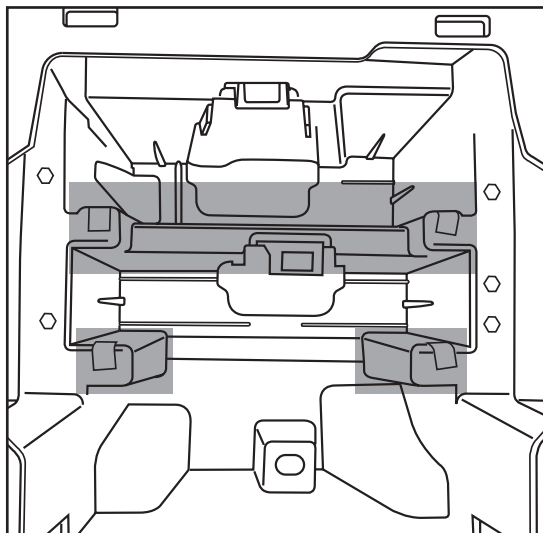

(Figure A)

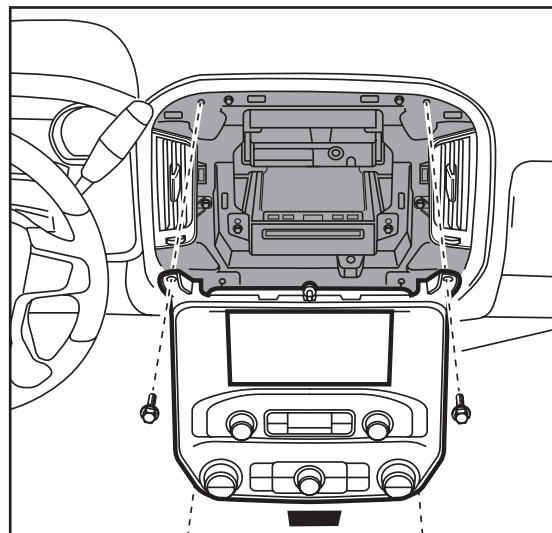


(Figure B)


Kit Assembly

ISO DIN radio provision


1. Mount the pocket to the radio brackets with the (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Mount the bracket/pocket assembly to the radio trim panel with the (4) #8 x 3/8" Phillips screws supplied. (Figure B)
3. Slide the radio into radio brackets and secure with screws supplied with the radio. (Figure C)
4. Clip factory climate controls into the radio trim panel
5. Locate the factory wiring harness and antenna plug in the dash. Metra recommends using the proper mating adapters from Metra and/or AXXESS.
6. Reassemble the dash in reverse order of disassembly.

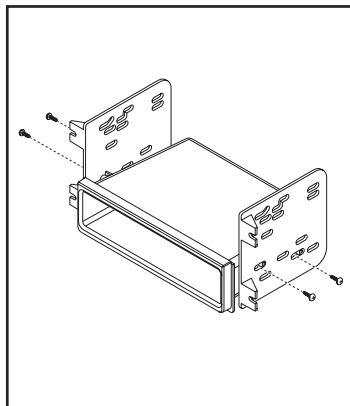

(Figure A)

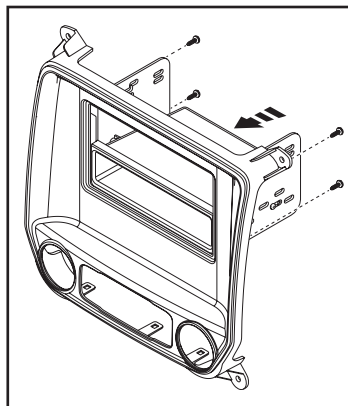

(Figure B)

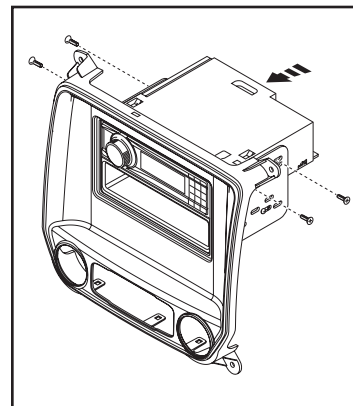


(Figure C)


Kit Assembly

Double DIN radio provision

1. Attach the brackets to the radio trim panel using the (4) #8 x 3/8" screws supplied. (Figure A)
2. Slide the radio into the bracket/radio housing assembly and secure to the assembly using the screws supplied with the radio. (Figure B)
3. Clip factory climate controls into the radio trim panel
4. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.
5. Reassemble the dash in reverse order of disassembly.

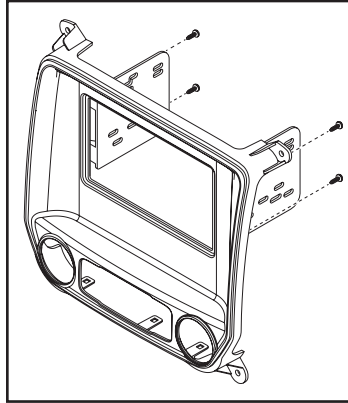

(Figure A)

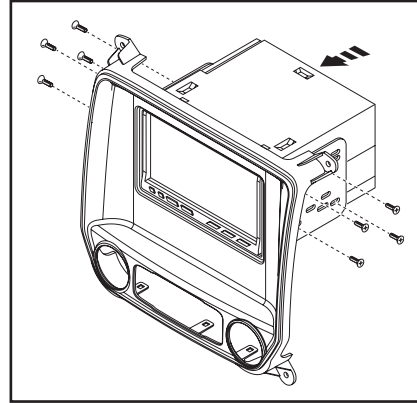

(Figure B)

[illegible]

[illegible]



INSTALLATION INSTRUCTIONS FOR PART 99-3014G



REV. 4/23/2015 INST99-3014G



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**



INSTRUCCIONES DE INSTALACIÓN PARA LA PIEZA 99-3014G

Chevrolet Silverado 1500/GMC Sierra 1500 2014 y mas Chevrolet Silverado 2500/3500 2015 y mas GMC Sierra 2500/3500 2015 y mas 99-3014G


CARACTERÍSTICAS DEL KIT

- Provisión de radio ISO DIN con cavidad
- Provisión de radio doble DIN
- Pintura en gris bronce de cañón



COMPONENTES DEL KIT

- A) Panel de moldura para radio • B) Soportes para radio • C) Cavidad • D) (8) Tornillos Phillips de cabeza segmentada #8 x 3/8"

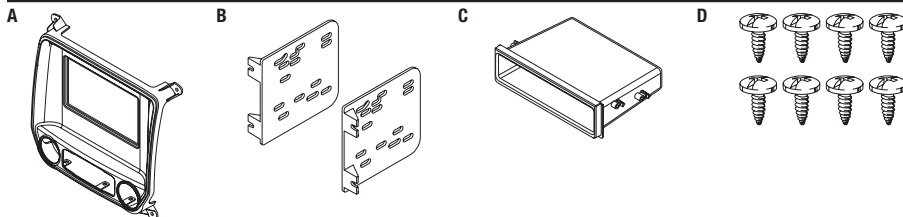

CABLEADO Y CONEXIONES DE ANTENA (se venden por separado)

Arnés de cables: • GMOS-LAN-09 • GMOS-MOST-01 • LC-GMRC-LAN-09 • AX-LCD

Adaptador de antena: • 40-EU55

Indice

Desmontaje del tablero	2
Ensamble del kit	
– Provisión de radio ISO DIN con cavidad	3
– Provisión de radio doble DIN.....	4

HERRAMIENTAS REQUERIDAS

- Herramienta para quitar paneles
- Destornillador Phillips • Llave de tubo
- Herramientas de corte (como un Dremel)

PRECAUCIÓN: Metra recomienda desconectar el terminal negativo de la batería antes de comenzar cualquier instalación. Todos los accesorios, interruptores y, especialmente, las luces indicadoras de airbag deben estar enchufados antes de volver a conectar la batería o comenzar el ciclo de ignición.


Nota: Remítase a las instrucciones incluidas con el radio de posventa.

Desmontaje del tablero


1. Desenganche y quite el panel de moldura que rodea el panel del radio/control del clima. (Figura A)
2. Quite los (4) tornillos de 9/32" que sujetan el radio/panel de control del clima. (Figura B)
3. Desenganche y quite los controles del clima de fábrica.
4. Quite los (2) tornillos de 9/32" que sujetan el reproductor de CD y luego desconecte y quite el reproductor. (Figura C)
5. Desenganche y deslice hacia fuera el módulo Onstar y la caja sintonizadora, luego desconecte y retirelos.

Nota: El módulo Onstar deberá ser devuelto al sub tablero en una posición más baja que la de fábrica.


Continúe kit de montaje

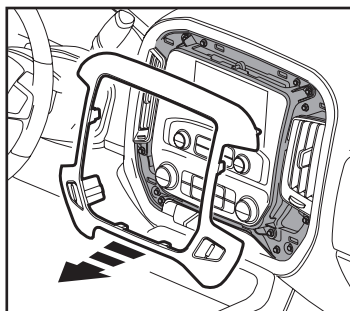

(Figura A)

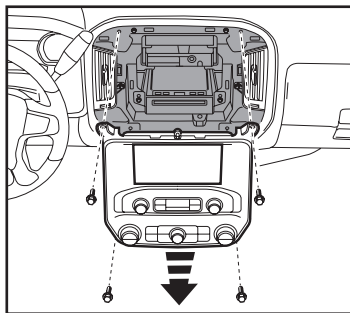

(Figura B)

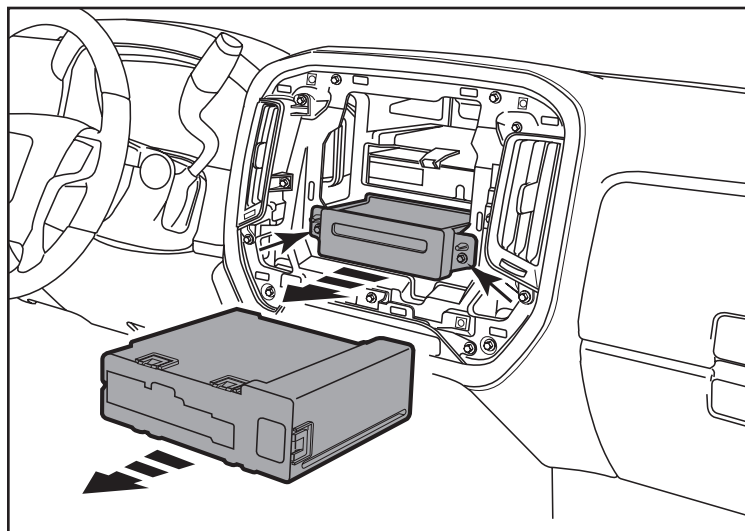


(Figura C)


Ensamble del kit

1. Corte y quite las áreas especificadas en el sub tablero.
(Figura A, B)

Continúa en la página siguiente

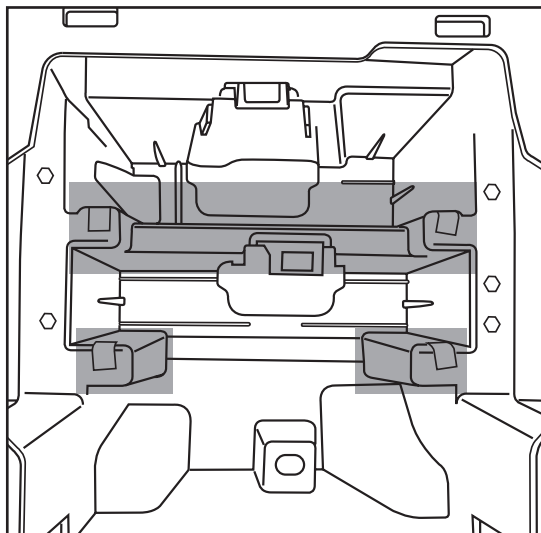

(Figura A)

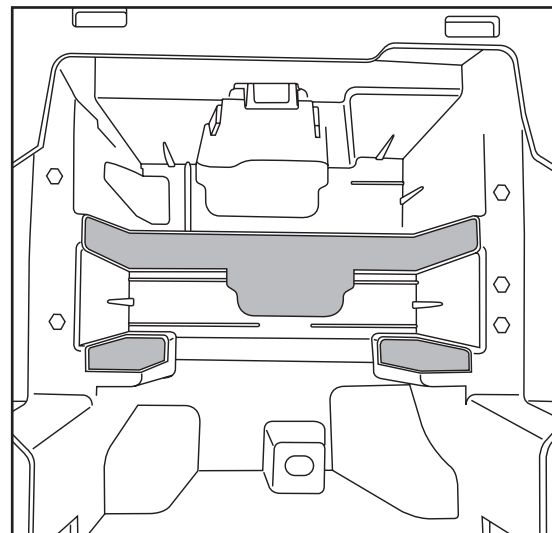


(Figura B)


Ensamble del kit

Provisión de radio ISO DIN


1. Monte la cavidad en los soportes del radio con los (4) tornillos Phillips #8 de 3/8" suministrados. (Figura A)
2. Monte el ensamble del soporte/la cavidad en panel de la moldura de radio con los (4) #8 x 3/8" tornillos Phillips suministrado. (Figura B)
3. Deslice el radio en los soportes del radio y sujételo con los tornillos suministrados con el radio. (Figura C)
4. Enganche los controles del clima de fábrica en el panel de la moldura del radio.
5. Ubique el arnés de cableado de fábrica y el conector de la antena en el tablero. Metra recomienda el uso de adaptadores adecuados de acoplamiento de Metra y/o de AXXESS.
6. Vuelva a armar el tablero al revés de como lo desarmó.

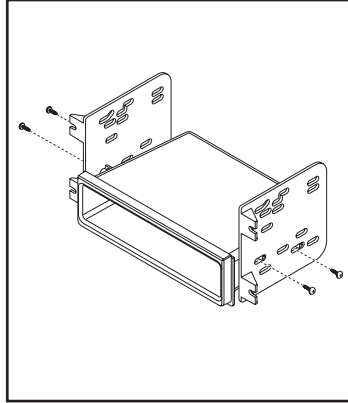

(Figura A)

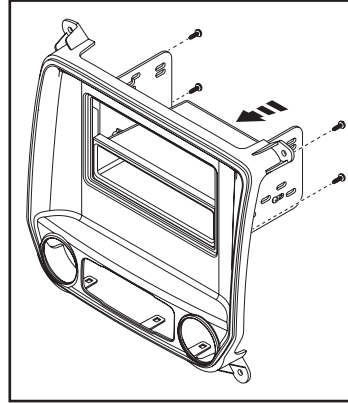

(Figura B)

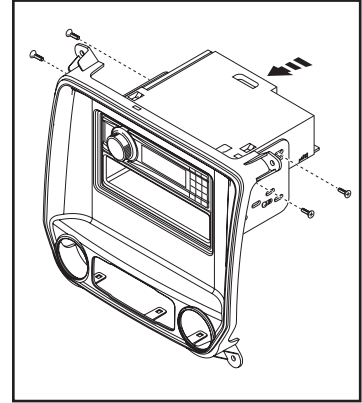


(Figura C)


Ensamble del kit

Provisión de radio doble DIN

1. Coloque los soportes en el panel de la moldura del radio con los (4) tornillos suministrados #8 x 3/8". (Figura A)
2. Deslice el radio dentro del ensamble del soporte/radio y sujételo al ensamble con los tornillos suministrados con el radio. (Figura B)
3. Enganche los controles del clima de fábrica en el panel de la moldura del radio.
4. Localice el arnés de cables de fábrica en el tablero. Metra recomienda el uso de un adaptador adecuado de acoplamiento de Metra o de AXXESS. Vuelva a conectar la terminal negativa de la batería y pruebe la unidad para verificar que funcione correctamente.
5. Vuelva a armar el tablero al revés de como lo desarmó.

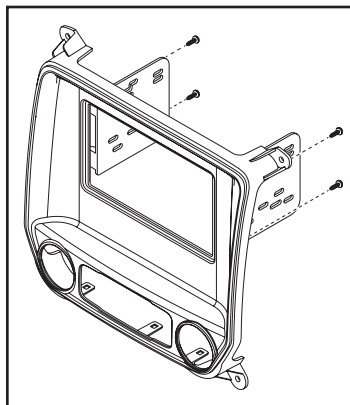

(Figura A)

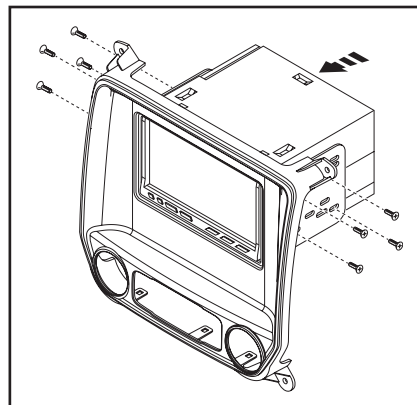

(Figura B)



Week	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
1							
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15							
16							
17							
18							
19							
20							
21							
22							
23							
24							
25							
26							
27							
28							
29							
30							
31							
32							
33							
34							
35							
36							
37							
38							
39							
40							
41							
42							
43							
44							
45							
46							
47							
48							
49							
50							
51							
52							
53							
54							
55							
56							
57							
58							
59							
60							
61							
62							
63							
64							
65							
66							
67							
68							
69							
70							
71							
72							
73							
74							
75							
76							
77							
78							
79							
80							
81							
82							
83							
84							
85							
86							
87							
88							
89							
90							
91							
92							
93							
94							
95							
96							
97							
98							
99							
100							

[illegible]



INSTRUCCIONES DE INSTALACIÓN PARA LA PIEZA 99-3014G



REV. 4/23/2015 INST99-3014G



EL CONOCIMIENTO ES PODER

Mejore sus habilidades de instalación y fabricación inscribiéndose en la escuela de dispositivos electrónicos móviles más reconocida y respetada de nuestra industria. Regístrese en www.installerinstitute.com o llame al 800-354-6782 para obtener más información y avance hacia un futuro mejor.



Metra recomienda técnicos con certificación del Programa de Certificación en Electrónica Móvil (Mobile Electronics Certification Program, MECP).