



Installation instructions for part 99-7365B

Kia Sedona 2015-up 99-7365B


KIT FEATURES

- ISO DIN radio provision with pocket
- **Painted matte black**



KIT COMPONENTS

- A) Radio trim panel • B) Brackets • C) Pocket • D) (4) #8 x 3/8" Phillips screws

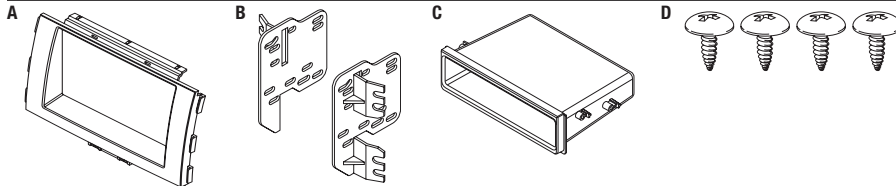

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-7304

Antenna Adapter: • Not required

Table of Contents

Dash Disassembly

- Kia Sedona 2015-up 2

Kit Assembly

- ISO DIN radio provision with pocket..... 3

TOOLS REQUIRED

- Phillips screwdriver • Panel removal tool


CAUTION: Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

NOTE: Refer to the instructions included with the aftermarket radio.


Dash Disassembly

1. Unclip the trim flap on the top of the steering column. (Figure A)
2. Unclip and remove the bezel surrounding the radio and instrument cluster. (Figure B)
3. Remove (4) screws securing the radio, unplug the radio from the factory radio and antenna connectors. (Figure C)


Continue to kit assembly

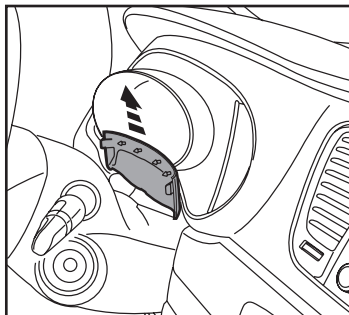

(Figure A)

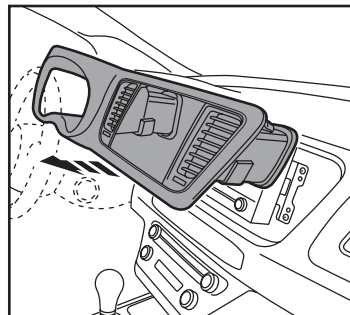

(Figure B)

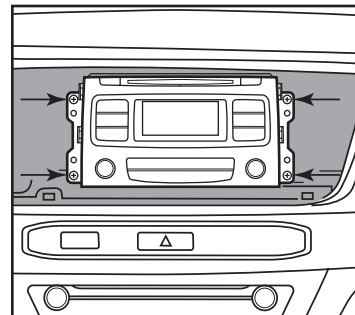


(Figure C)


Kit Assembly

ISO DIN radio provision with pocket

1. Mount the pocket to the radio brackets with the four of the #8 x 3/8" Phillips screws supplied. (Figure A)
2. Remove the metal "DIN" sleeve and trim ring from the aftermarket radio.
3. Mount the bracket/pocket assembly to the radio with the screws supplied with the radio. (Figure B)

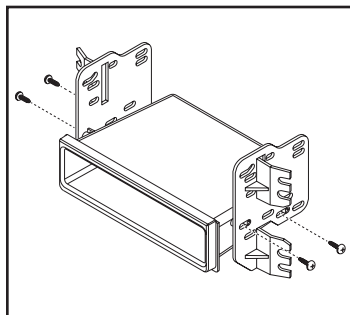


(Figure A)

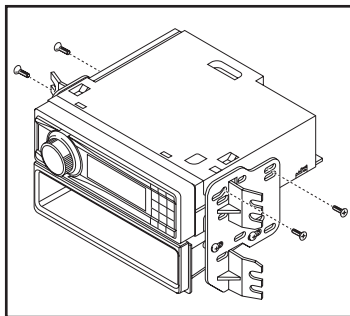

(Figure B)

4. Snap the radio housing trim panel into the factory trim bezel from the back side of the bezel. (Figure C)
5. Locate the factory wiring harness and antenna plug in the dash and make all necessary connections to the new radio. Metra recommends using the proper mating adapters from Metra and/or AXCESS.
6. After connecting all wiring, mount the new radio assembly into the dash with the factory screws and reassemble the dash in reverse order of disassembly.

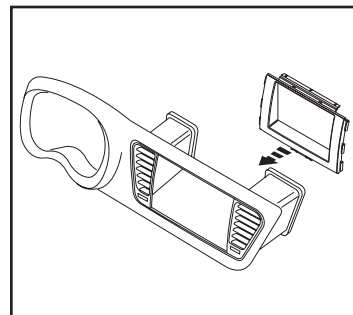

(Figure C)



Installation instructions for part 99-7365B



REV. 5/21/2015 INST99-7365B



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**

METRA. The World's best kits.™

1-800-221-0932

metraonline.com

© COPYRIGHT 2015 METRA ELECTRONICS CORPORATION



INSTRUCCIONES DE INSTALACIÓN PARA LA PIEZA 99-7365B

Kia Sedona 2015 y mas 99-7365B


CARACTERÍSTICAS DEL KIT

- Provisión de radio ISO DIN con cavidad
- **Pintura negro mate**



COMPONENTES DEL KIT

- A) Panel de moldura para radio • B) Soportes • C) Cavidad • D) (4) tornillos Phillips #8 de 3/8"

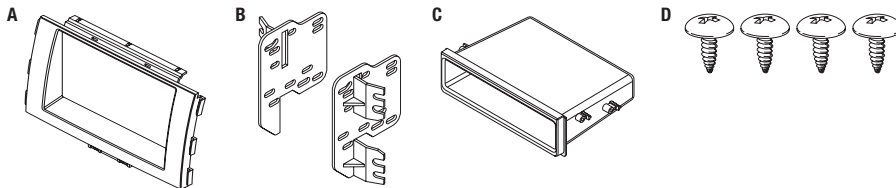

CABLEADO Y CONEXIONES DE ANTENA (se venden por separado)

- Arnés de cables: • 70-7304
Adaptador de antena: • No se requiere

Índice

Desmontaje del tablero

- Kia Sedona 2015 y mas 2

Ensamble del kit

- Provisión de radio ISO DIN con cavidad..... 3

HERRAMIENTAS REQUERIDAS

- Herramienta para quitar paneles
- Destornillador Phillips


PRECAUCIÓN: Metra recomienda desconectar el terminal negativo de la batería antes de comenzar cualquier instalación. Todos los accesorios, interruptores y, especialmente, las luces indicadoras de airbag deben estar enchufados antes de volver a conectar la batería o comenzar el ciclo de ignición.

Nota: Remítase a las instrucciones incluidas con el radio de posventa.


Desmontaje del tablero

1. Desenganche las pestañas de la moldura de la parte superior de la columna de dirección. (Figura A)
2. Desenganche y quite la moldura que rodea el radio y el conjunto de instrumentos. (Figura B)
3. Retire los (4) tornillos que sujetan el radio, desconecte el radio de los conectores de la antena y el radio de fábrica. (Figura C)


Continúe con el ensamble del kit

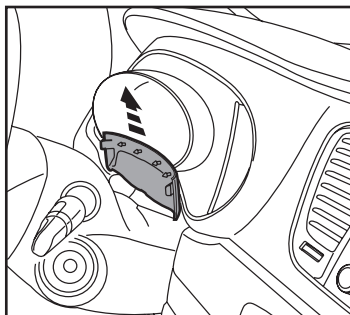

(Figura A)

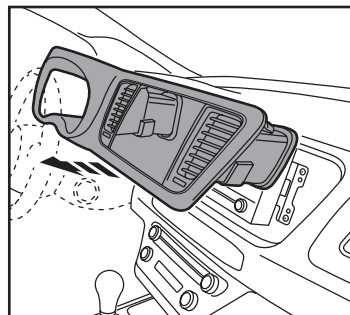

(Figura B)

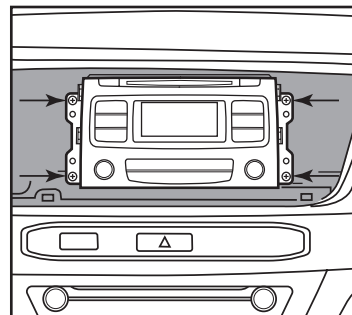


(Figura C)


Ensamble del kit

Provisión de radio ISO DIN con cavidad

1. Monte la cavidad en los soportes del radio con los cuatro tornillos Phillips #8 x 3/8" suministrados. (Figura A)
2. Quite la manga metálica "DIN" y el anillo de moldura del radio de mercado secundario.
3. Monte el conjunto del soporte/cavidad en el radio con los tornillos que vienen con el radio. (Figura B)
4. Enganche el panel de la moldura de la carcasa del radio en el bisel de la moldura de fábrica desde el lado de atrás del bisel. (Figura C)

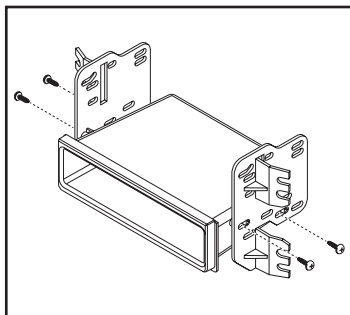


(Figura A)

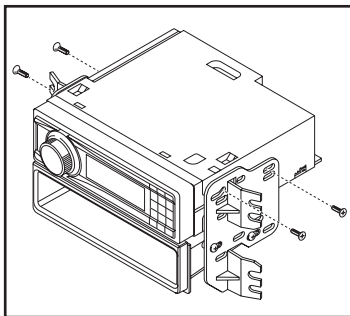

(Figura B)

5. Localice el arnés de cableado de fábrica y el conector de la antena en el tablero y haga todas las conexiones necesarias al radio. Metra recomienda que use adaptadores adecuados de acoplamiento de Metra y/o de AXCESS.
6. Después de conectar todo el cableado, monte el ensamblaje del radio nuevo en el tablero con los tornillos de fábrica y vuelva a armar el tablero al revés de como lo desarmó.

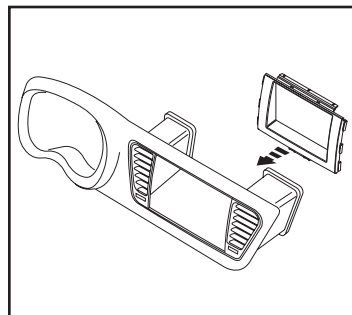

(Figura C)



INSTRUCCIONES DE INSTALACIÓN PARA LA PIEZA 99-7365B



REV. 5/21/2015 INST99-7365B



EL CONOCIMIENTO ES PODER

Mejore sus habilidades de instalación y fabricación inscribiéndose en la escuela de dispositivos electrónicos móviles más reconocida y respetada de nuestra industria. Regístrese en www.installerinstitute.com o llame al 800-354-6782 para obtener más información y avance hacia un futuro mejor.



Metra recomienda técnicos con certificación del Programa de Certificación en Electrónica Móvil (Mobile Electronics Certification Program, MECP).