



## INSTALLATION INSTRUCTIONS FOR PART 99-7514B

### APPLICATIONS MAZDA 3 2010-up

## 99-7514B


#### KIT FEATURES

- DIN Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Radio Provision
- Stacked ISO Mount Units Provision
- **Painted A Matte Black Finish**



#### KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate • D) Double DIN Brackets
- E) Double DIN Trim Plate • F) Pocket • G) (2) Radio Housing Brackets
- H) (2) #8X3/8" Phillips Screws • I) (4) Panel Clips

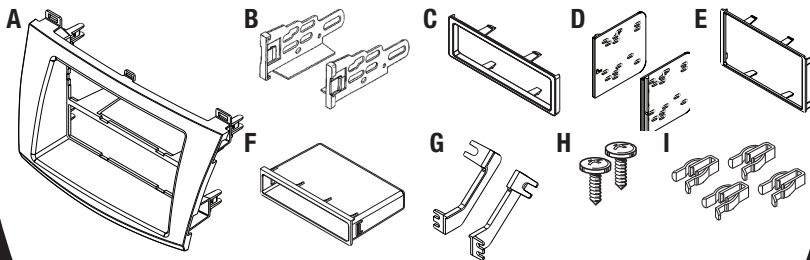

#### WIRING AND ANTENNA CONNECTIONS (Sold Separately)

- 70-7903 Mazda harness - 2001-up
- 40-HD10 -Honda antenna adapter - 2005-up

#### TOOLS REQUIRED:

Small Flat Blade Screwdriver • Panel Removal Tool  
Phillips Screwdriver



1-800-221-0932



[www.metraonline.com](http://www.metraonline.com)

© COPYRIGHT 2009 METRA ELECTRONICS CORPORATION



**99-7514B**

## **TABLE OF CONTENTS**

### **Dash Disassembly**

<b>- 2010-up Mazda 3 .....</b>	<b>1</b>
--------------------------------	----------

<b><u>Kit Preparation</u> .....</b>	<b>2</b>
-------------------------------------	----------

### **Kit Assembly**

<b>- DIN Mount Radio Provision with Pocket .....</b>	<b>3</b>
--	----------

<b>- ISO Mount Radio Provision with Pocket .....</b>	<b>4</b>
--	----------

<b>- Double DIN /Stacked ISO Mount Units Radio Provision .....</b>	<b>5</b>
--	----------

### **Note:**

**Refer also to the instructions included with the aftermarket radio.**



### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.






**Metra recommends MECP  
certified technicians**

## 2010-UP MAZDA 3

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the vent panel above the radio. (Figure A)
- 3 Remove (2) screws securing the factory radio. (Figure B)
- 4 Unclip and remove the factory radio. (Figure C)

*Continued to kit assembly.*

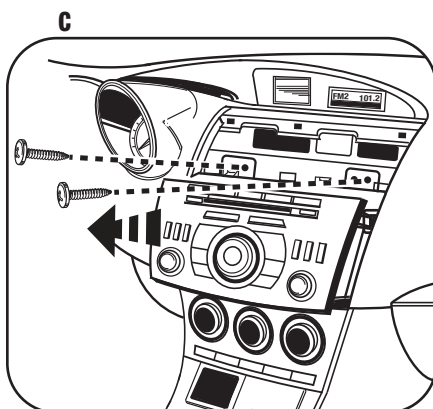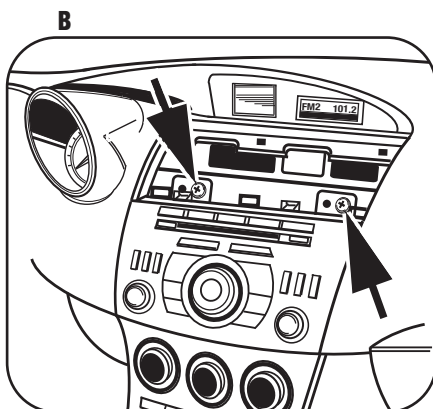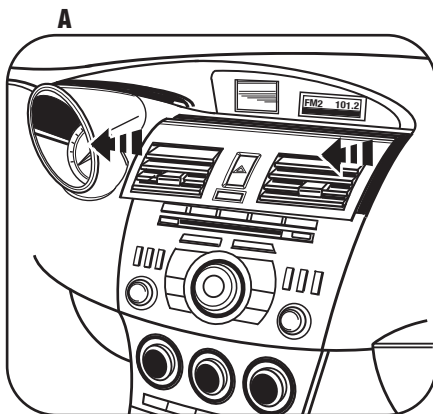




## 95-7514B KIT PREPARATION


### 2010-UP MAZDA 3

- 1 Attach the radio housing brackets to the radio housing using the provided (2) Phillips screws. (Figure A,B)
- 2 Attach the panel clips to the rear of the radio housing.

*Continue to kit assembly.*

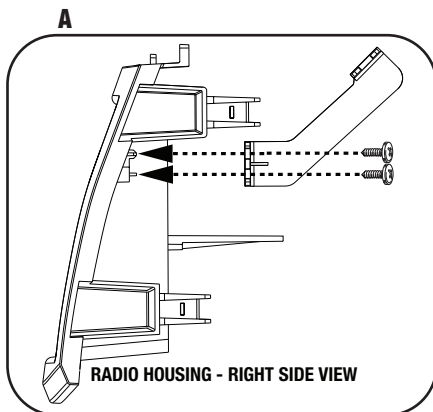

**BEFORE BRACKET ASSEMBLY**



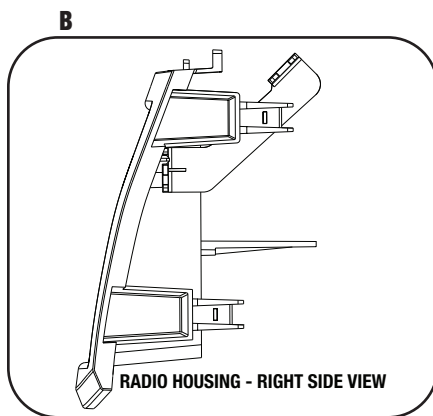


**AFTER BRACKET ASSEMBLY**

**DIN MOUNT RADIO PROVISION WITH POCKET**

***\*Note:** Refer also to the instructions included with the aftermarket radio.*

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.
- 2** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A)
- 3** Snap the pocket into the bottom opening of the radio housing. (Figure B)
- 4** Slide the aftermarket head unit into the cage and secure. (Figure C)
- 5** Reassemble dash in reverse order of disassembly.

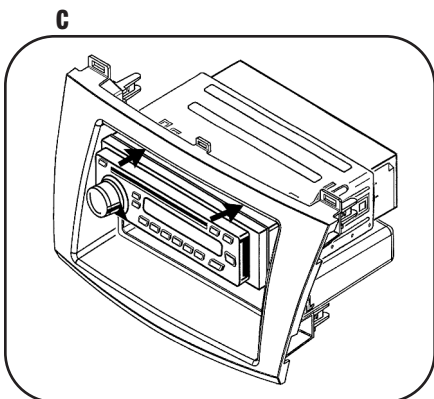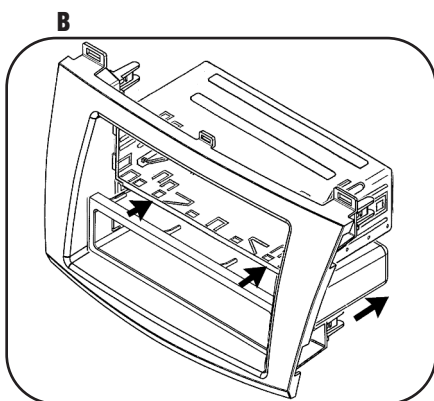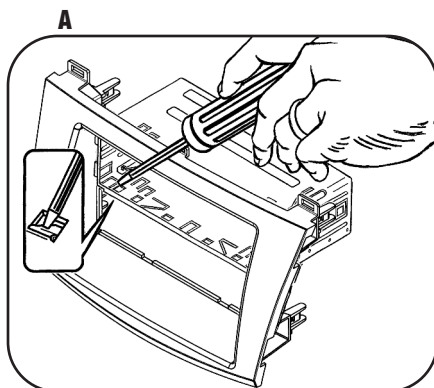


## ISO MOUNT RADIO PROVISION WITH POCKET


***\*Note: Refer also to the instructions included with the aftermarket radio.***

**1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.

**2** Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A)

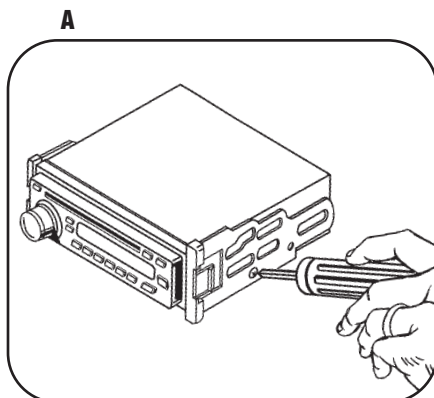


**3** Snap the pocket into the bottom opening of the radio housing. (Figure B)

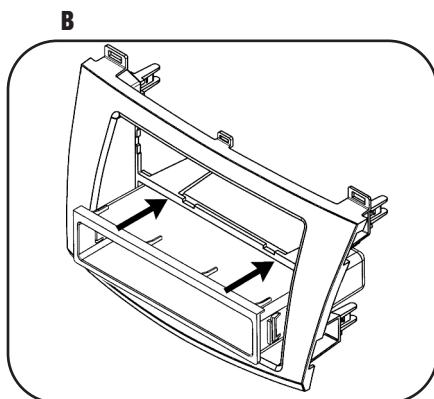

**4** Slide the head unit into the radio opening until the side clips engage. (Figure C)

**5** Snap the Trim plate into the Radio Housing. (Figure C)




**6** Reassemble dash in reverse order of disassembly.

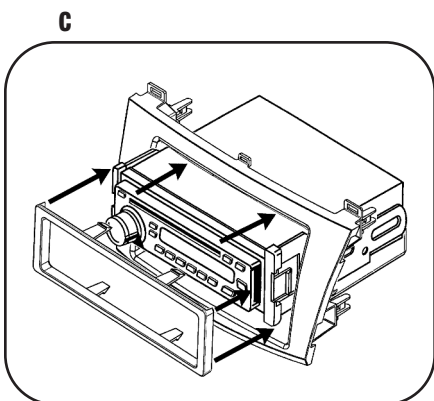

## **DOUBLE DIN/STACKED ISO MOUNT UNITS RADIO PROVISION**

*\*Note: Refer also to the instructions included with the aftermarket radio.*

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.
- 2** Cut and remove the center bar from the radio housing. (Figure A)
- 3** Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure B)
- 4** Slide the Double DIN head unit or stacked ISO head units into the bracket/radio housing assembly and secure the Double DIN head unit or stacked ISO head units to the assembly using the screws supplied with the radio. (Figure C)
- 5** Snap the Double DIN trim plate into the Radio Housing. (Figure C)
- 6** Reassemble dash in reverse order of disassembly.

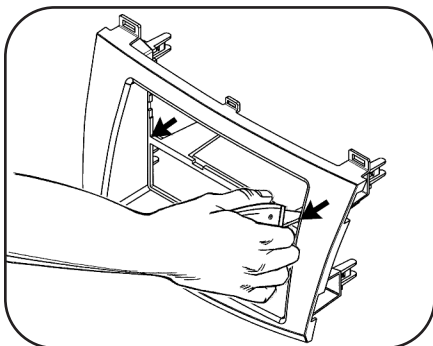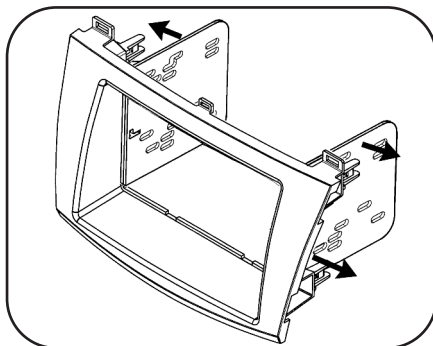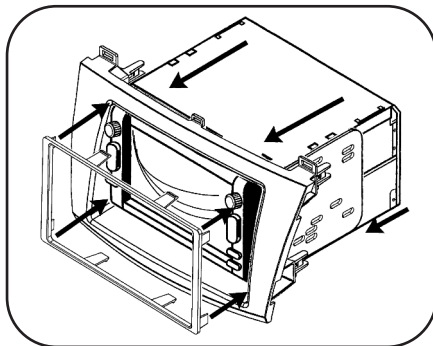**A****B****C**

## **99-7514B INSTRUCTIONS**



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

REV. 08/18/11 © COPYRIGHT 2009 METRA ELECTRONICS CORPORATION INST99-7514B