


Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (In MN): 952-941-2837 Fax: 952.949.9816 www.modernofficefurniture.com


Expandable Brown Cherry
Conference Tables

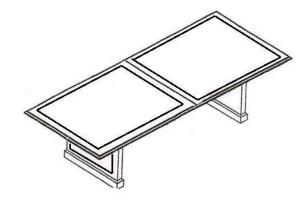

ASSEMBLY INSTRUCTIONS

PARTS LIST



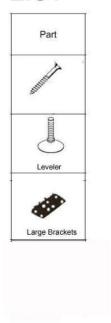


TIP: Assemble table in a carpeted area, near the place of use. Use cardboard for protection if no carpet available.

1




Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (In MN): 952-941-2837 Fax: 952-949-9816 www.modernofficefurniture.com


1.) Lay the table tops face down on the floor. Using the large flat brackets and screws, connect the table tops together.

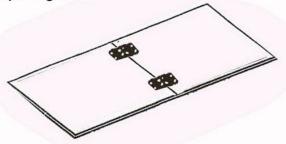

2.) Next, attach the table support to the table using the wooden dowels and cam locks and pins provided.

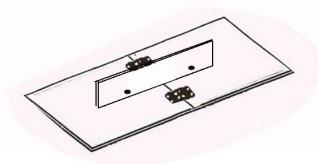


3.) Now you will attach the first table base. Locate the cam pin holes on the top of the base, as well as the round cam pin holes on the inside of the base towards the top. Insert cam pins into the table top and cam locks into the round cam holes, making sure to position the cam lock with the open end facing the cam pin hole. Next, insert the wooden dowels and cam pins into the base for the support. Fit base over the cam pins to connect the top and make sure dowels and pins enter the holes along the edge of that support. Turn all cam locks to secure.

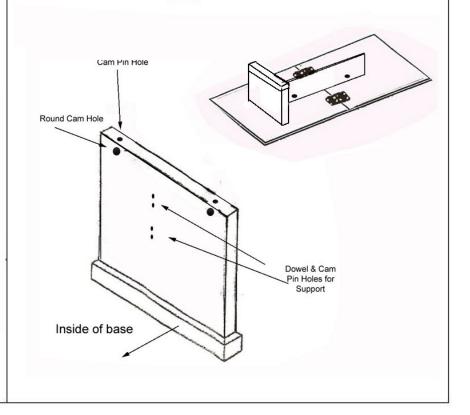



Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (In MN): 952-941-2837 Fax: 952.949.9816

4.) Repeat Step 3 for other table base.

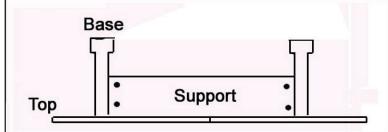

- 5.) Lastly, using 2-3 people, carefully turn table upright, making sure to support the bases of the table as it is being turned over.
- 6) Cover round cam locks with caps provided.

Care Instructions:

-Clean with damp, soft cloth. Use a mild detergent & water mix, such as Dawn or Palmolive if needed. -DO NOT USE waxed based products such as Pledge. Waxed bases products can leave a waxy residue on the surface.