


Glass Front Desk

MJ/FL/ML/WH Bowtop+Glass/
RTPED / LFTPED

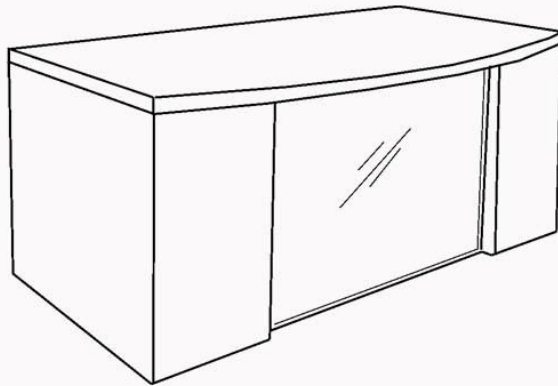


ASSEMBLY INSTRUCTIONS

PARTS LIST

Part	Part
 Wood Dowel	 Cap
 Cam Pin	 Leveling Glide
 Cam Lock	 Grommet
 Screw	


Assemble on a smooth, carpeted floor to prevent scratches or damage.
Assembly will require 2 people for safety.

If assembling executive desk:

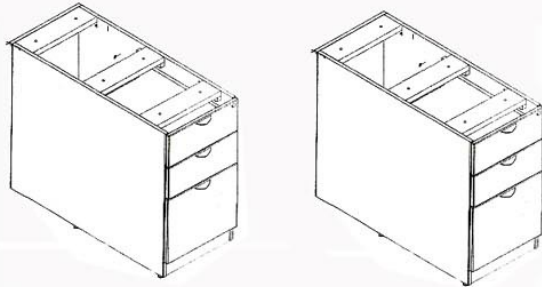

Step 1: Attach leveling glides and drawer pulls to pedestals

If assembling an L or U Desk

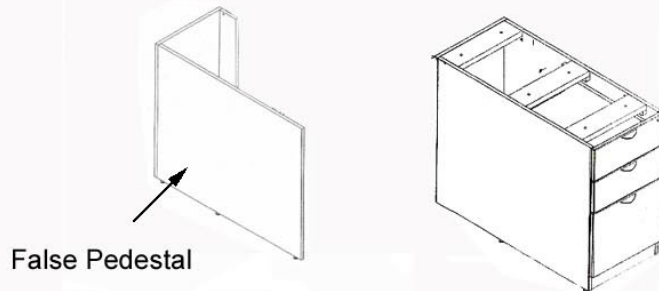


False Pedestal

Step 1: Assemble false pedestal using cam locks and pins provided. Then attach drawer pulls and leveling glides to pedestal. Attach leveling glides to false pedestal as well.


If assembling executive desk:

Step 2: Place pedestals so that the predrilled holes along the side face each other. Attach glass panels using round head screws provided. Reach into the open area behind the drawers inside the file to insert the screws through the side of the file into the glass panels. Bring the pedestals in as close as possible for a tight fit. Glass Panel will have threaded holes to receive the screws.

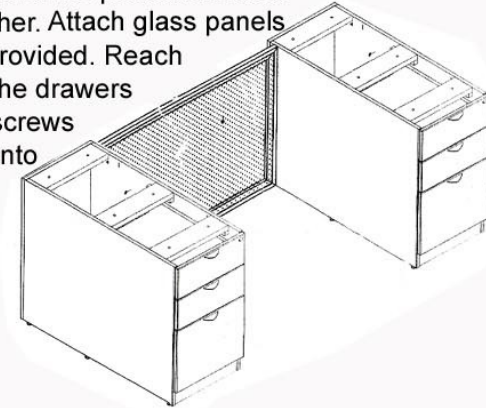


If assembling an L or U Desk

Step 2: Same procedure except one side will be the false pedestal and the other side is the file. False pedestal attaches using same screws as pedestal.

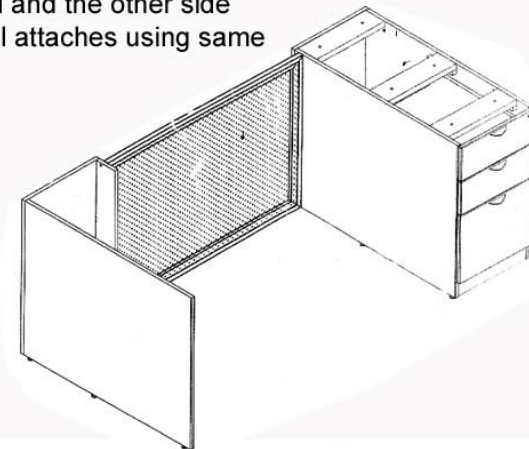

Step 3: Attach desktop to pedetals using cam pins, cam locks and wooden dowels provided.

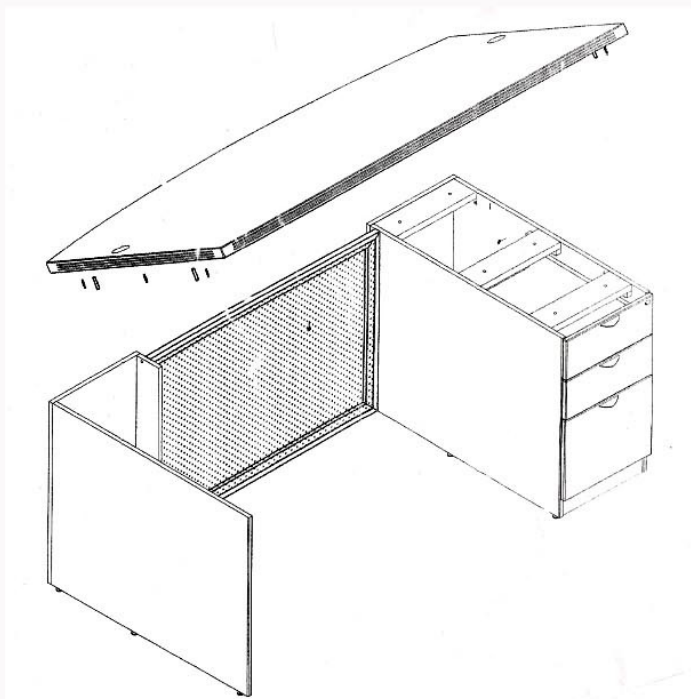

Step 4: Attach file pedestal(s) to desktop using the 6 bolts provided.

Step 5: Insert grommets.