



Y10342 - Ergonomic Chair with Slotted Backrest





Step 1: Attach (F) Armrests onto (E) seat cushion with six (J) screws and six (L) washers. Use (M) allen wrench to screw into seat.

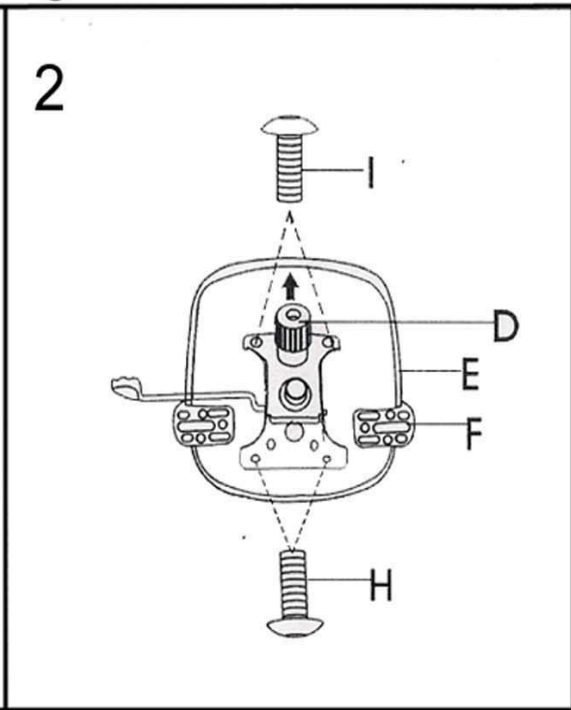


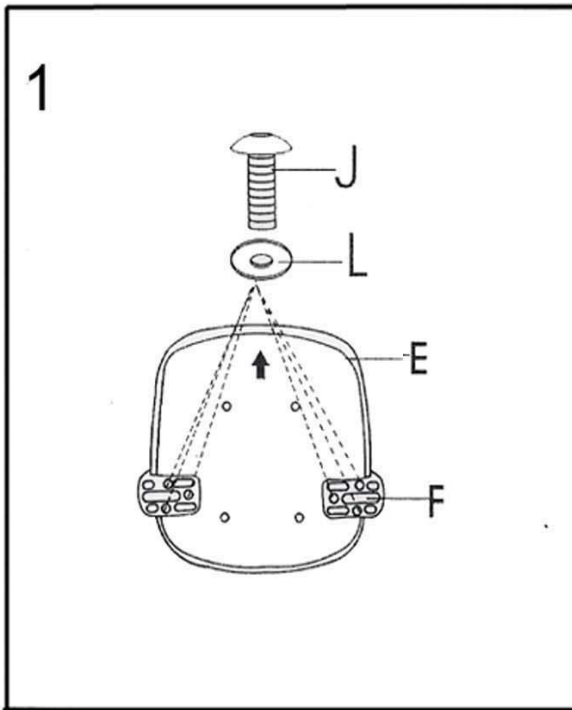


Step 2: Next, attach the (D) mechanism to the (E) seat using two (I) and two (H) screws.

Step 3: Attach the (G) backrest by laying the backrest bracket over the (D) mechanism and aligning the holes. Screw in four (K) screws and four (J) washers.

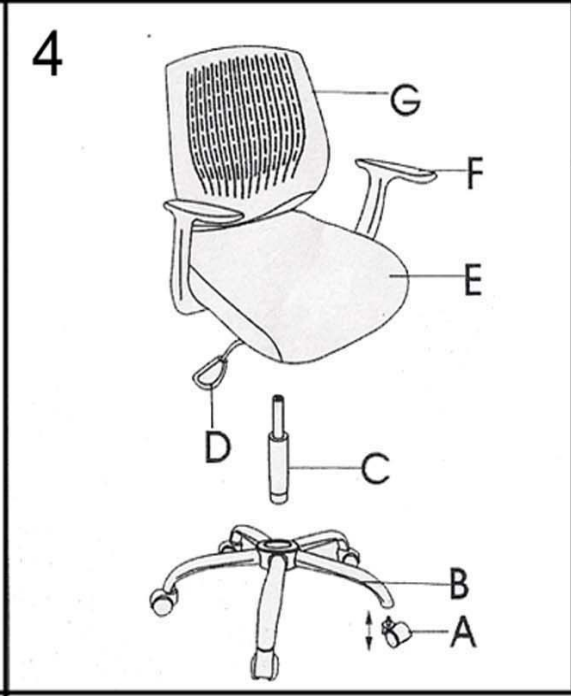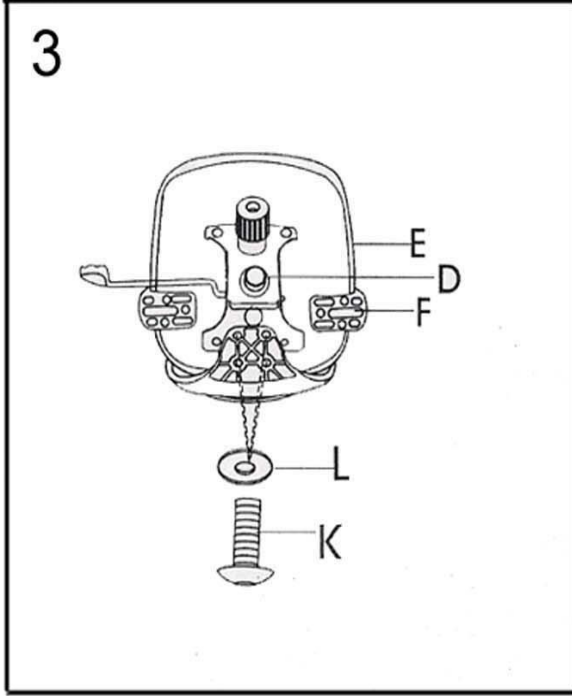Step 4: Assemble lower half of chair by hand. Snap (A) casters into (B) base. Then set (C) gas lift into (B) base.

Step 5: Hold the upper chair assembly by hand and fit hole in (D) mechanism over top of (C) gas lift. Press down, the carefully sit to pressure fit.



- | | |
|---|--|
| 
M6*20MM/2PCS | 
M6*25MM/2PCS |
| 
M6*35MM /6PCS | 
M6*40MM /4PCS |
| 
6*18*1MM/10PCS | 
M5/1PC |

Questions? Please call 1-800-443-5117.
Customer Service available 8:30 - 5:00 Central Time, Monday - Friday