

Modern Office 6900 Shady Oak Road, Ste 120 Eden Prairie, MN 55344 Phone: 800.443.5117 (in MN): 952-941-2837 Fax: 952.949.9816


White Mobile Pedestal

WH2048



Install Instructions

PARTS LIST

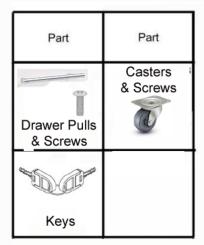

- 1.) Turn file upside to to attach the 4 casters. Each caster has 4 screws to attach the plate to the underside of the file.
- 2.) Next, attach the two drawer pulls using the 2 screws each, provided.