


## Reversible Desk Return Assembly Instructions

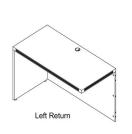



## Applies to: BK/FL/MJ/ML/WH2045

## List of Hardware:

Part	Part	Part
Wood Dowel	Shallow Cover	Worksurface Bracket
Cam Pin	Deep Cover	Side Panel Brackets (2)
Cam Lock	Grommet	M6 Screw
Wood Screw	Gionnet	Leveling Glide


## **Tools Needed:**

- -Phillips Screwdriver
- -Power Screwdriver
- -A Helper

- 1.) Assemble on carpet or cardboard to protect parts during assembly. Assembly will require 2 people for safety.
- 2.) Determine if the return will be left or right handed (see diagram next page). Locate Side Panel & End Panel and arrange like shown in drawing. Insert leveling glides, then insert all cam pins, cam locks and wood dowels. Then connect the panels by inserting the dowels into the holes on opposite panel and inserting cam pins into cam locks (see diagram). Then, twist the cam locks with a Phillips Screwdriver to secure connection.
- 3.) Next, locate the Desktop and insert hardware. Then, set the desktop on the lower assembly and twist cams to securely connect.

Special Note:

Location & number of cam pin, cam lock and dowel holes may vary.

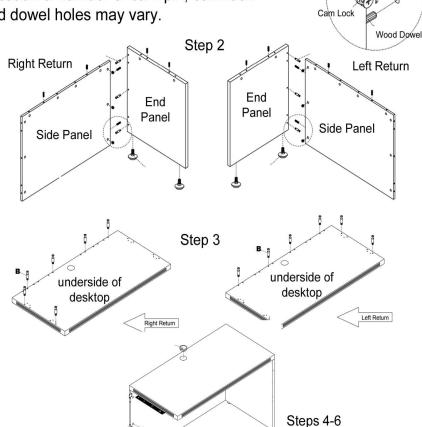

Cam Pin

- 4.) Now it's time to attach the return to your desk. Locate the large flat bracket and M6 machine screws (it may be attached to the desktop already. If not, center the bracket over the edge and install 4 of the screws). With a helper, have one person hold the return desk stable while the other screws the machine screws into the desk.
- 5.) Once installed & leveled, use the wood screws to install the offset side panel brackets. This will further secure the side panel, but is an optional step. A power screwdriver is helpful.
- 6.) Lastly, insert the grommet into the desktop and use the caps provided to cover the cam locks.

Questions? Please call 1-800-443-5117. Customer Service available 8:30 - 5:00 Central Time, Monday - Friday