

Mounting Instructions for 63"W & 71"W Acrylic Dividers Y11135, Y11136, Y11137 & Y11138 (ACM1600, ACM1800, CLIP1 and CLIP2)



Single Sided Bracket
(CLIP1)



Double Sided Bracket
(CLIP2)

Hardware Included:

- Allen Wrench

1.) Each panel will need two clips. Move leveling screw to the hole closest to the square edge of the clip like shown below. Attach the clips to each panel BEFORE you attach the clips to the desktop.




IMPORTANT: If Clip Bracket is mounted to desktop first, the clamp portion for the panel will not tighten because of friction between the desktop and the sliding bracket.

2.) For best spacing and stability, attach brackets 1/4 of length from ends of panel. For 63" panels, this would be approx. 16" from panel ends. For 71" panels, this would be approximately 18" from panel ends.

3.) When using CLIP2/Double Sided Brackets between desktops, it is important to tighten the clamps to the desktops evenly so that the panel stands perfectly upright. If bracket to one desk is tightened more than the opposing bracket, the bracket and panel may lean slightly to that side.

4.) Once clips are installed on the desktop, tighten with allen wrench.

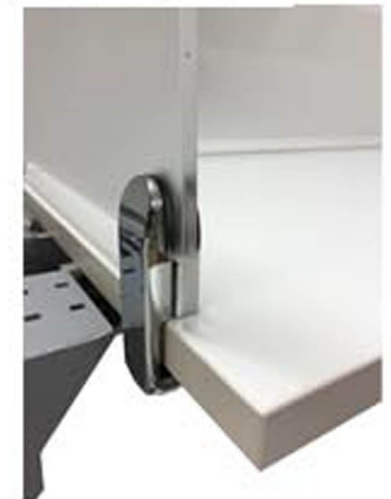

Finished View of CLIP1

Questions? Please call 1-800-443-5117.

Customer Service available 8:30 - 5:00 Central Time, Monday - Friday