


## Y13018 - Countertop Sneeze Guard

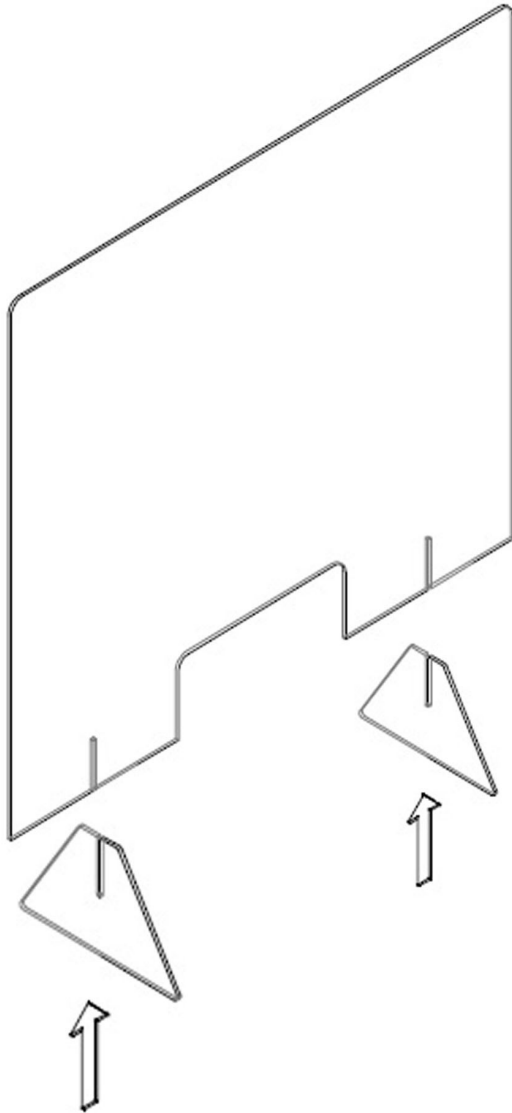

Step 1.) Insert Wedge Feet  
into Shield by hand.

