



Modern Office
6900 Shady Oak Road, Ste 120
Eden Prairie, MN 55344
Phone: 800.443.5117
(In MN): 952.941.2837
Fax: 952.949.9816
www.modernofficefurniture.com

Y9708 48" Round Traditional Dark Cherry Table



ASSEMBLY INSTRUCTIONS

Step 1

Lay table top upside down on carpet or cardboard for protection during assembly. Attach square piece to main post/support using screws provided.




Step 2

Attach square piece/main support to underside of table top using wood screws provided.



Step 3:

Attach 4 legs with screws provided

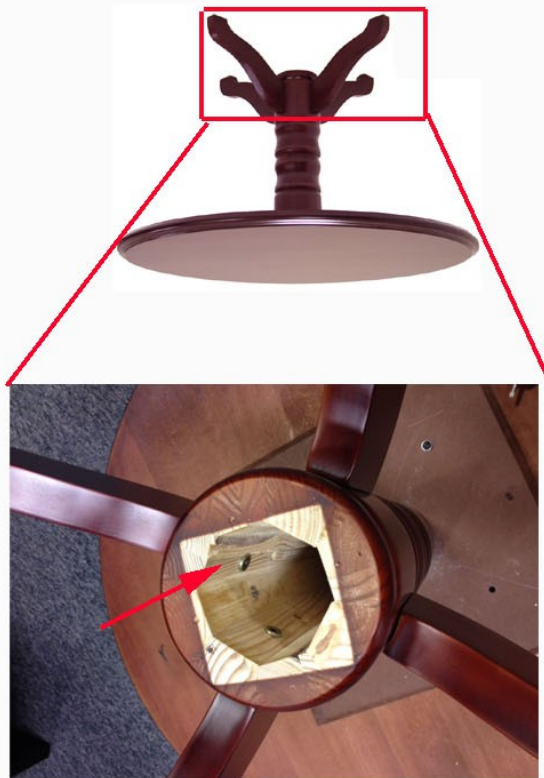

Step 4:

Carefully, turn table upright.

